



INDEX

501-E01	CYLINDER, HEAD A	汽缸頭蓋
501-E02	PISTON/CRANKSHAFT	活塞/曲軸
501-E03	INTAKE/EXHAUST	進/排氣
501-E04	WATER PUMP	水泵
501-E05	OIL PUMP	機油泵
501-E06	OIL SYSTEM	機油濾清系統
501-E07	CARBURETOR	化油器
501-E08	CRANKCASE	曲軸箱
501-E09	MAGNETO	磁電機
501-E10	LEFT CRANKCASE COVER	左曲軸箱蓋
501-E11	SPROCKET	鏈輪
501-E12	CLUTCH	離合器 2
501-E13	CLUTCH	離合器 1
501-E14	STARTING MOTOR	磁電機
501-F01	AIR CLEANER & OIL	空氣濾清器 & 副機油箱
501-F02A	MUFFLER	排氣管(EU 2)
501-F03	FRAME BODY	車架總成
501-F04	ARM	三角架
501-F04A	ARM	三角架 (前避震器 -氮氣)
501-F05	BODY COVER, SEAT	車體蓋/座墊
501-F06	FUEL TANK	油箱
501-F07	SWING ARM SUB A	後叉總成
501-F07A	SWING ARM SUB	後叉總成 (後避震器 -氮氣)
501-F08	WHEEL FRONT & R (22*7-10/20*11-9)	前/後輪(EU 2)
501-F08A	WHEEL FRONT & R 22*7-10/20	前/後輪(EU 2)
501-F08B	WHEEL FRONT & R 22*7-10/2011-9	前/後輪(EU 2)
501-F09	BRAKE CALIPER	剎車卡鉗
501-F10A	BRAKE SYSTEM	剎車油路系統(EU 2)
501-F11A	HANDLE BAR	手把(EU 2)
501-F13A	STEERING	轉向系統(EU 2)
501-F14A	BATTERY & MAIN	電瓶& 主配線(EU 2)
501-F15A	SIGNAL LIGHT, T	方向燈/後燈(EU 2)
501-F16A	STICKER	貼紙(歐規)
501-F18	COOLING SYSTEM	冷卻系統
501-AC	ACCESSORY	配件(車架/三腳架護板)
501-C02	ACCESSORY	配件



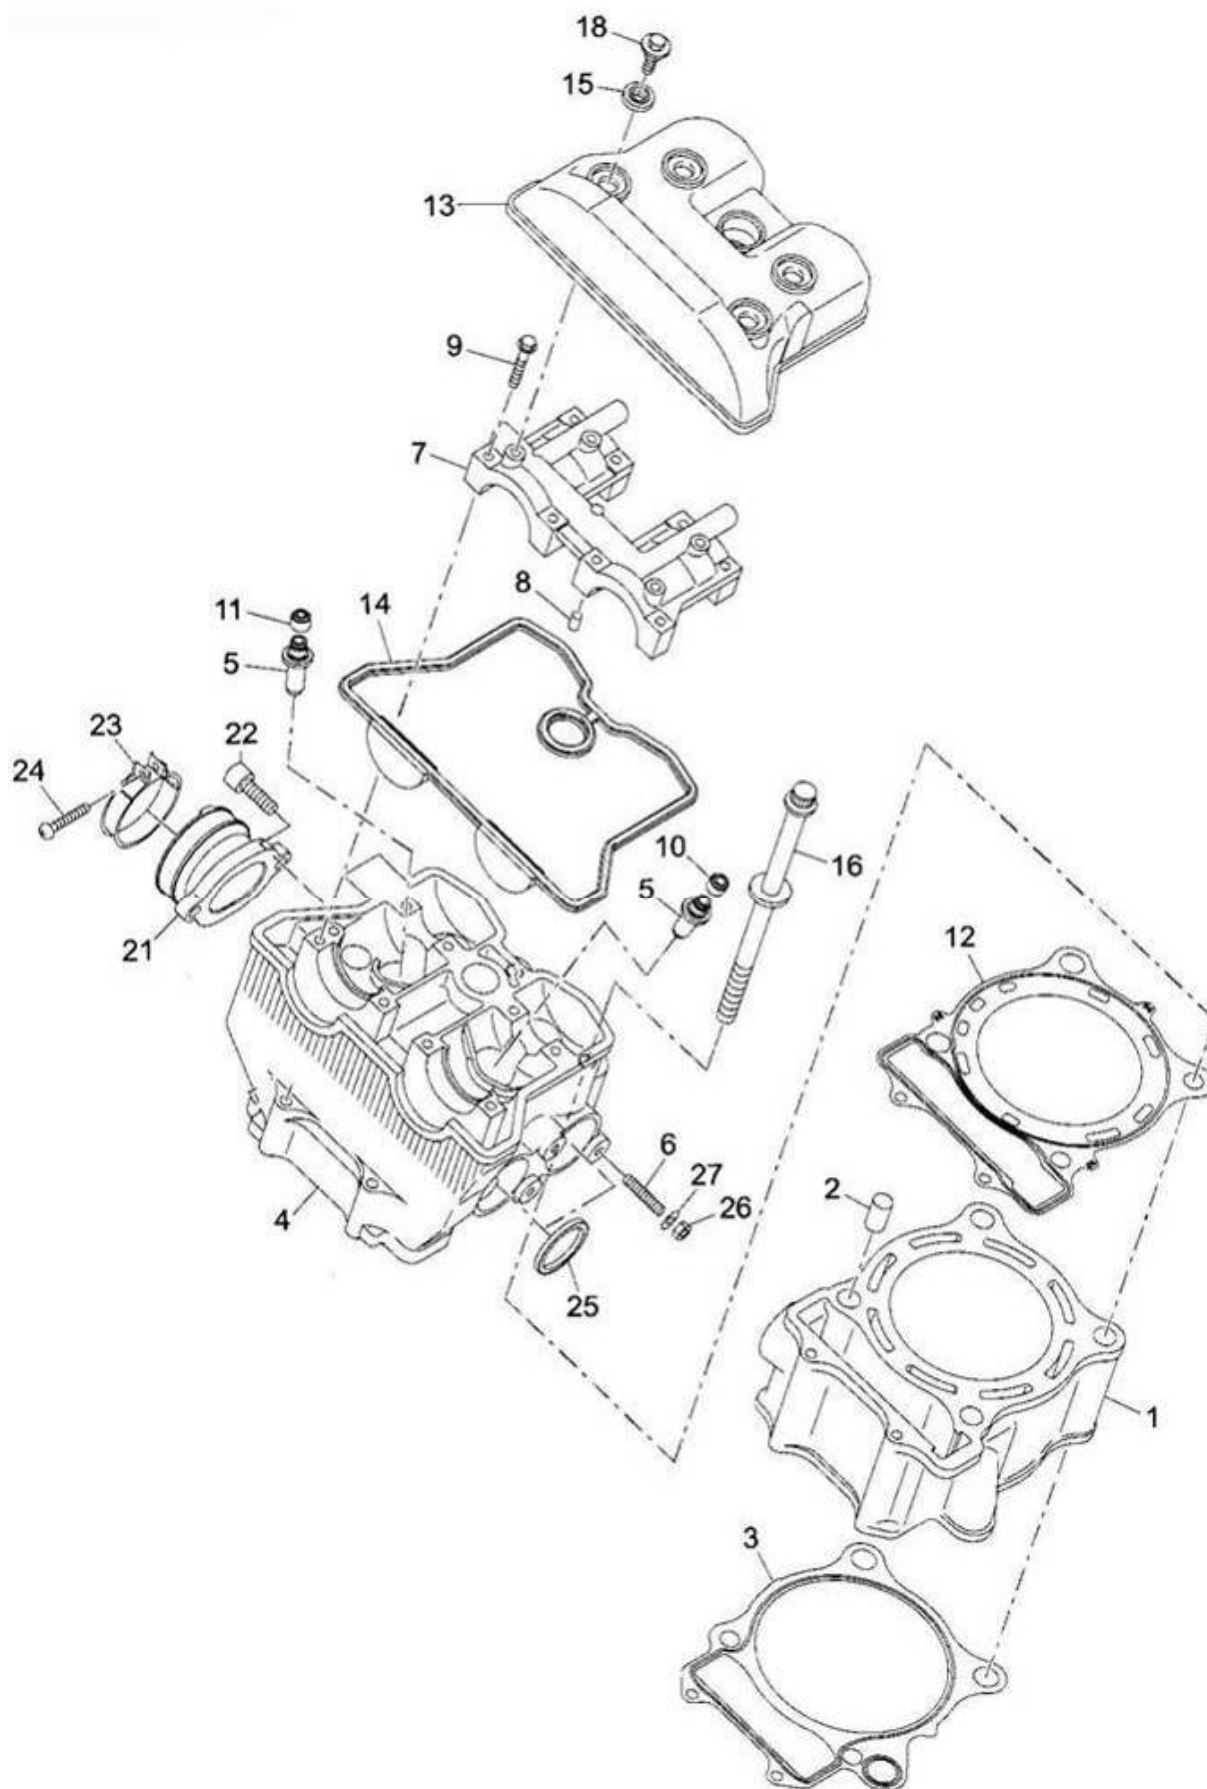

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	283-12401-11	1	CYLINDER	汽缸 (12101-501-000)
2	031-51500-10	2	DOWEL PIN	定位銷(94301-15180)
3	283-15201-13	1	CYLINDER GASKET	汽缸墊片 (12191-501-000)
4	283-13003-10	1	CYLINDER HEAD	汽缸頭 (12201-501-000)
5	283-14202-03	4	VALVE GUIDE	閥門導管 (12204-501-000)
6	010-50804-01	4	STUD BOLT	雙頭螺栓(91001-08040)
8	980-40081-10	2	DOWEL PIN	定位梢 (94301-08100)
9	96000-06040-08B	8	HEX FLANGE BOLT	六角緣面螺栓(白)
10	283-16001-03	2	SEAL INTAKE VALVE	汽門桿油封(進)(12209-501-000)
11	283-15901-03	2	SEAL VALVE	汽門桿油封(排)(12208-501-000)
12	283-15102-11	1	CYLINDER HEAD GASKET	汽缸頭墊片 (12551-501-000)
13	283-36301-03	1	CYLINDER HEAD COVER	汽缸頭蓋 (12310-501-000)
14	283-36101-13	1	CYLINDER HEAD COVER GASKET	汽缸頭蓋墊片 (12391-501-000)
15	283-36001-03	4	RUBBER WASHER	橡膠墊圈(94102-1019050)
16	283-16201-03	4	BOLT AND WASHER ASSY	六角緣面附墊圈(96011-11198Z)
18	283-36201-13	4	LADDER BOLT	六角緣面台階螺栓(90111-06022)
21	283-65001-01	1	INTAKE MANIFOLD	進氣歧管 (17100-501-000)
22	91000-08020K	2	HEX SOCKET BOLT	六角承窩螺栓(黑)
23	283-65901-00	1	CARBURETOR CLIP	進氣管夾 (14111-501-000)
24	93500-04030	1	HEX PHILLIPS BOLT	十字圓頭螺栓
25	283-36901-01	2	EXHAUST PIPE GASKET	排氣管墊片 (18291-501-000)
26	017-20800-20	4	HEX NUT	六角螺帽(94001-08000CP)
27	94111-0814020	4	SPRING WASHER	彈簧墊圈(鍍鉻)

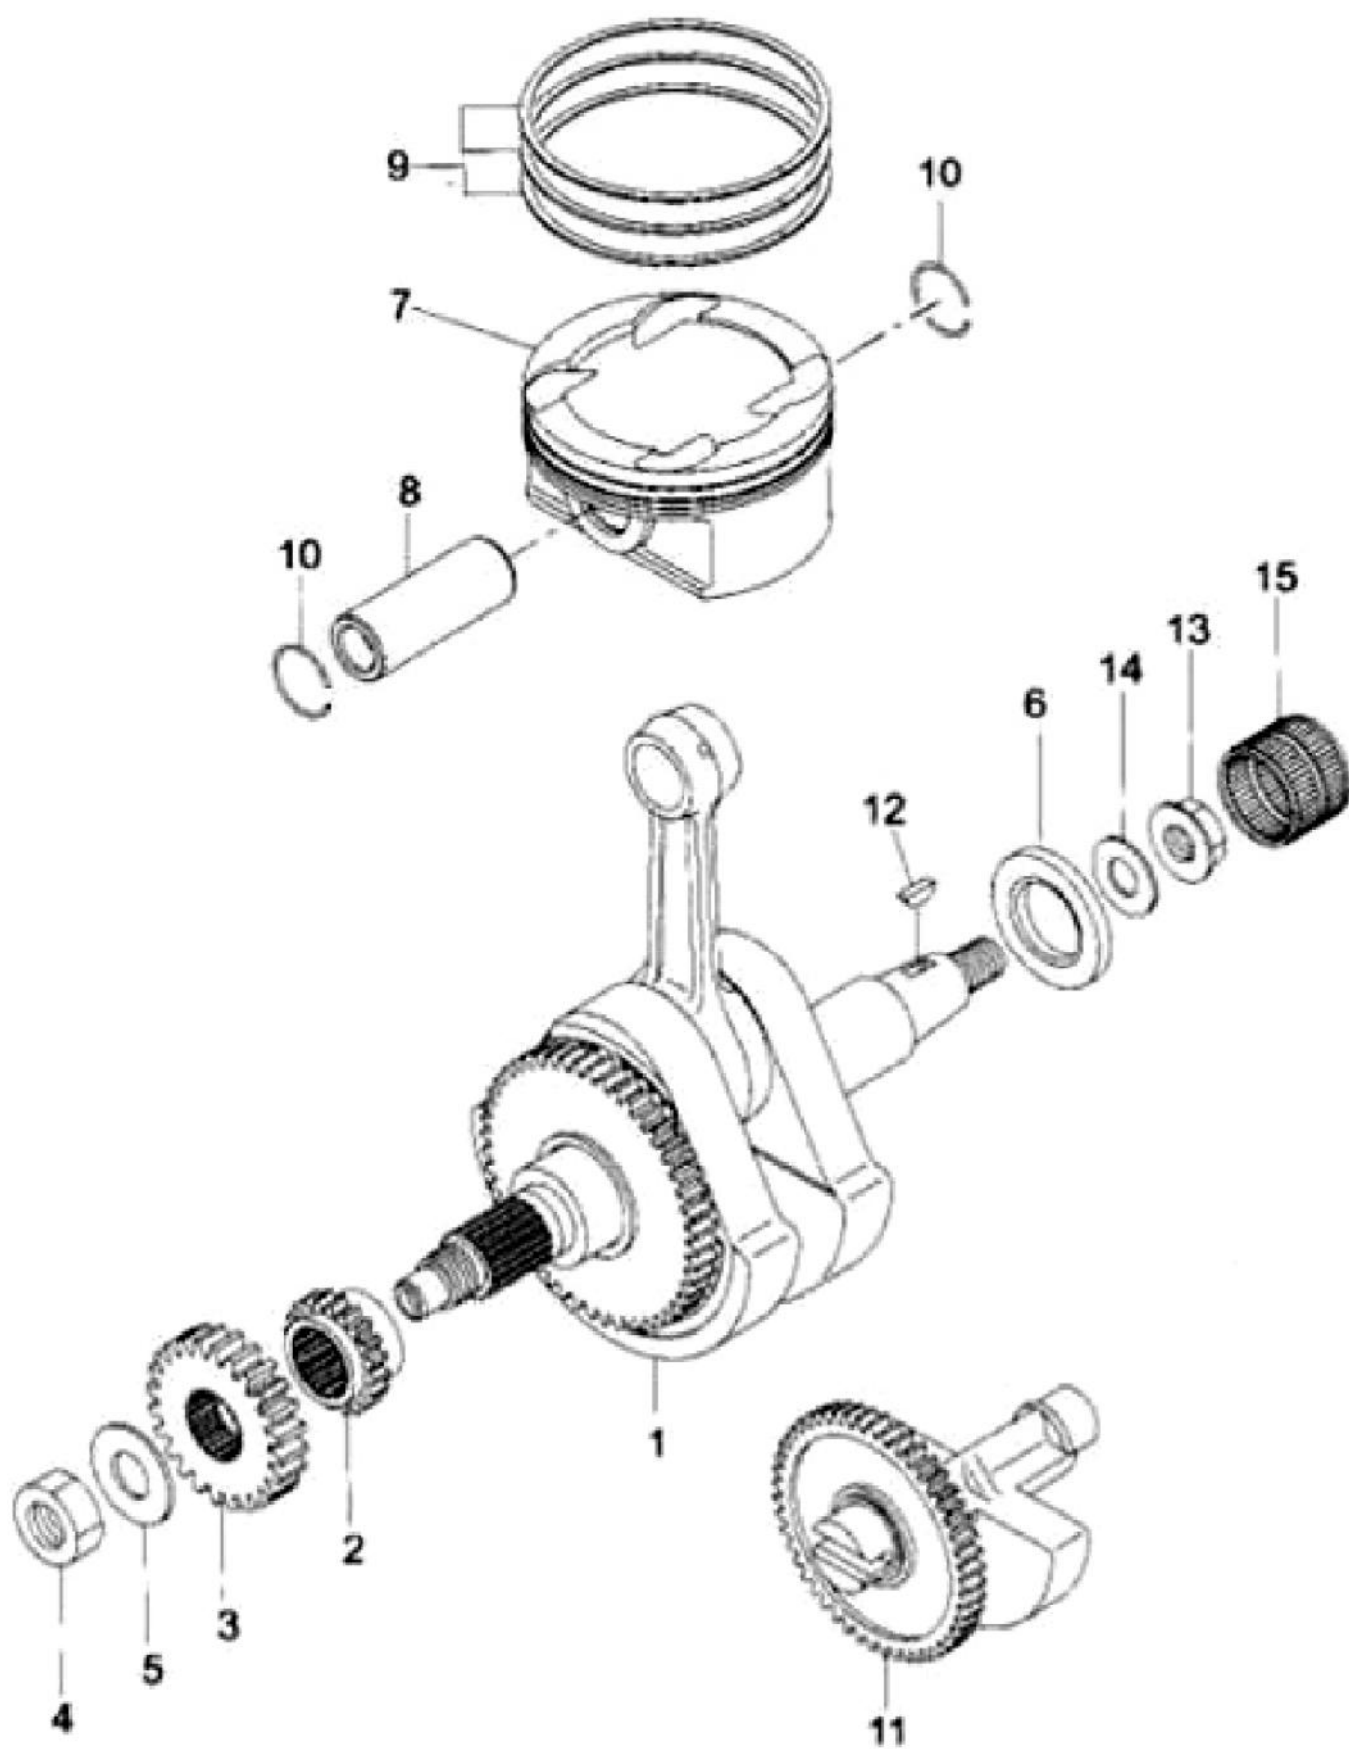


組件 編號：501-E02

活塞/曲軸 PISTON/CRANK SHAFT

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	283-20301-00	1	CRANK SHAFT ASS'Y	曲軸總成 (13000-501-000)	
2	283-35202-03	1	TIMING SPROCKET	時規齒輪 (14311-501-000)	
3	283-25003-03	1	PRIMARY DRIVE GEAR	原始驅動齒輪 (23121-501-000)	
4	017-01800-50	1	HEX NUT	六角螺帽(94001-18090)	
5	020-01800-40	1	PLANE WASHER	平面墊圈(94101-1933030)	
6	283-26001-13	1	SPACER	軸環(96401-3155085)	
7	283-23403-07	1	PISTON	活塞 (13100-501-000)	
8	283-23302-03	1	PISTON PIN	活塞梢 (13111-501-000)	
9	283-23501-17	1	PISTON RING SET	活塞環組 (13011-501-000)	
10	056-52300-20	2	CLIP PISTON PIN	活塞銷夾環 (13115-501-000)	
11	283-24105-01	1	BALANCER SHAFT	平衡軸 (13421-501-000)	
12	032-30400-70	1	SEMICYCLE KEY	半圓鍵 (90471-501-000)	
13	94050-14000C	1	HEX FLANGE NUT WITH SERRATION	X 六角緣面螺帽(五彩)	
14	020-01400-30	1	PLAIN WASHER	平面墊圈(94101-1430045B)	
15	283-76201-03	1	SPRAG CLUTCH	滾針軸承(96200-303526)	
=====				=====	

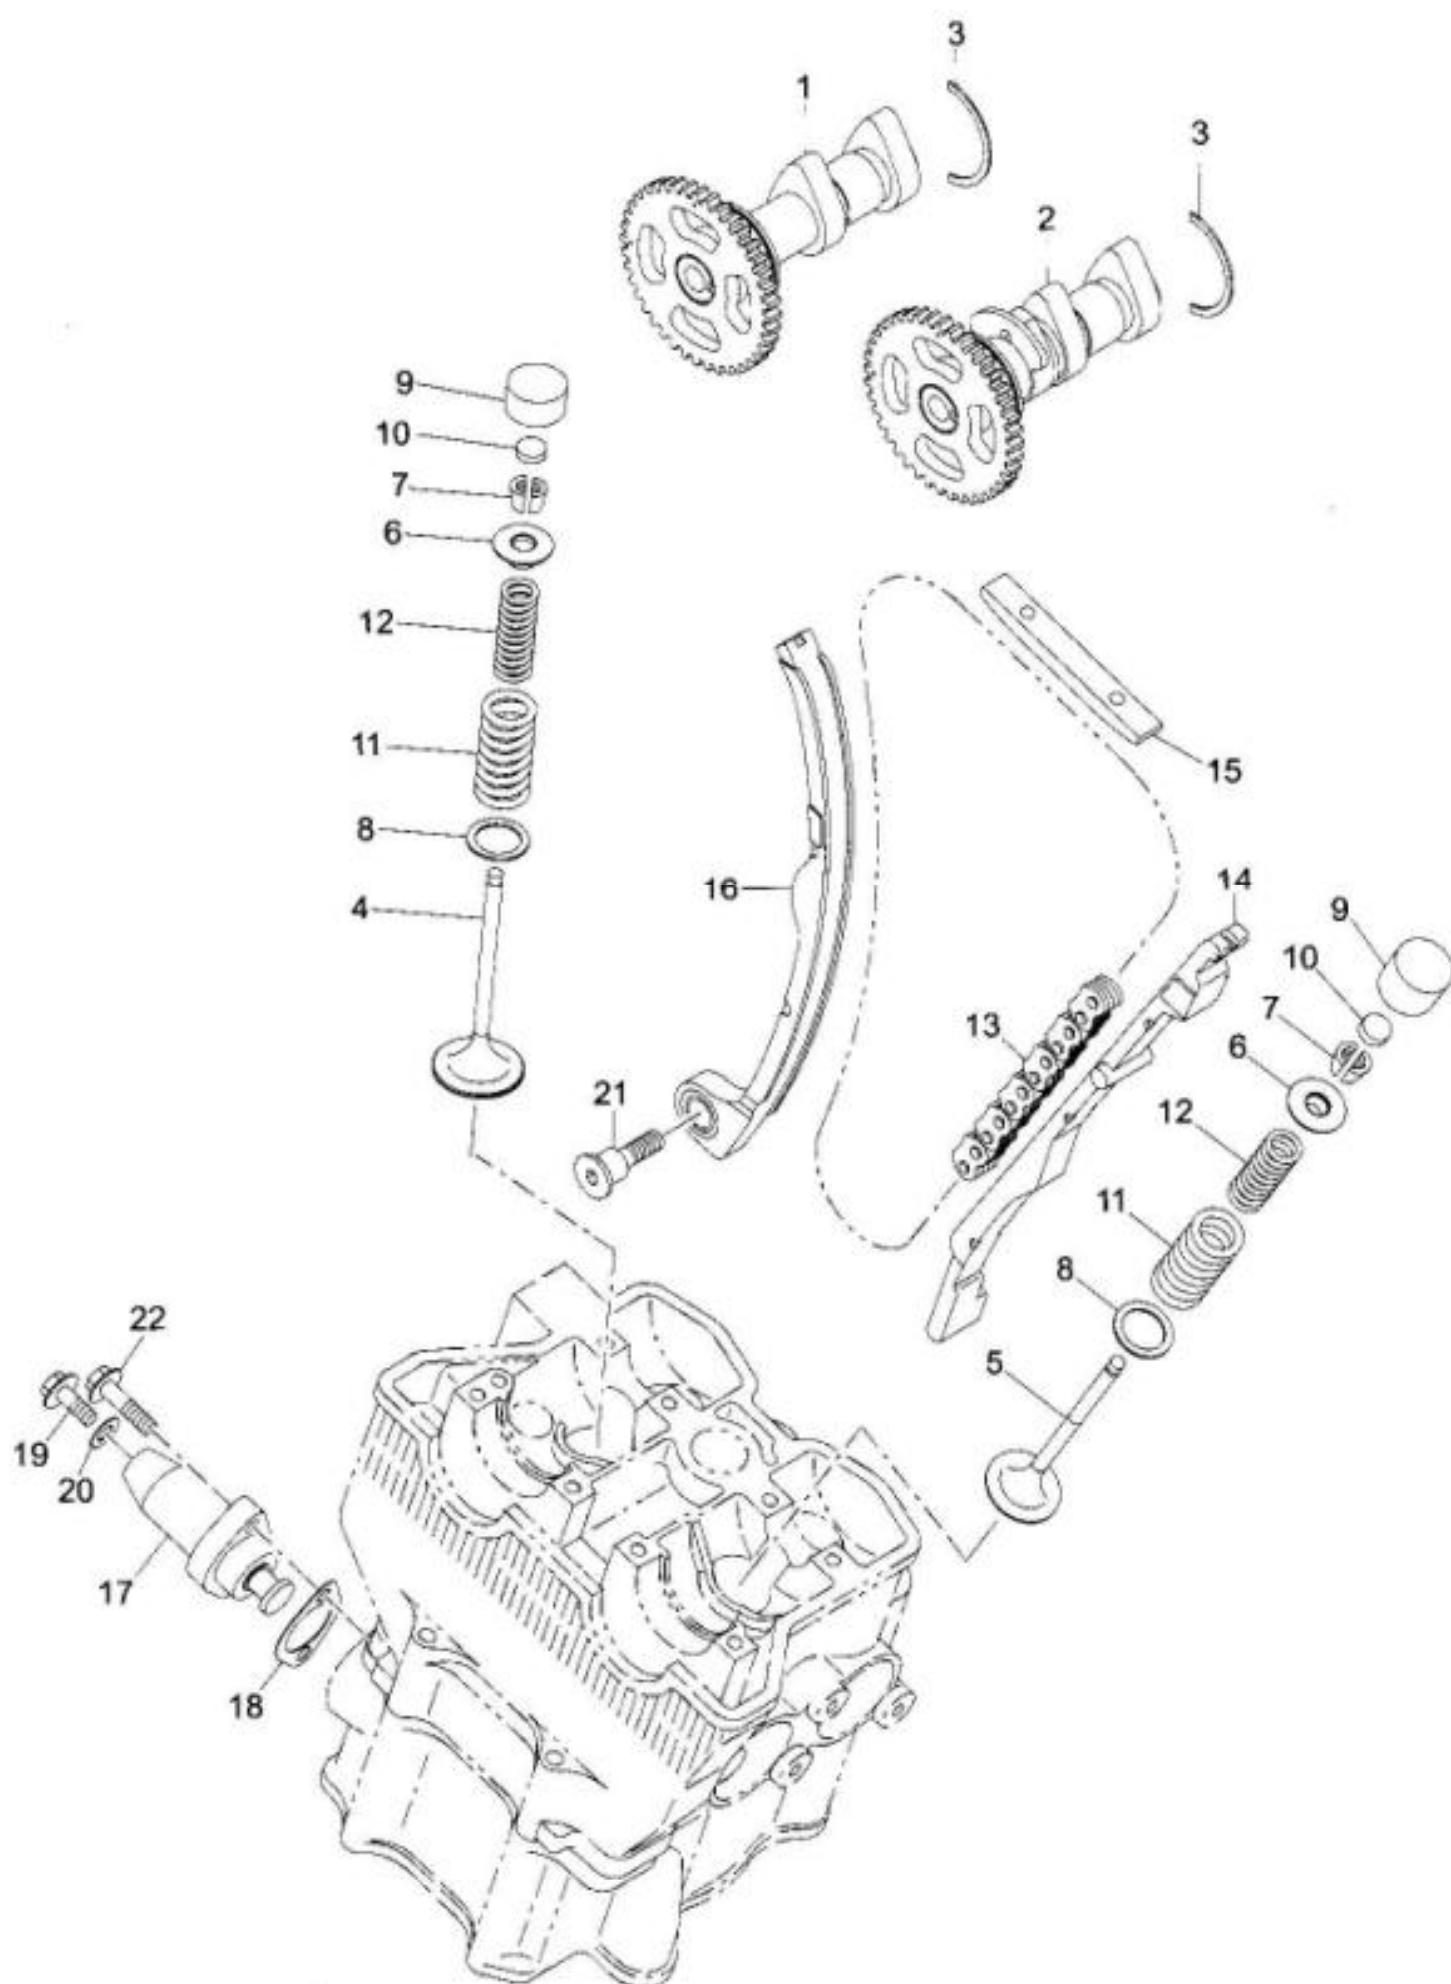


組件 編號：501-E03

進排氣 INTAKE/EXHAUST

[TOP](#)

Item	Parts No.	Qt'y	Parts Name
項次	部 品 番 號	用 量	零 件 名 稱

1	283-31601-11	1	CAMSHAFT (IN)COMP	進凸輪軸(14100-501-000)
2	283-31602-21	1	CAMSHAFT (EX)COMP	排凸輪軸(14200-501-000)
3	283-35601-03	2	STOPPER PLATE	凸輪軸固定片 (14456-501-000)
4	283-33401-13	2	IN. VALVE	進氣閥 (14711-501-000)
5	283-33502-03	2	EXKAUST VALVE	排氣門閥 (14721-501-000)
6	283-33701-03	4	VALVE SPRING RETAINER	門閥彈簧座 (14771-501-000)
7	132-10AA0-20	8	VALVE COTTER	門閥梢 (14781-501-000)
8	283-35701-03	4	VALVE SEAT	門閥座 (14715-501-000)
9	283-35801-03	4	VALVE LIFTER	門閥帽蓋(14731-501-000)
10	283-35901-03	4	ADJSTING PAD	調整片 (14741-501-00A)
	283-35902-03	4	ADJSTING PAD	調整片 (14741-501-00B)
	283-35903-03	4	ADJSTING PAD	調整片 (14741-501-00C)
	283-35904-03	4	ADJSTING PAD	調整片 (14741-501-00D)
	283-35905-03	4	ADJSTING PAD	調整片 (14741-501-00E)
	283-35906-03	4	ADJSTING PAD	調整片 (14741-501-00F)
	283-35907-03	4	ADJSTING PAD	調整片 (14741-501-00G)
	283-35908-03	4	ADJSTING PAD	調整片 (14741-501-00H)
	283-35909-03	4	ADJSTING PAD	調整片 (14741-501-00I)
	283-35910-03	4	ADJSTING PAD	調整片 (14741-501-00J)
	283-35911-03	4	ADJSTING PAD	調整片 (14741-501-00K)
	283-35912-03	4	ADJSTING PAD	調整片 (14741-501-00L)
	283-35913-03	4	ADJSTING PAD	調整片 (14741-501-00M)
	283-35914-03	4	ADJSTING PAD	調整片 (14741-501-00N)
	283-35915-03	4	ADJSTING PAD	調整片 (14741-501-00O)
	283-35916-03	4	ADJSTING PAD	調整片 (14741-501-00P)
	283-35917-03	4	ADJSTING PAD	調整片 (14741-501-00Q)
	283-35918-03	4	ADJSTING PAD	調整片 (14741-501-00R)
	283-35919-03	4	ADJSTING PAD	調整片 (14741-501-00S)
	283-35920-03	4	ADJSTING PAD	調整片 (14741-501-00T)
	283-35921-03	4	ADJSTING PAD	調整片 (23601-501-000)

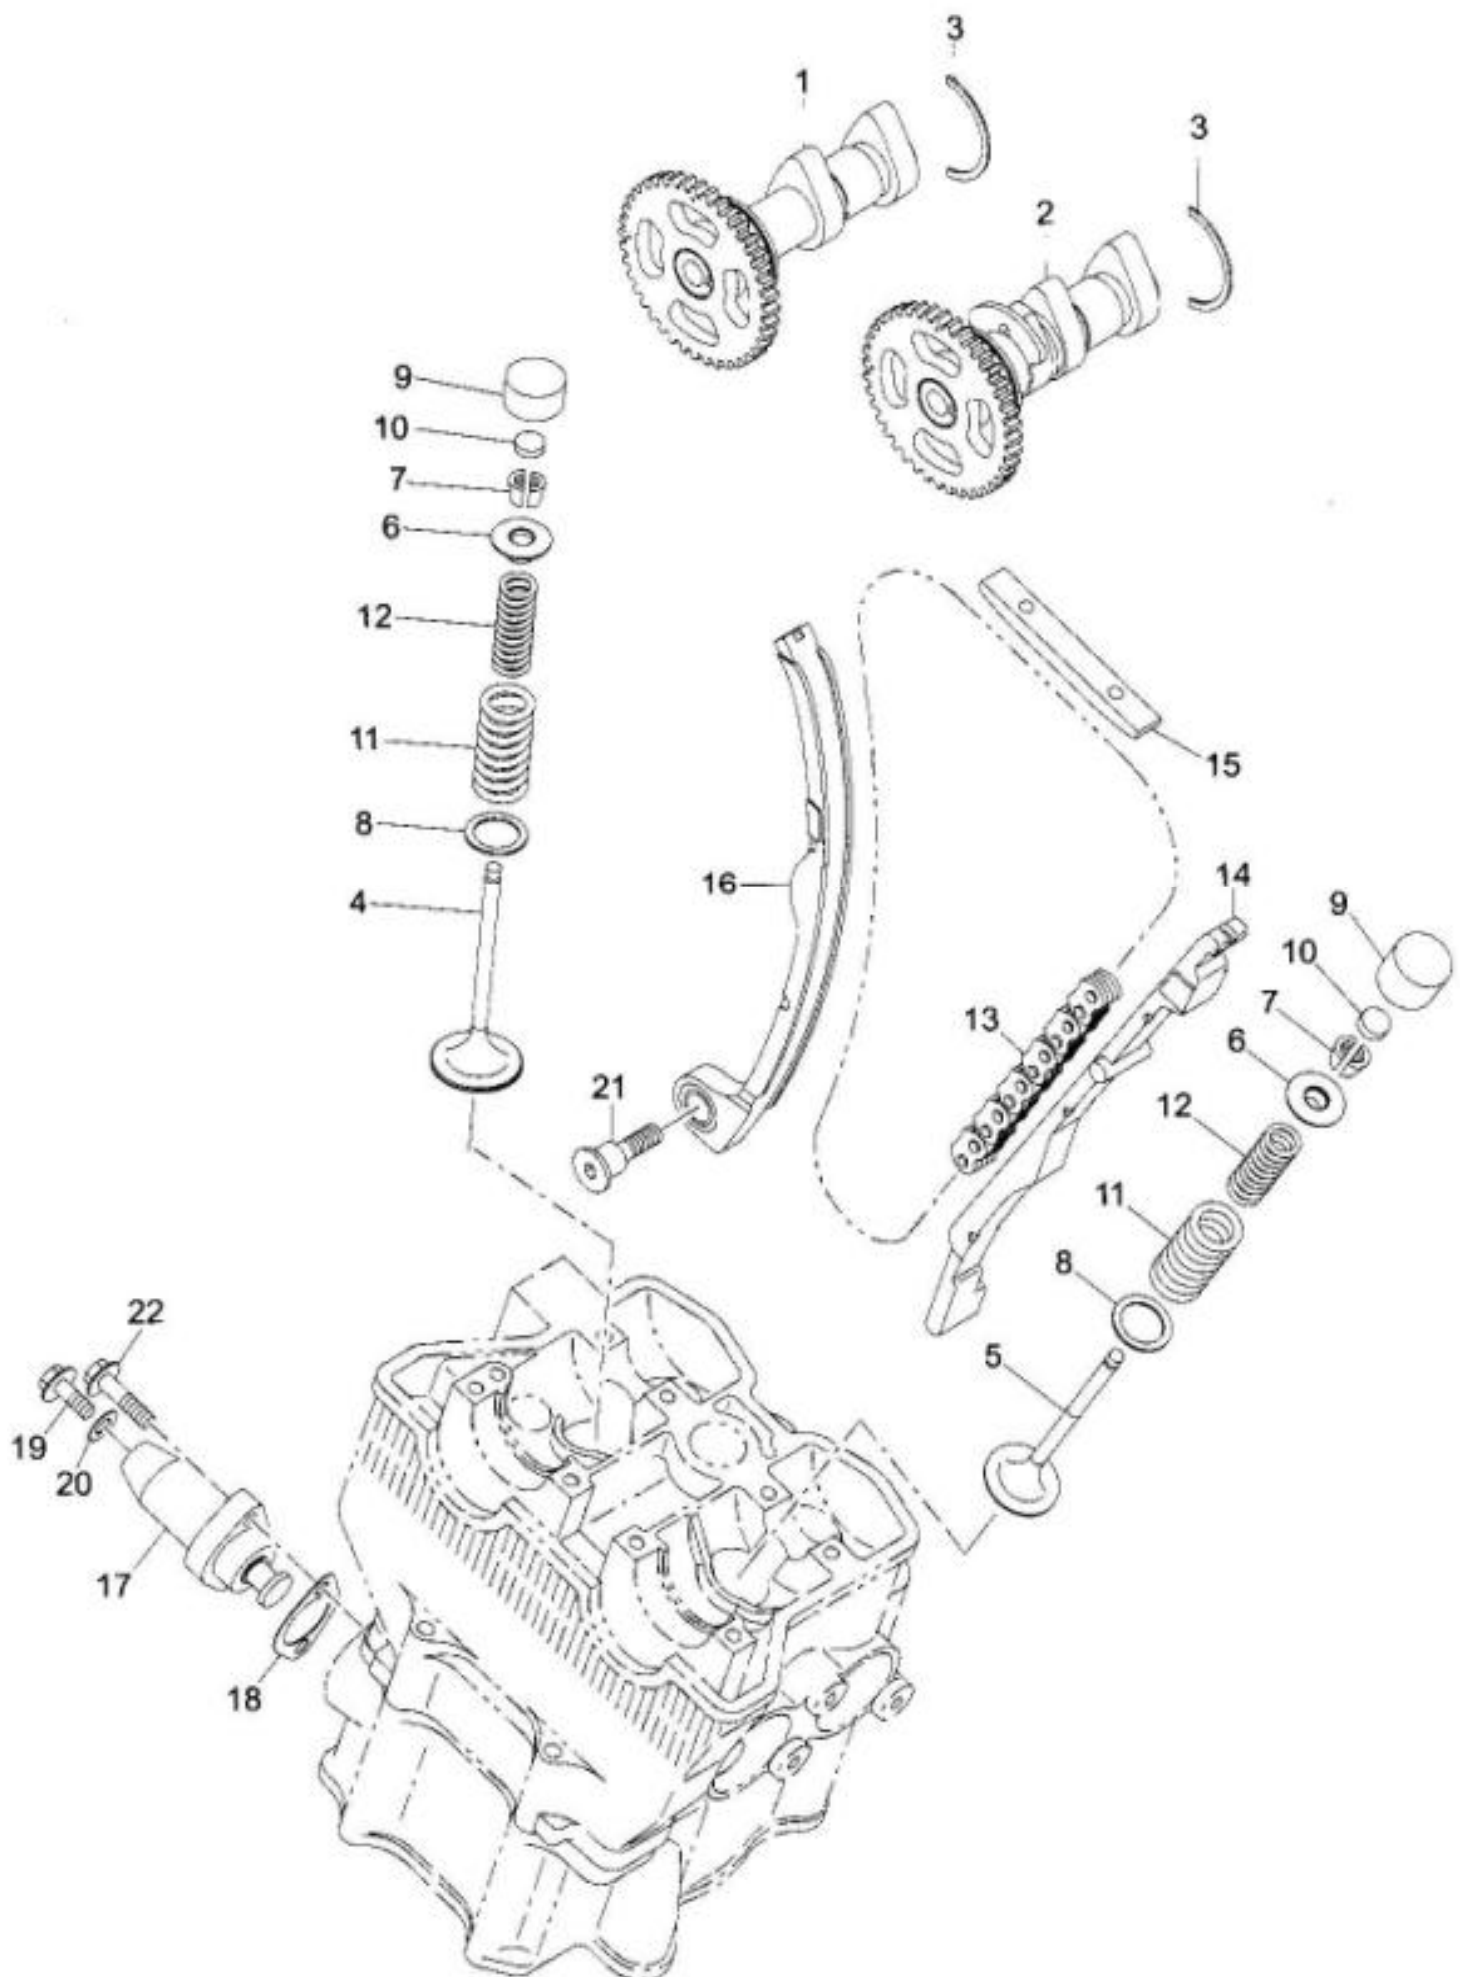


組件 編號：501-E03

進排氣 INTAKE/EXHAUST

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
	283-35922-03	4	ADJSTING PAD	調整片 (23602-501-000)	
	283-35923-03	4	ADJSTING PAD	調整片 (23603-501-000)	
	283-35924-03	4	ADJSTING PAD	調整片 (23604-501-000)	
	283-35925-03	4	ADJSTING PAD	調整片 (23605-501-000)	
	283-35926-03	4	ADJSTING PAD	調整片 (23606-501-000)	
	283-35927-03	4	ADJSTING PAD	調整片 (23607-501-000)	
	283-35928-03	4	ADJSTING PAD	調整片 (23608-501-000)	
	283-35929-03	4	ADJSTING PAD	調整片 (23609-501-000)	
11	283-33601-03	4	VALVE OUTER SPRING	外門閥彈簧 (14751-501-000)	
12	283-33602-03	4	VALVE INNER SPRING	內門閥彈簧 (14761-501-000)	
13	283-37001-03	1	CAM CHAIN	凸輪軸內鏈條 (14401-501-000)	
14	283-37102-03	1	GUIDE COMP CAM CHAIN	鏈條導件 (14500-501-000)	
15	283-37201-03	1	CHAIN GUIDE	鍊條導件(14524-501-000)	
16	283-37303-01	1	CAM CHAIN TENSIONER	鏈條拉力桿 (14550-501-000)	
17	283-36401-00	1	TENSIONER LIFTER	鏈條調整器(14521-501-000)	
18	283-36801-03	1	GASKET ,TENSIONER LIFTER	鏈條調整墊片 (14523-501-000)	
19	96000-06008-10K	1	HEX FLANGE BOLT	六角緣面螺栓	
20	021-10600-20	1	PLAIN WASHER	鋁平面墊圈(94104-06014)	
21	283-37401-03	1	PIVOT,CAM CHAIN TENSIONER	拉力桿螺絲(14535-501-000)	
22	96000-06025-08B	2	HEX FLANGE BOLT	六角緣面螺栓(白)	
=====				=====	

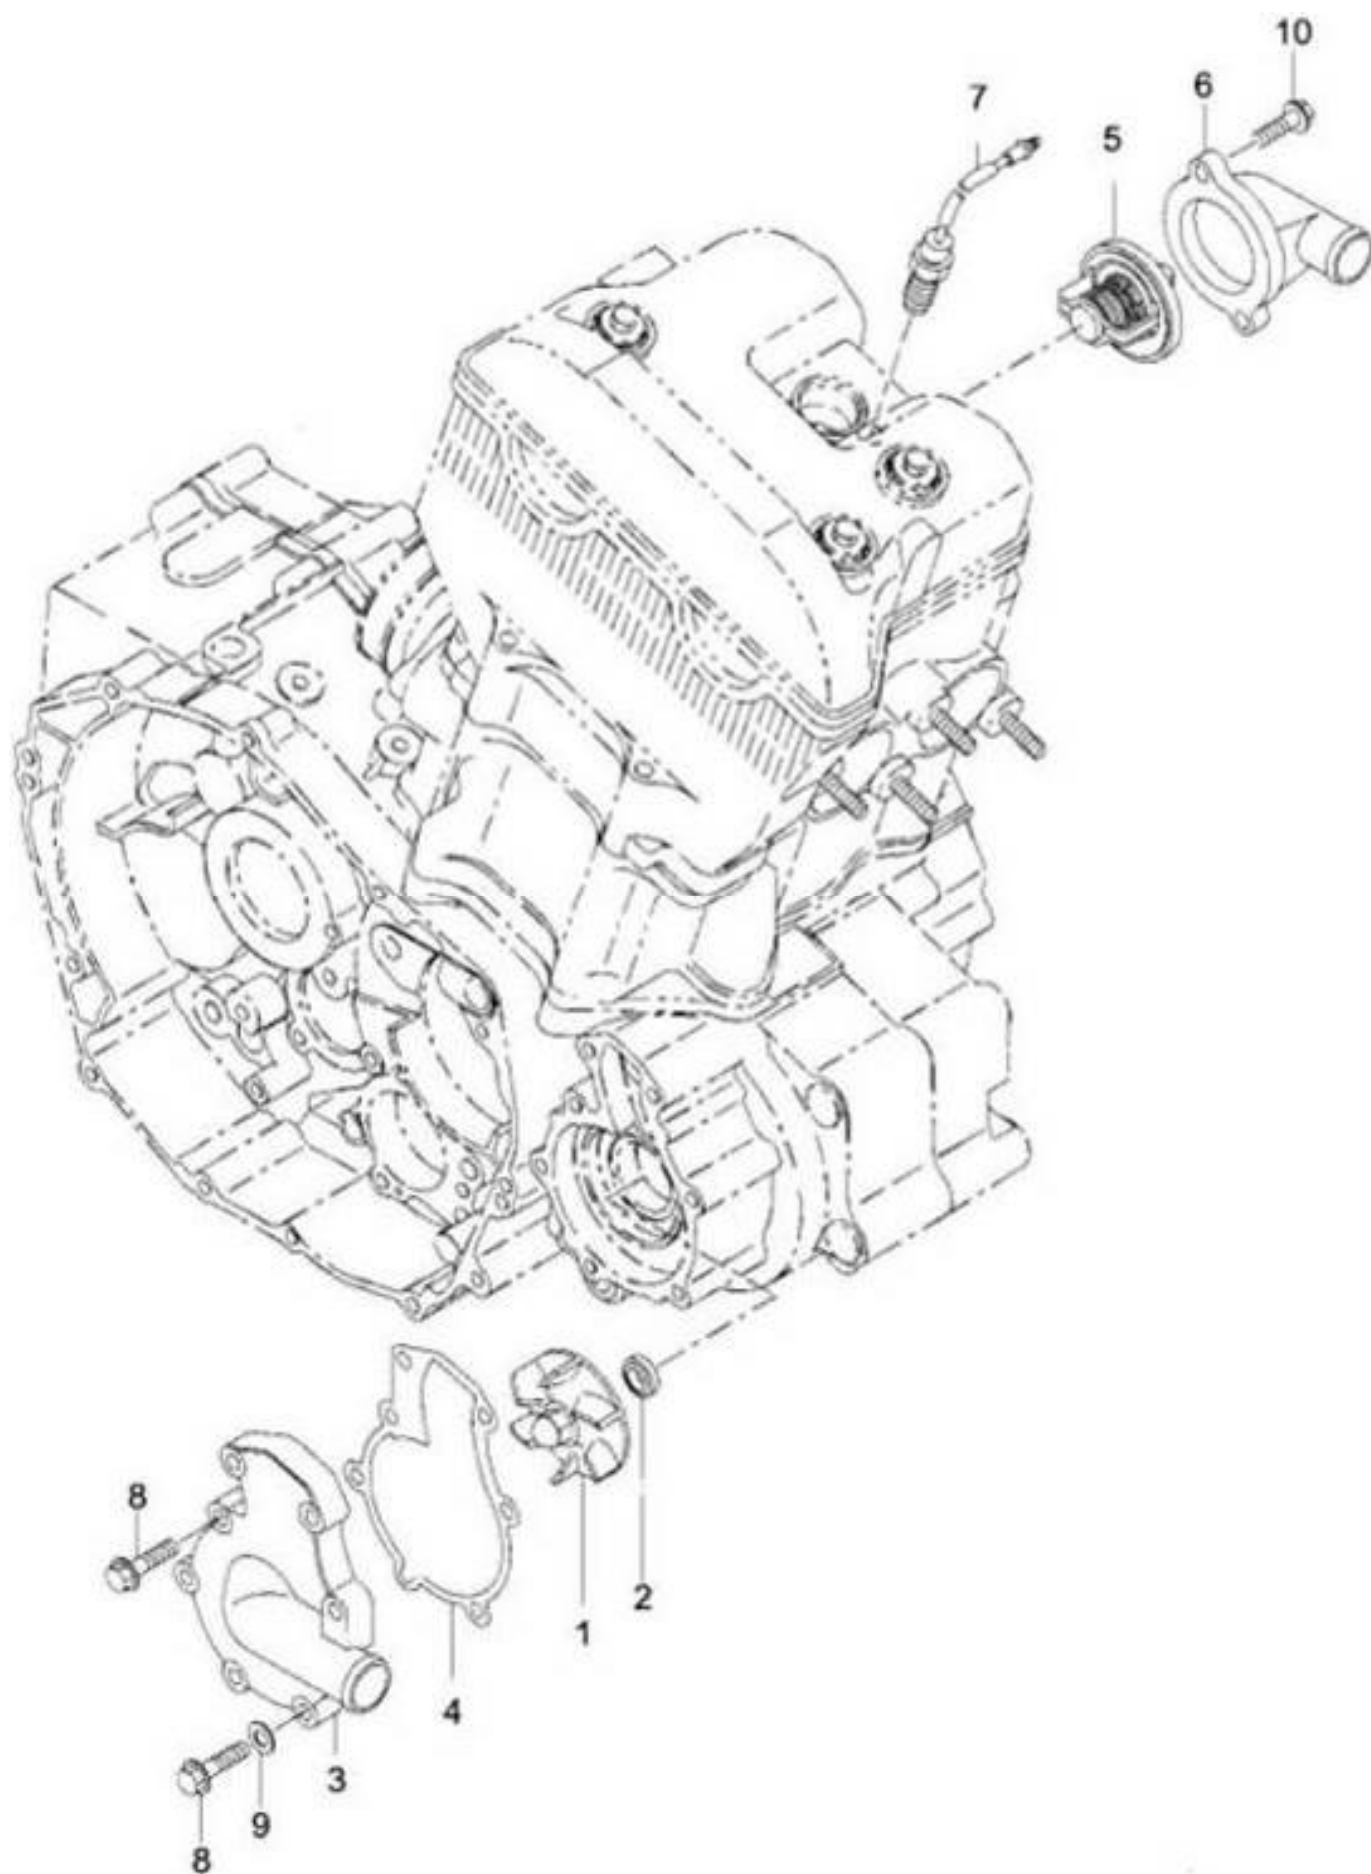


組件 編號：501-E04

水泵 W A T E R P U M P

[TOP](#)

Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
1	283-55102-13	1	WATER PUMP	IMPELLER	水泵葉片 (15803-501-000)
2	021-80600-10	1	WATER PUMP	OIL SEAL	水泵油封 (15805-501-000)
3	283-55202-01	1	WATER PUMP	COVER	水泵蓋 (15820-501-000)
4	283-55602-13	1	WATER PUMP	COVER GASKET	水泵蓋墊片 (15823-501-000)
5	283-56101-01	1	THERMOSTAT	WITH GASKET	恆溫器總成 (19310-501-000)
6	283-55301-03	1	THERMOSTAT	COVER	恆溫器蓋 (19315-501-000)
7	257-56002-01	1	THERMO SWITCH	COMPL	溫度開關 (35500-501-000)
8	96000-06025-08B	7	HEX FLANGE BOLT		六角緣面螺栓(白)
9	94103-0612010	1	SEALING WASHER		防洩華司(銅)
10	96000-06020-08C	2	HEX WASHER FACE BOLT		六角緣面螺栓

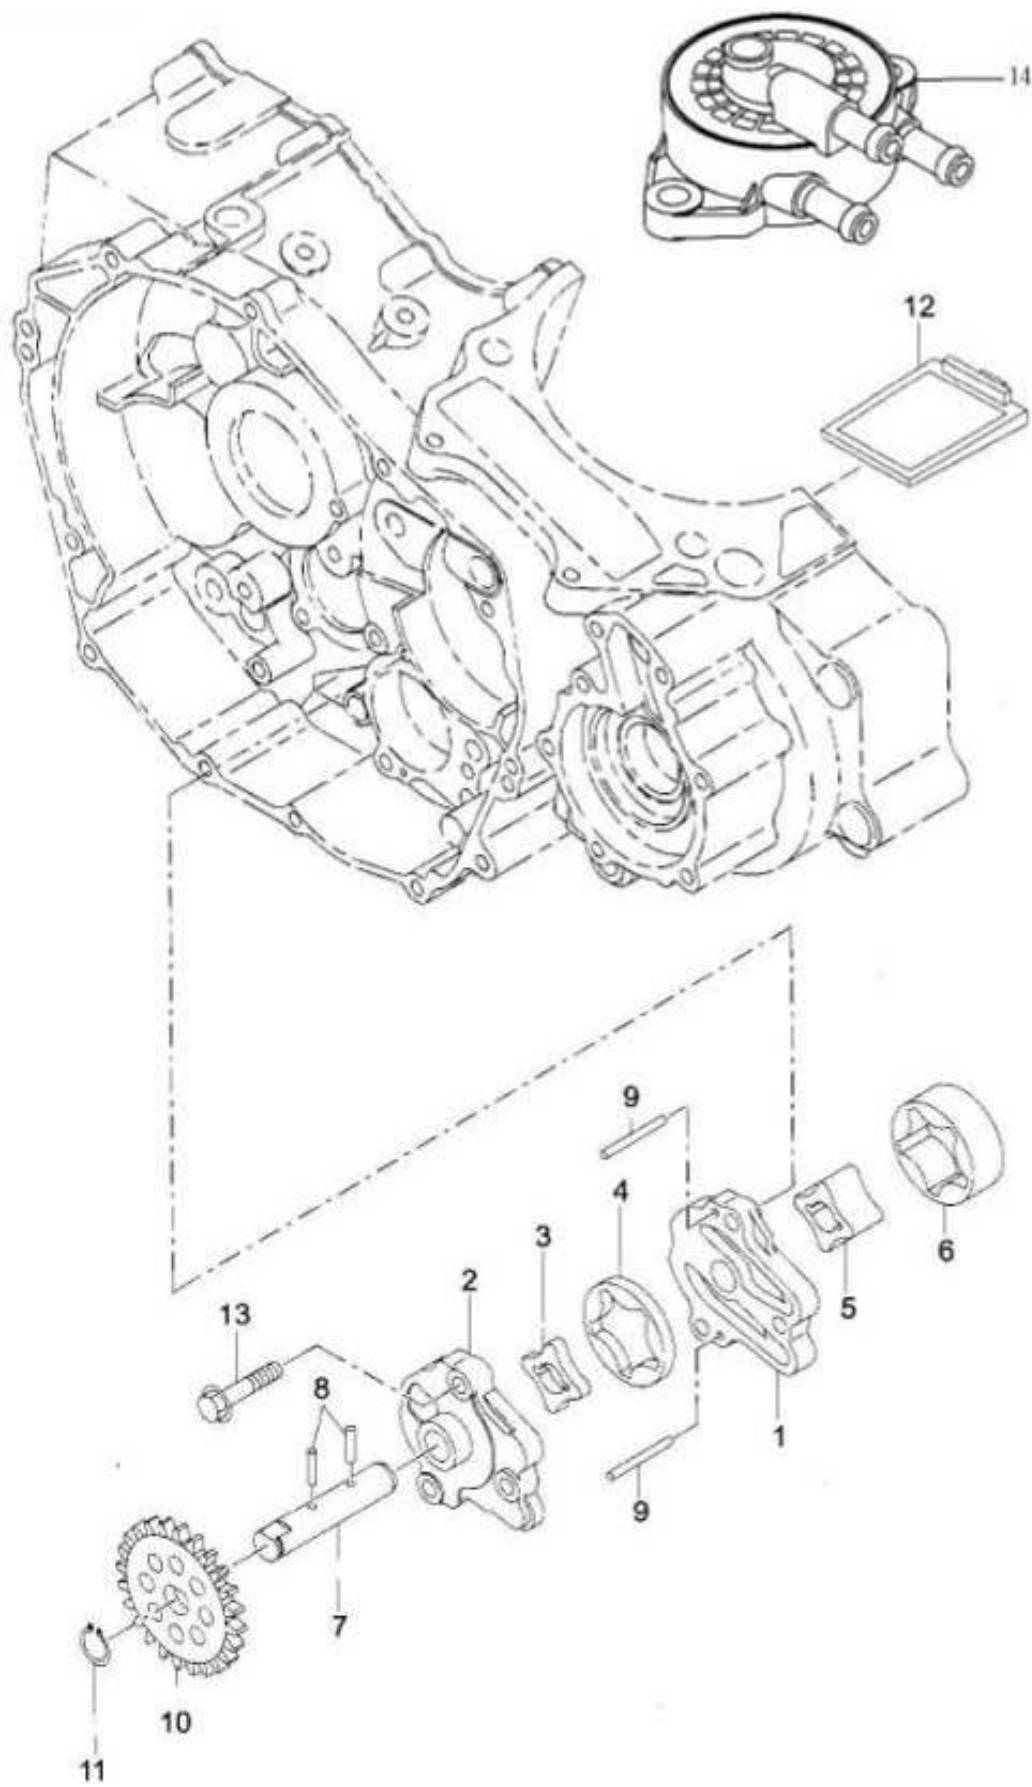


組件 編號：501-E05

機油泵 O I L P U M P

[TOP](#)

-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件 名 稱						
=====					=====				
1	283-65102-00	1	OIL PUMP ASS'Y		機油泵總成(15100-501-000)				
	283-65101-03	1	OIL PUMP CASE 1		機油泵本體1				
2	283-65202-03	1	OIL PUMP CASE 2		機油泵本體2				
3	283-66102-03	1	INNER ROTOR(FEED)		油泵內轉子(供油)				
4	283-66202-03	1	OUTER ROTOR(FEED)		油泵外轉子(供油)				
5	283-66301-03	1	INNER ROTOR(SCAV)		油泵內轉子(排氣)				
6	283-66401-03	1	OUTER ROTOR(SCAV)		油泵外轉子(排氣)				
7	283-65302-03	1	OIL PUMP SHAFT		油泵心軸				
8	031-00300-30	2	DOWEL PIN		定位銷				
9	031-00300-40	2	DOWEL PIN		定位銷				
10	283-64104-03	1	OIL PUMP DRIVE GEAR		油泵從動齒輪(15150-501-000)				
11	94511-1200S	1	EXTERNAL CIR CLIP		外環夾				
12	283-65801-02	1	OIL SIEVE		濾油網(15421-501-000)				
13	96000-06030-08B	3	HEX FLANGE BOLT		六角緣面螺栓(白)				
14	257-62203-00	1	PUMP, GASOLINE		汽油泵浦(16954-501-000)				
=====					=====				

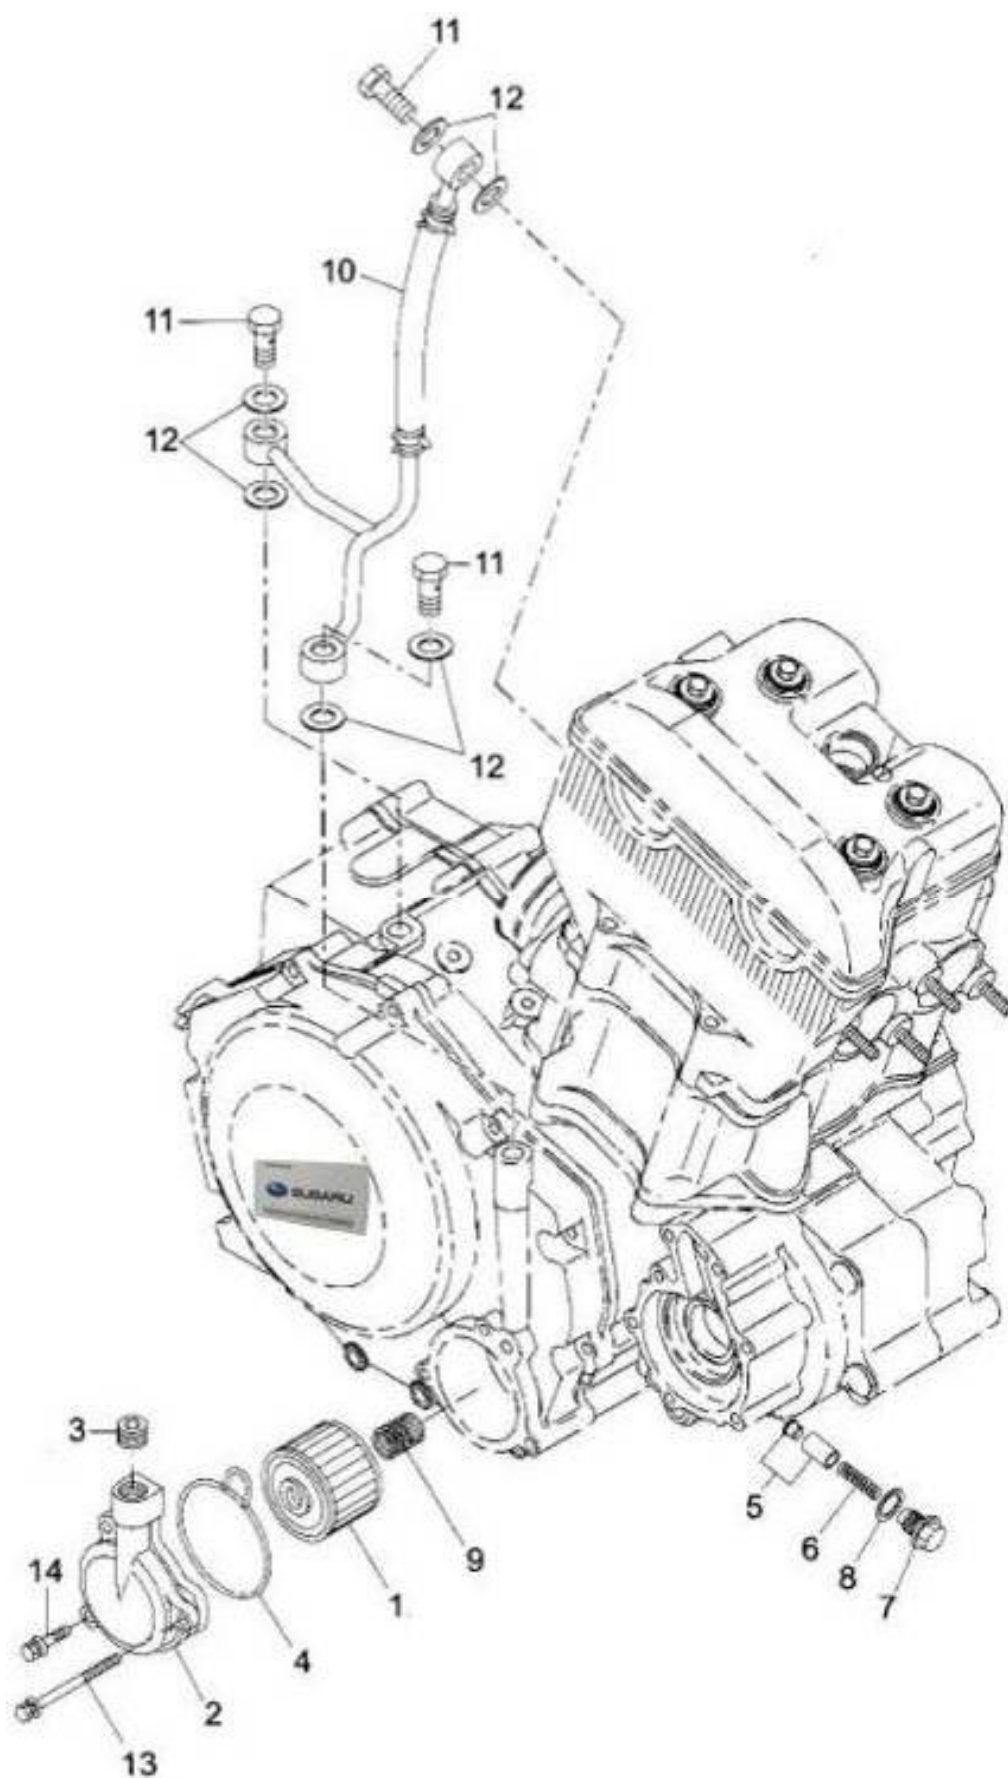


組件 編號：501-E06

供油系統 O I L S Y S T E M

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	15412-169-000	1	OIL FILTER ELEMENT	機油濾清器
2	283-65501-00	1	OIL FILTER COVER	機油濾清器蓋 (11333-501-000)
3	040-31400-10	1	PLUG	栓塞
4	283-67501-03	1	OIL RING	油環(91354-501-000)
5	283-66501-00	1	PRESSURE RETAINER VALVE HOUSING	壓力調整閥座(11403-501-000)
6	283-66601-03	1	COMPERSSION SPRING	壓縮彈簧(11402-501-000)
7	283-66701-03	1	PLUG SCREW	壓力調整閥螺栓(11404-501-000)
8	021-11100-10	1	AL PLAIN WASHER	鋁平面墊圈(94104-1119010)
9	283-65401-03	1	OIL FILTER ELEMENT SETTING SPRING	濾油器彈簧 (15414-501-000)
10	283-68002-00	1	OIL PIPE	外機油輸送管(15201-501-000)
11	053-01200-41	3	OIL BOLT	油管固定螺栓 (45456-501-000)
12	94103-1220015	6	COPPER PLAIN WASHER	銅平面墊圈
13	96000-06065-08B	1	HEX WASHER FACE BOLT	六角緣面螺栓(白)
14	96000-06025-08B	2	HEX FLANGE BOLT	六角緣面螺栓(白)

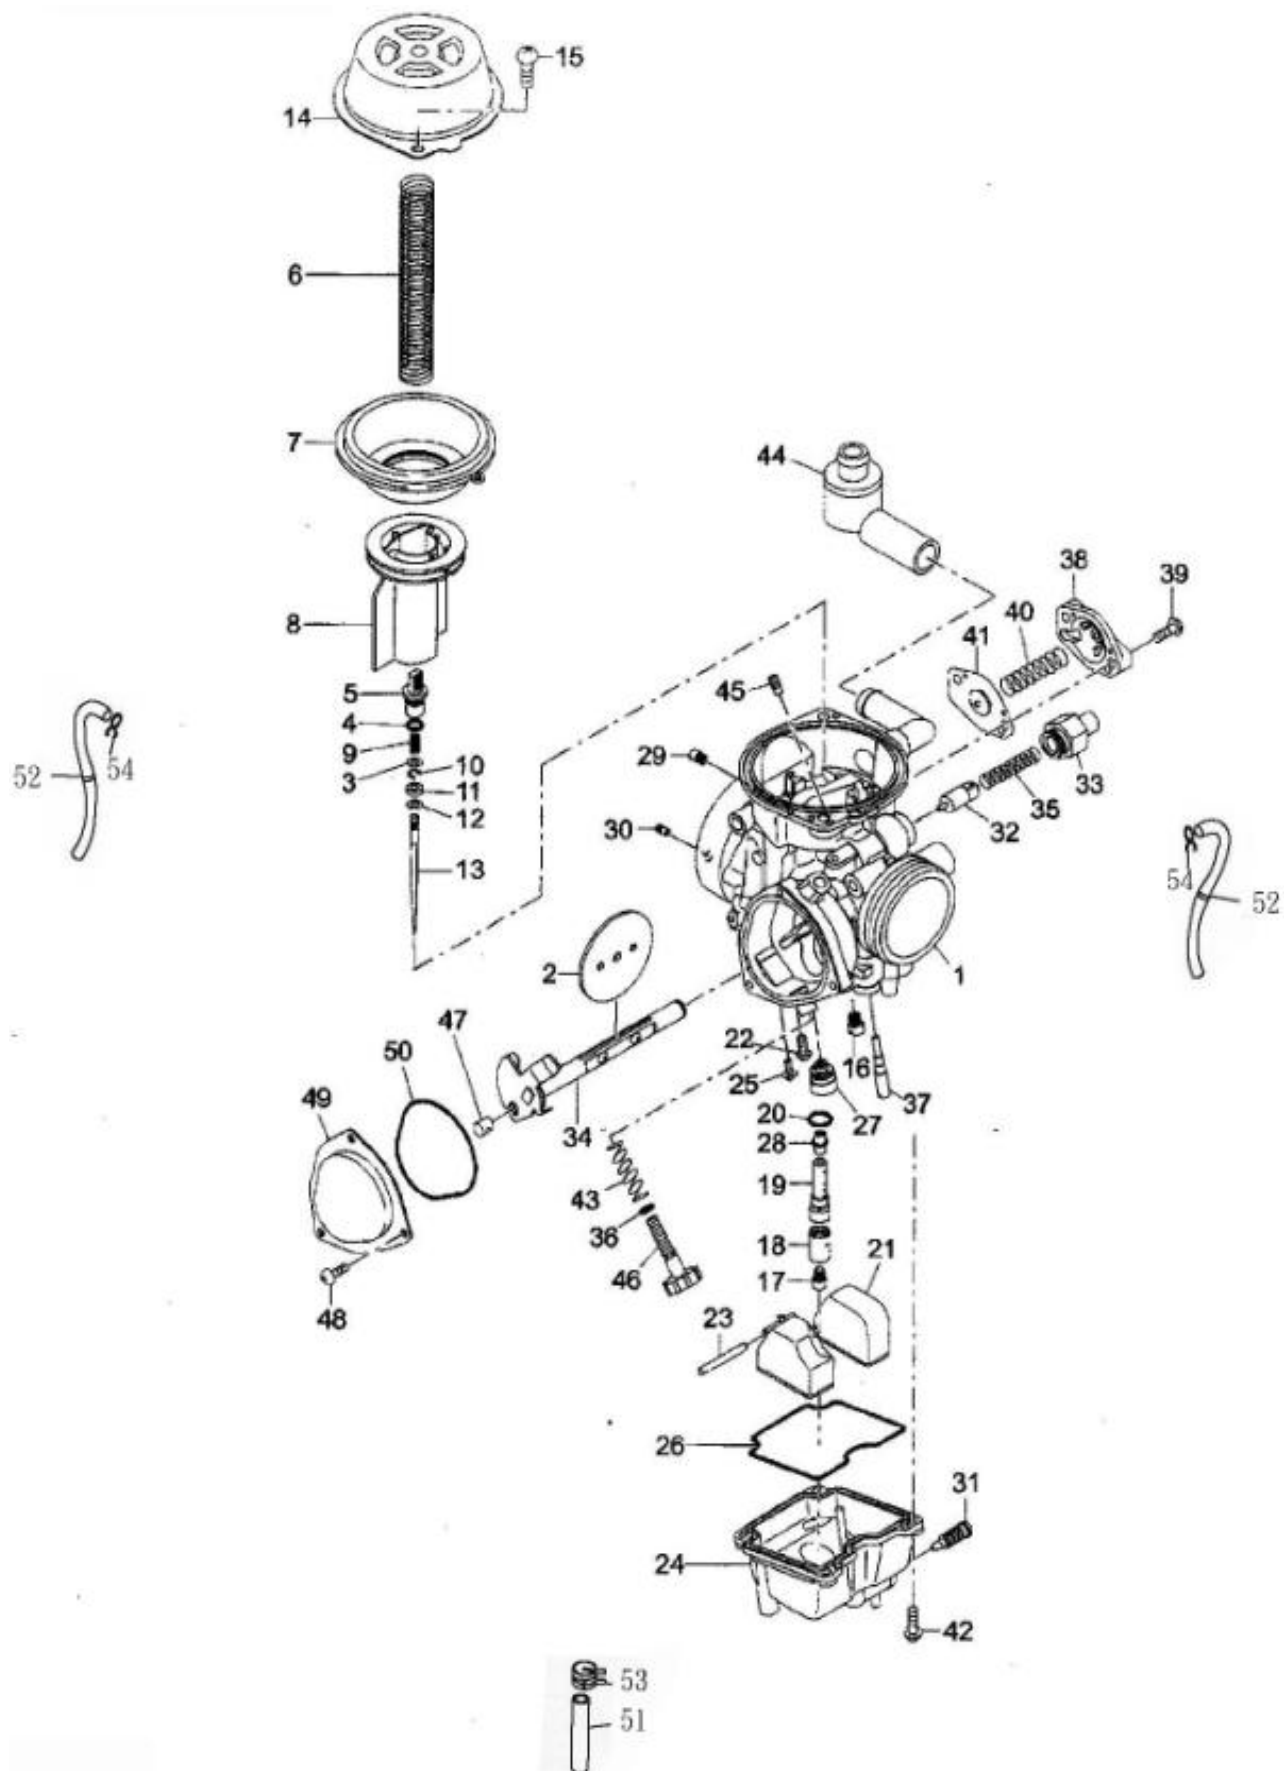


組件 編號：501-E07

化油器 CARBURETOR

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	20H-62301-00	1	CARBURETOR ASS'Y	化油器組合(16100-501-000)	
2	283-62535-08	1	THROTTLE VALVE(#105)	節流門閥	
3	165-62359-08	1	"E"RING	E 型環	
4	164-62391-08	1	"O" RING	O 型環	
5	283-62350-08	1	HOLDER	油針固定座	
6	283-62345-08	1	SPRING	彈簧	
7	283-62351-08	1	DIAPHRAGM	膜片	
8	283-62352-08	1	PISTON VALVE	膜片 活塞閥	
9	283-62346-08	1	SPRING	油針彈簧	
10	283-62353-08	1	WASHER	油針墊圈	
11	260-62355-08	1	RING	油針環	
12	283-62354-08	1	WASHER	油針墊圈	
13	283-62305-08	1	JET NEEDLE	油針	
14	283-62355-08	1	DIAPHRAGM COVER	化油器上蓋	
15	212-62361-08	2	SCREW	螺栓	
16	230-62402-08	1	JET(#42.5)	噴嘴(#42.5)	
17	113-62303-08	1	MAIN JET(#150)	主噴嘴	
18	283-62358-08	1	RING	主噴嘴環座	
19	283-62359-08	1	JET HOLDER	油針座	
20	164-62395-08	1	"O"RING	O 型環	
21	283-62505-08	1	FLOAT-A	浮筒-A	
22	209-62354-08	1	SCREW	螺栓	
23	110-62515-08	1	PIN	浮筒銷	
24	290-62351-08	1	FLOAT BODY	浮筒室	
25	283-62361-08	1	SCREW	螺栓	
26	283-62362-08	1	"O"RING	O 型環	
27	283-62501-08	1	NEEDLE VALVE	針閥	
28	283-62300-08	1	NEEDLE JET	針噴嘴	
29	266-62409-08	1	JET(#110)	噴嘴(#110)	
30	283-62363-08	1	JET(#120)	噴嘴(#120)	
=====				=====	

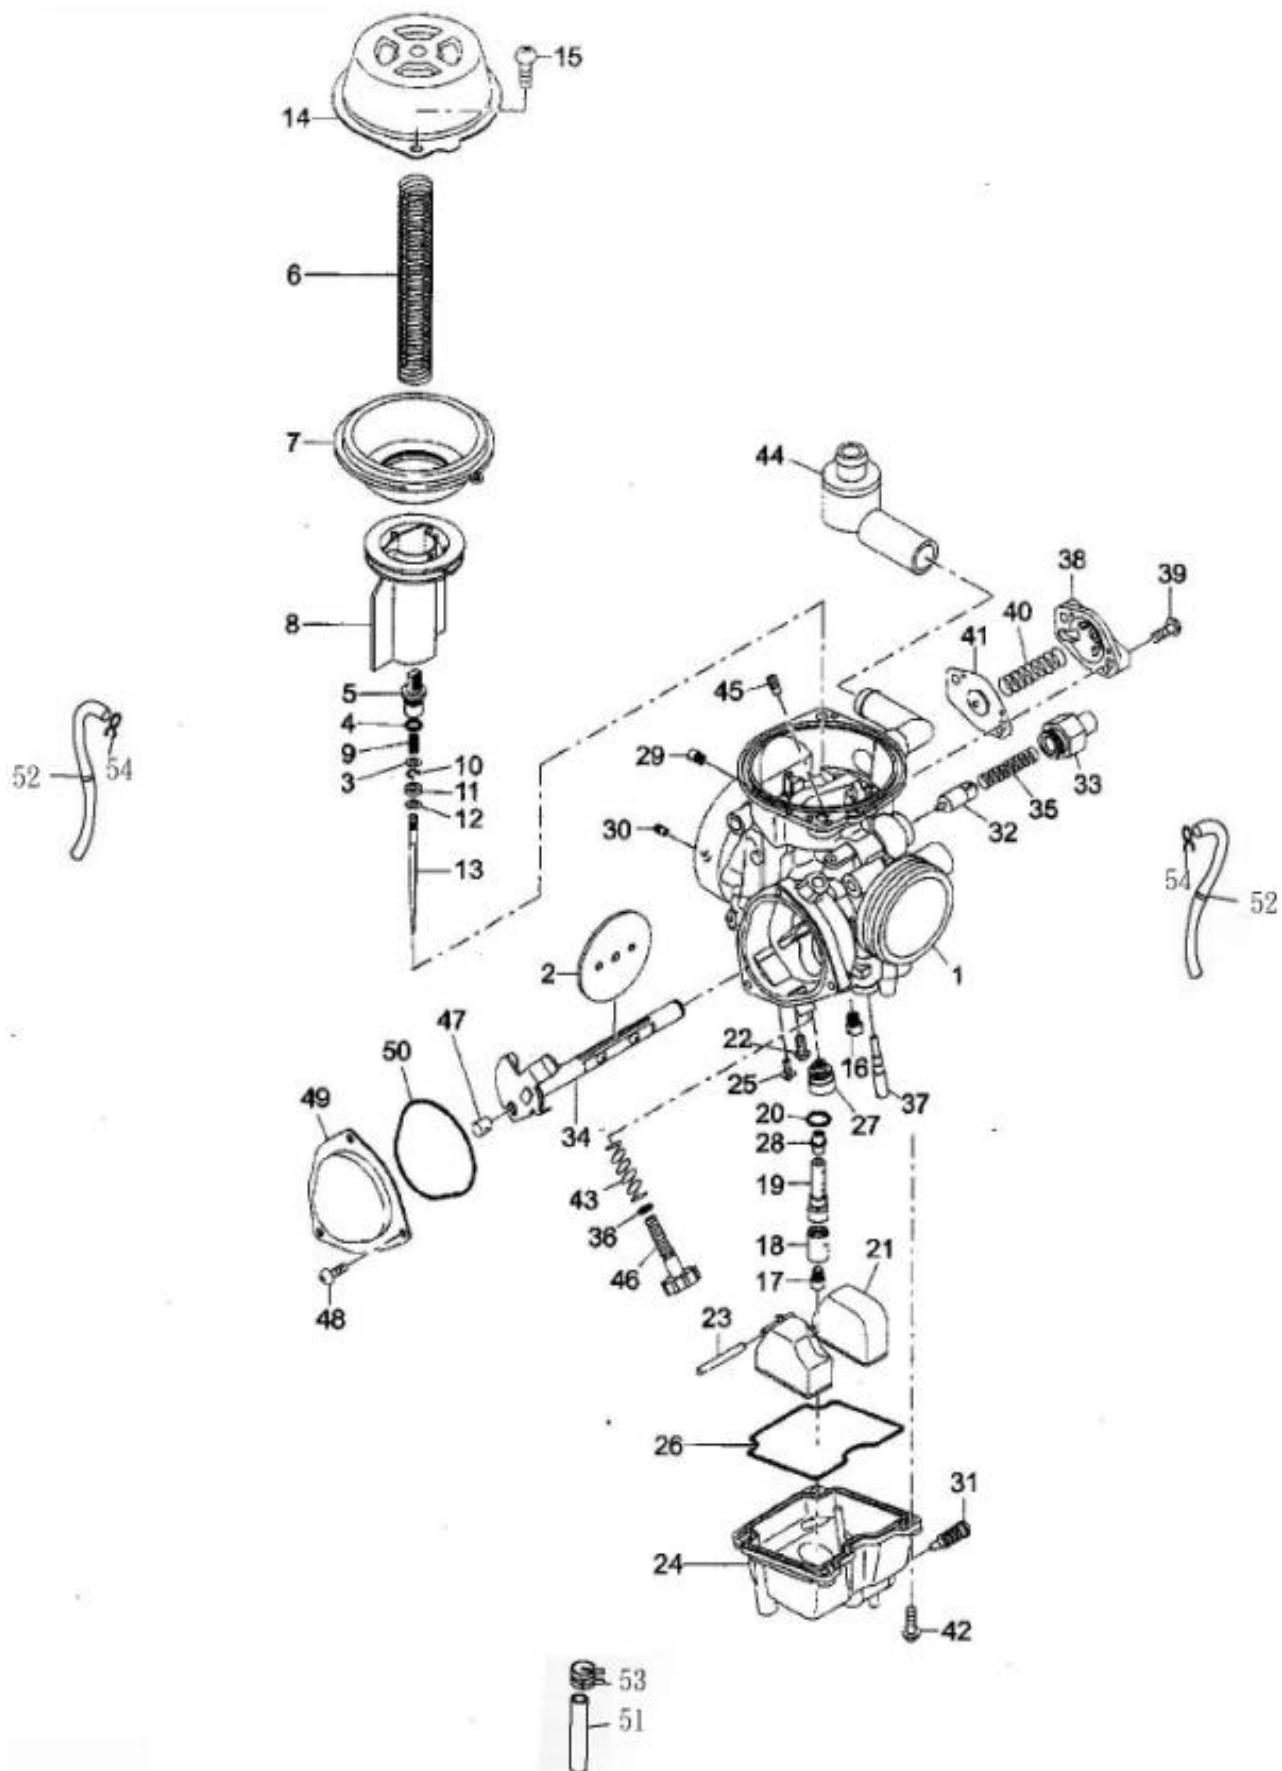


組件 編號：501-E07

化油器 CARBURETOR

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
31	257-62364-08	1	SCREW	螺栓
32	257-62373-08	1	PLUNGER ASSY	柱塞組
33	283-62364-08	1	GUIDE HOLDER	柱塞導座
35	106-62460-08	1	SPRING	彈簧
36	106-62384-08	1	"O"RING	O 型環
37	283-62420-08	1	PILOT JET(#45)	引導噴嘴(#45)
38	283-62365-08	1	COVER A	負壓蓋
39	130-62372-08	2	SCREW	螺栓
40	283-62347-08	1	SPRING	負壓彈簧
41	283-62366-08	1	DIAPHRAGM ASSY	負壓膜片組
42	283-62367-08	4	SCREW	螺栓
43	109-62446-08	1	SPRING	怠速調整彈簧
44	283-62368-08	1	FILTER	過濾器
45	248-62410-08	1	AIR JET	空氣噴嘴
46	283-62369-08	1	ADJUST SCREW	怠速調整螺栓
47	257-62353-08	1	CABLE GUIDE	節流線導座
48	226-62354-08	3	SCREW	螺栓
49	260-62365-08	1	COVER	節流線外蓋
50	260-62364-08	1	"O"RING	O 型環
51	94400-0408430	1	HOSE	軟管(L=430)
52	94400-0609300	2	HOSE	軟管
53	94513-08000	1	SPRING CLAMP	彈扣B00001-07
54	94510-09000	2	CLIP	夾緊扣

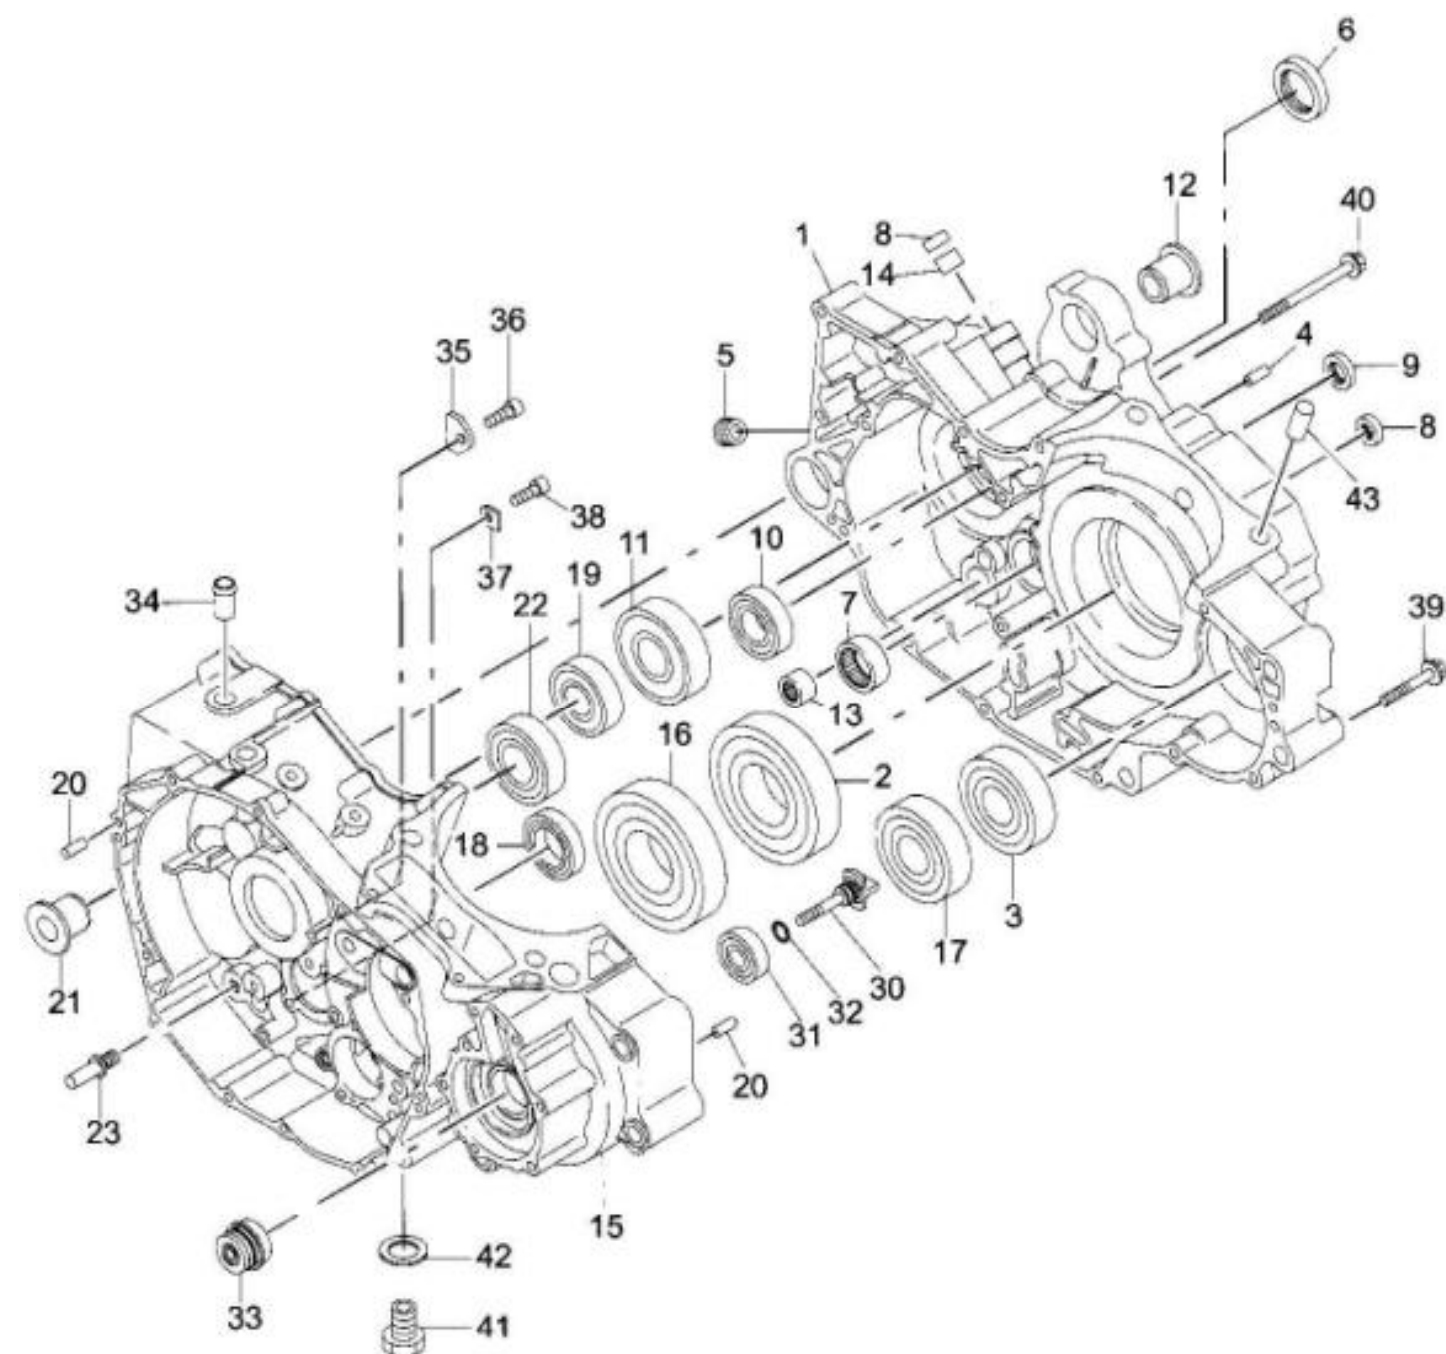


組件 編號：501-E08


曲軸箱 CRANK CASE

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	290-10301-20	1	CRANKCASE ASS'Y	左右曲軸箱組合(11100-501-000)
2	060-03502-21	1	RADIAL BALL BEARING	滾珠軸承(96100-6308X)
3	060-02501-70	1	RADIAL BALL BEARING	滾珠軸承(96100-TM B 305)
4	031-00600-10	2	DOWEL PIN	定位銷(94301-06010)
5	235-15421-03	1	BLIND PLUG	栓塞
6	044-02500-70	1	OIL SEAL	油封(96500-25387)
7	061-02500-10	1	NEEDLE BEARING	滾針軸承(96200-HK 2512)
8	044-01200-30	2	OIL SEAL	油封(96500-12185)
9	044-01300-20	1	OIL SEAL	油封(96500-13225)
10	060-02001-50	1	RADIAL BALL BEARING	滾珠軸承(96100-6004)
11	060-02501-10	1	RADIAL BALL BEARING	滾珠軸承(96100-6305)
12	283-16401-03	1	COLLAR	軸環(96401-162226)
13	061-01300-01	1	NEEDLE BEARING	滾針軸承(96200-HK 1312FM)
14	060-21200-11	1	BEARING (RELEASE)	滾針軸承
16	060-03502-21	1	RADIAL BALL BEARING	滾珠軸承(96100-6308X)
17	060-02501-70	1	RADIAL BALL BEARING	滾珠軸承(96100-TM B 305)
18	060-02501-20	1	RADIAL BALL BEARING	滾珠軸承(96100-6905)
19	060-02000-20	1	RADIAL BALL BEARING	滾珠軸承(96100-62040)
20	031-00600-10	4	DOWEL PIN	定位銷(94301-06010)
21	283-16401-03	1	COLLAR	軸環(96401-162226)
22	060-02501-30	1	RADIAL BALL BEARING	軸承(96100-TM B 205)
23	283-8C601-03	1	STOPPER PIN	變速回位彈簧梢(24652-501-000)
30	283-55002-01	1	WATER PUMP SHAFT	水泵軸(15802-501-000)
31	060-01200-60	1	BALL BEARING	滾珠軸承
32	006-26100-90	1	"O" RING	O 型環
33	257-56201-01	1	MECHANICAL SEAL COMPL.	機構油封
34	132-97KA0-60	1	BREATHER PIPE	通氣管(12102-501-000)
35	283-15503-03	1	STOPPER PLATE	止動板(大)(11112-501-000)
36	96000-06020-08C	1	HEX WASHER FACE BOLT	六角緣面螺栓
37	283-15504-03	2	STOPPER PLATE	止動板(小)(11113-501-000)

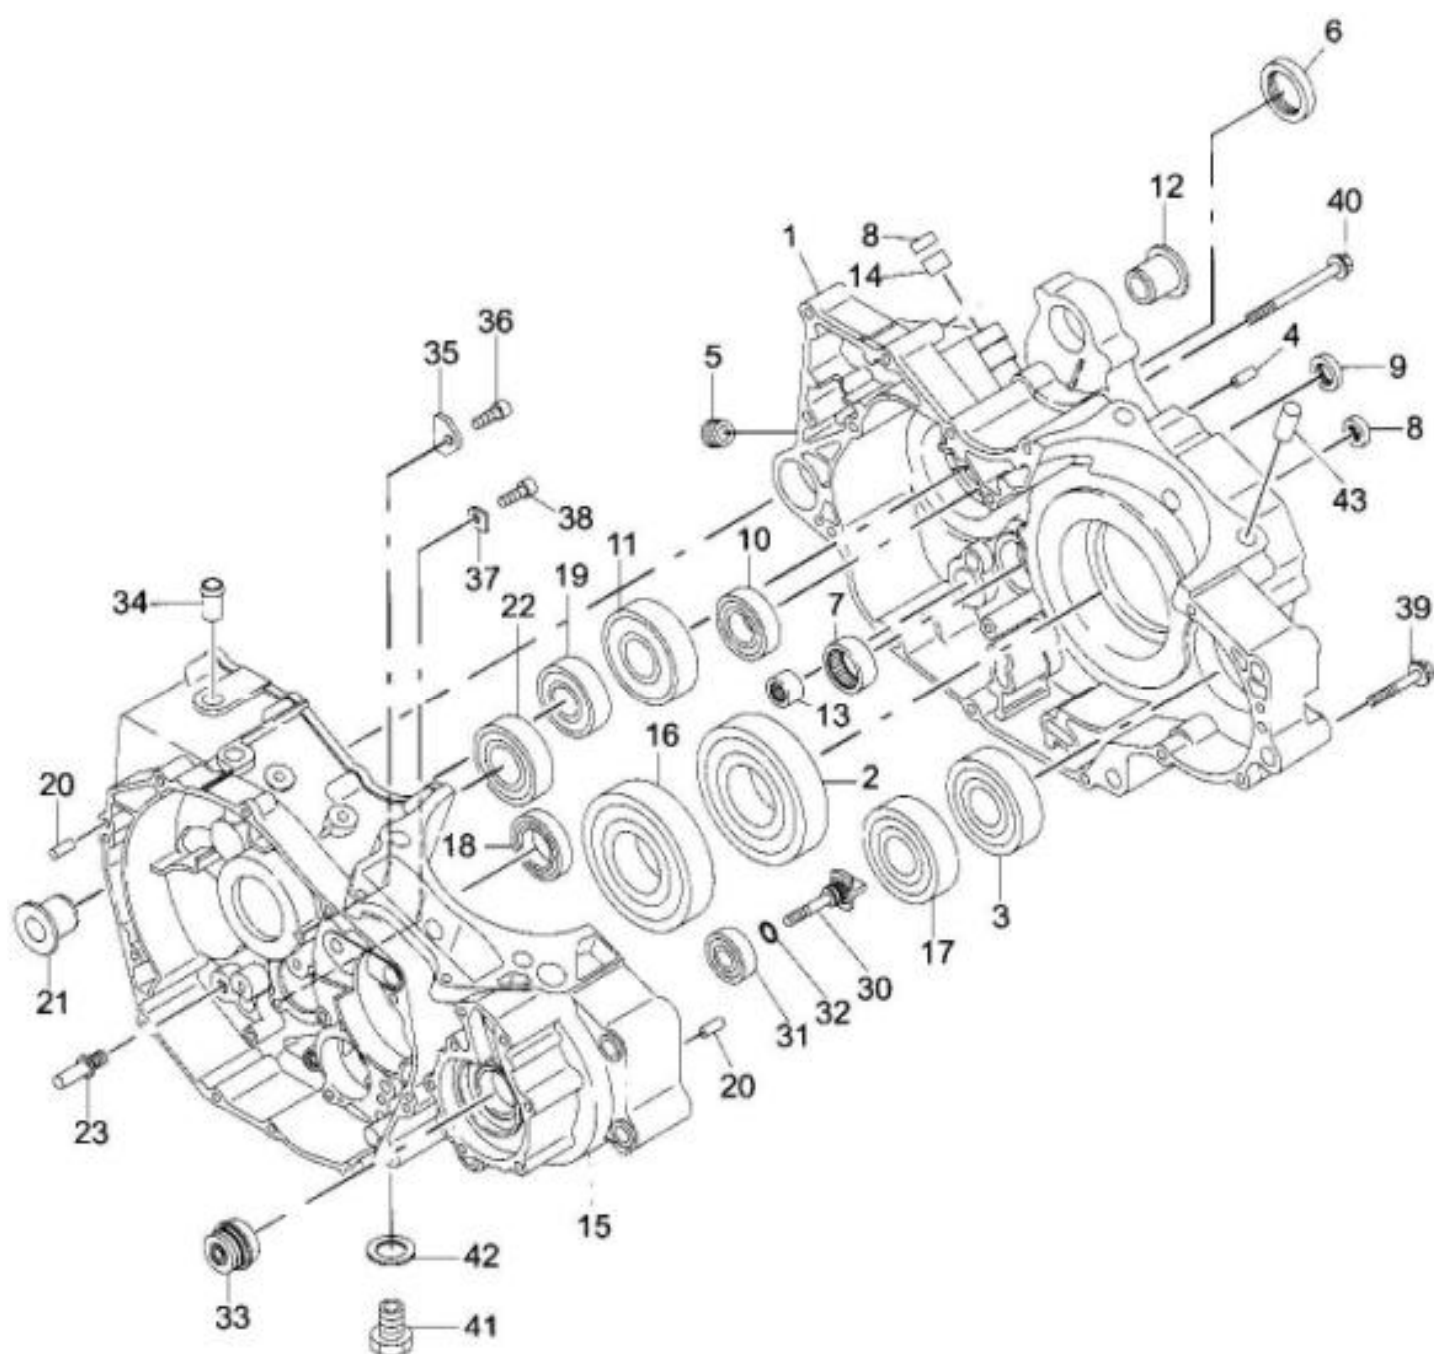

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
38	96000-06012-08C	2	HEX WASHER FACE BOLT	六角緣面螺栓(五彩)
39	96000-06040-08B	7	HEX FLANGE BOLT	六角緣面螺栓(白)
40	96000-06075-08B	8	HEX WASHER FACE BOLT	六角緣面螺栓(白)
41	283-69301-23	1	MAGNETIC DRAIN PLUG	機油洩放螺栓(11131-501-000)
42	94104-1320020	1	PLAIN WASHER	平面墊圈(鋁)
43	031-51500-10	2	DOWEL PIN	定位銷(94301-15180)

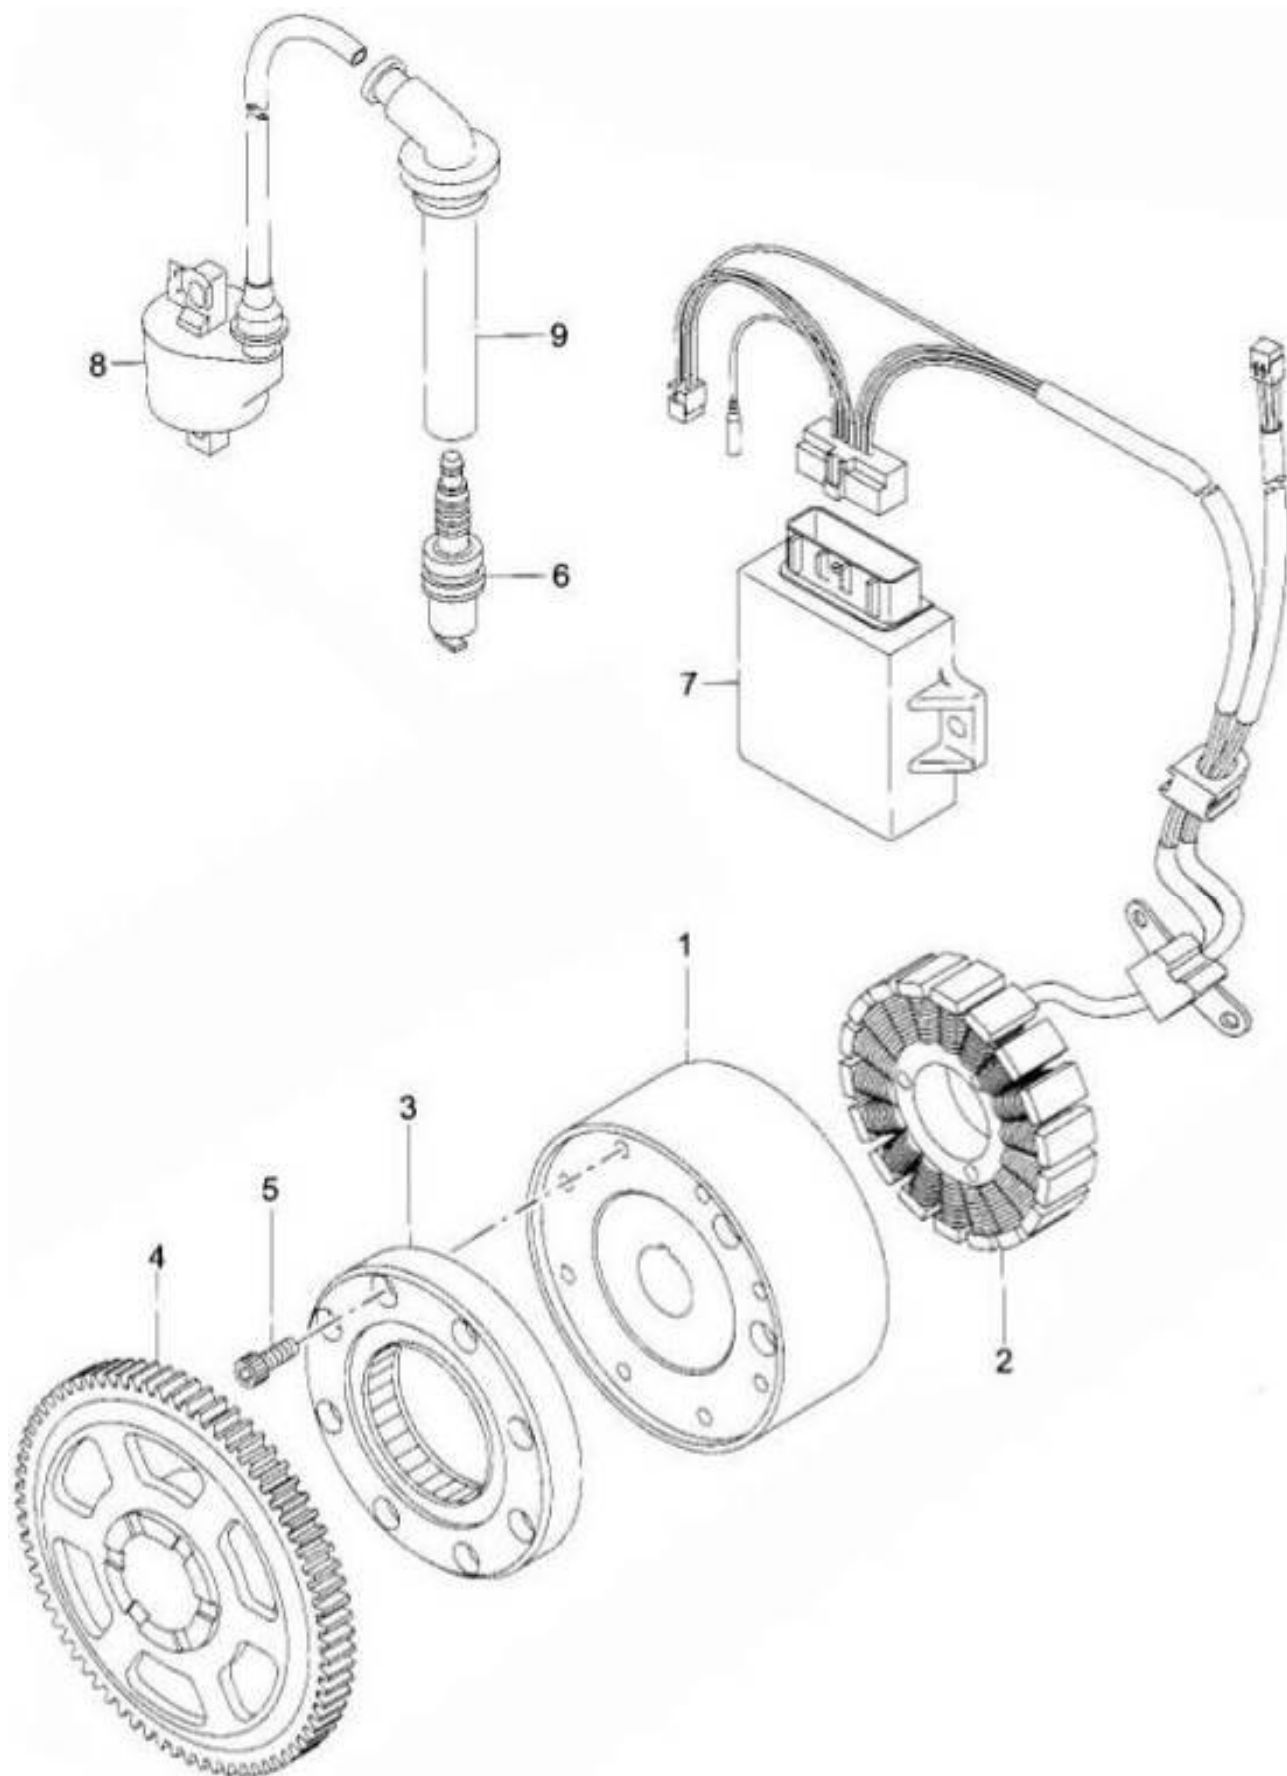


組件 編號：501-E09


磁電機 M MAGNETO

[TOP](#)


-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	283-70101-01	1	GENERATOR FLYWHEEL	飛輪(31110-501-000)	
2	283-75005-10	1	STATOR COMP	轉子線圈 (31120-501-000)	
3	283-75602-00	1	STARTER CLUTCH ASS'Y	起動離合器總成 (28410-501-000)	
4	283-75501-03	1	FREE WHEEL GEAR 67 ASS'Y	起動離合器齒輪(28220-501-000)	
5	91000-06018K	8	HEX SOCKET BOLT	六角承窩螺栓(黑)	
6	065-01407-60	1	SPARK PLUG	火星塞 (98076-501-000)	
7	283-72202-01	1	C.D.I UNIT	C D I電子元件 (30410-501-000)	
8	283-71201-01	1	HIGH TENSION COIL	高壓線圈 (30510-501-000)	
9	283-76301-03	1	SPARK PLUG CAP	火星塞帽 (30700-501-000)	
=====				=====	

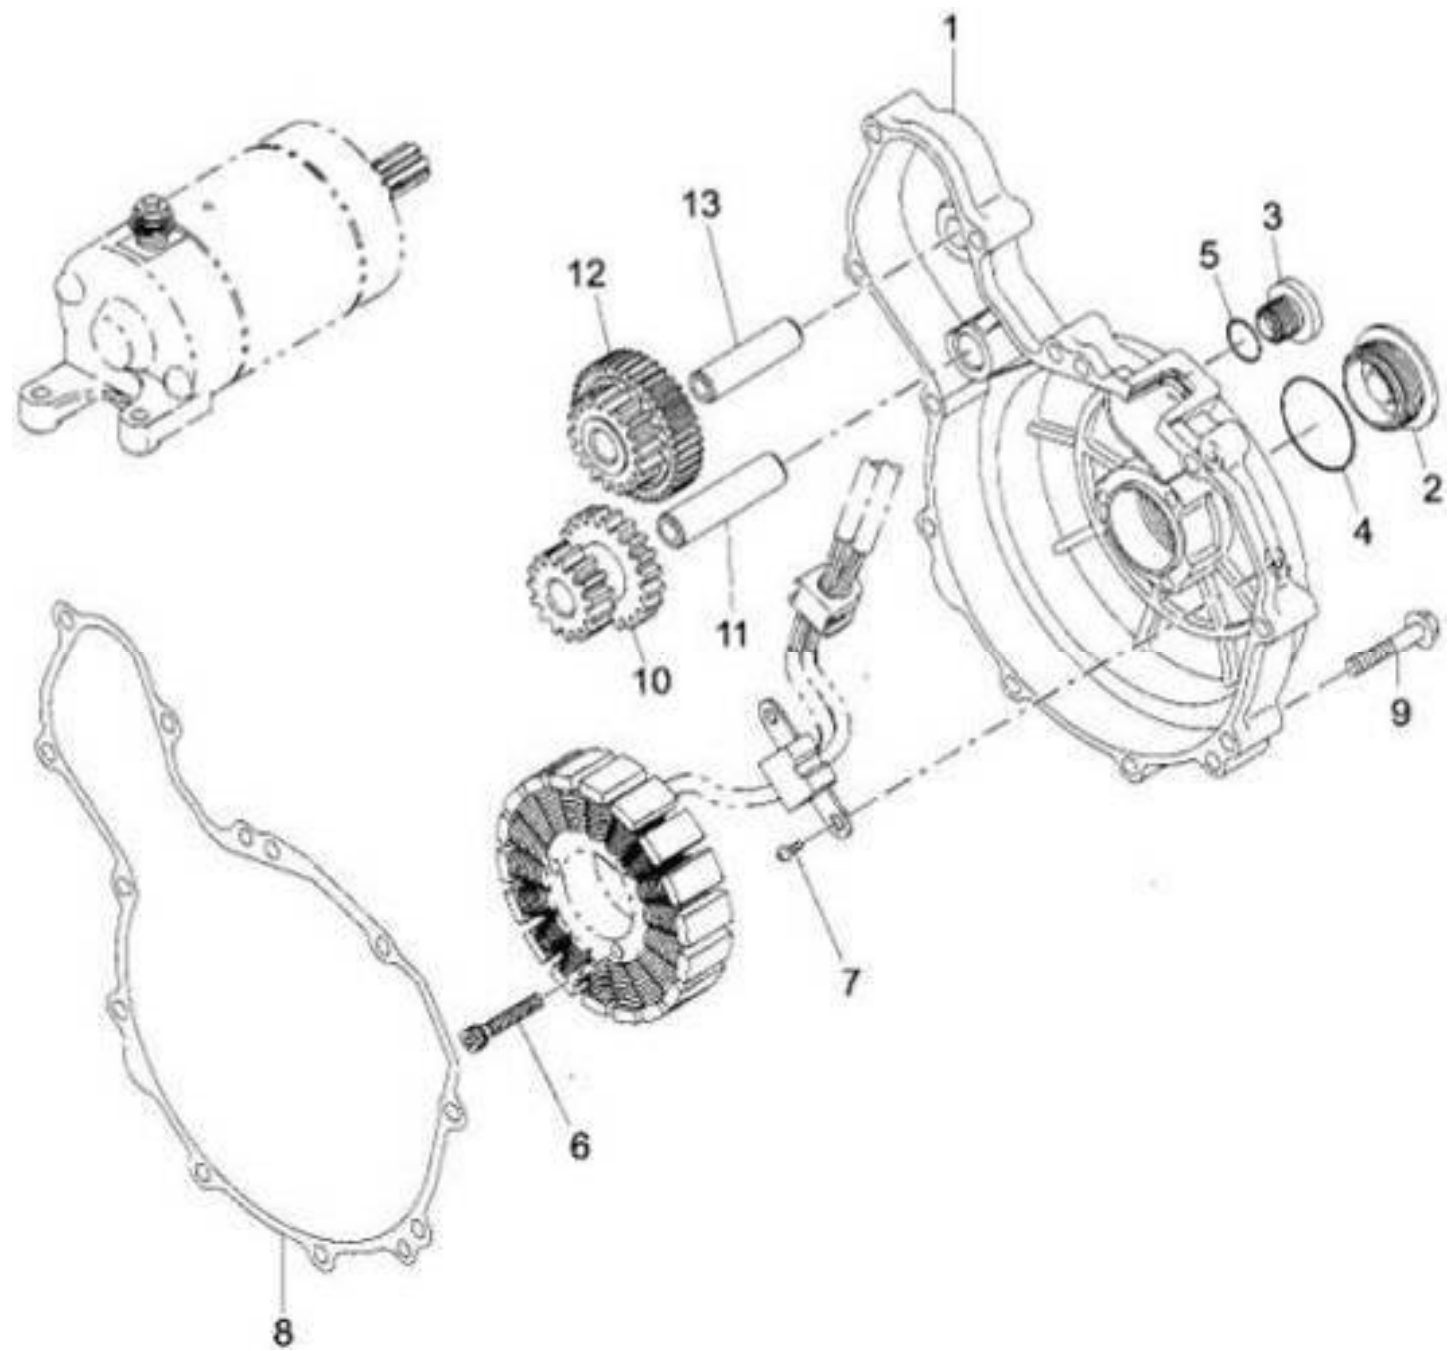

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	290-71702-00	1	L. CRANK CASE COVER	左曲軸箱蓋 (11341-501-000)
2	283-77101-03	1	A.C.G. CAP 1	交流發電機塞 1 (90087-501-000)
3	283-77201-03	1	A.C.G. CAP 2	交流發電機塞 2 (90084-501-000)
4	024-02700-40	1	O-RING	油環(91328-501-000)
5	024-01200-10	1	O-RING	油環(91312-169-00A)
6	91000-05030C	3	HEX SOCKET BOLT(BK)	六角承窩螺栓
7	96000-05012-08K	2	HEX BOLT	六角螺栓(五彩)
8	283-75001-13	1	L COVER GASKET	左曲軸箱蓋墊片 (11359-501-000)
9	96000-06035-08B	11	HEX WASHER FACE BOLT	六角緣面螺栓(白)
10	283-75101-03	1	STARTER REDUCTION GEAR COMP	起動減速齒輪 (28130-501-000)
11	283-75201-13	1	SHAFT1	起動減速齒輪軸(28133-501-000)
12	283-75301-03	1	STARTER REDUCTION SHAFT COMP.	起動齒輪組 (28140-501-000)
13	283-75401-13	1	STARTER REDUCTION GEAR SHAFT	起動減速齒輪軸 (28132-501-000)

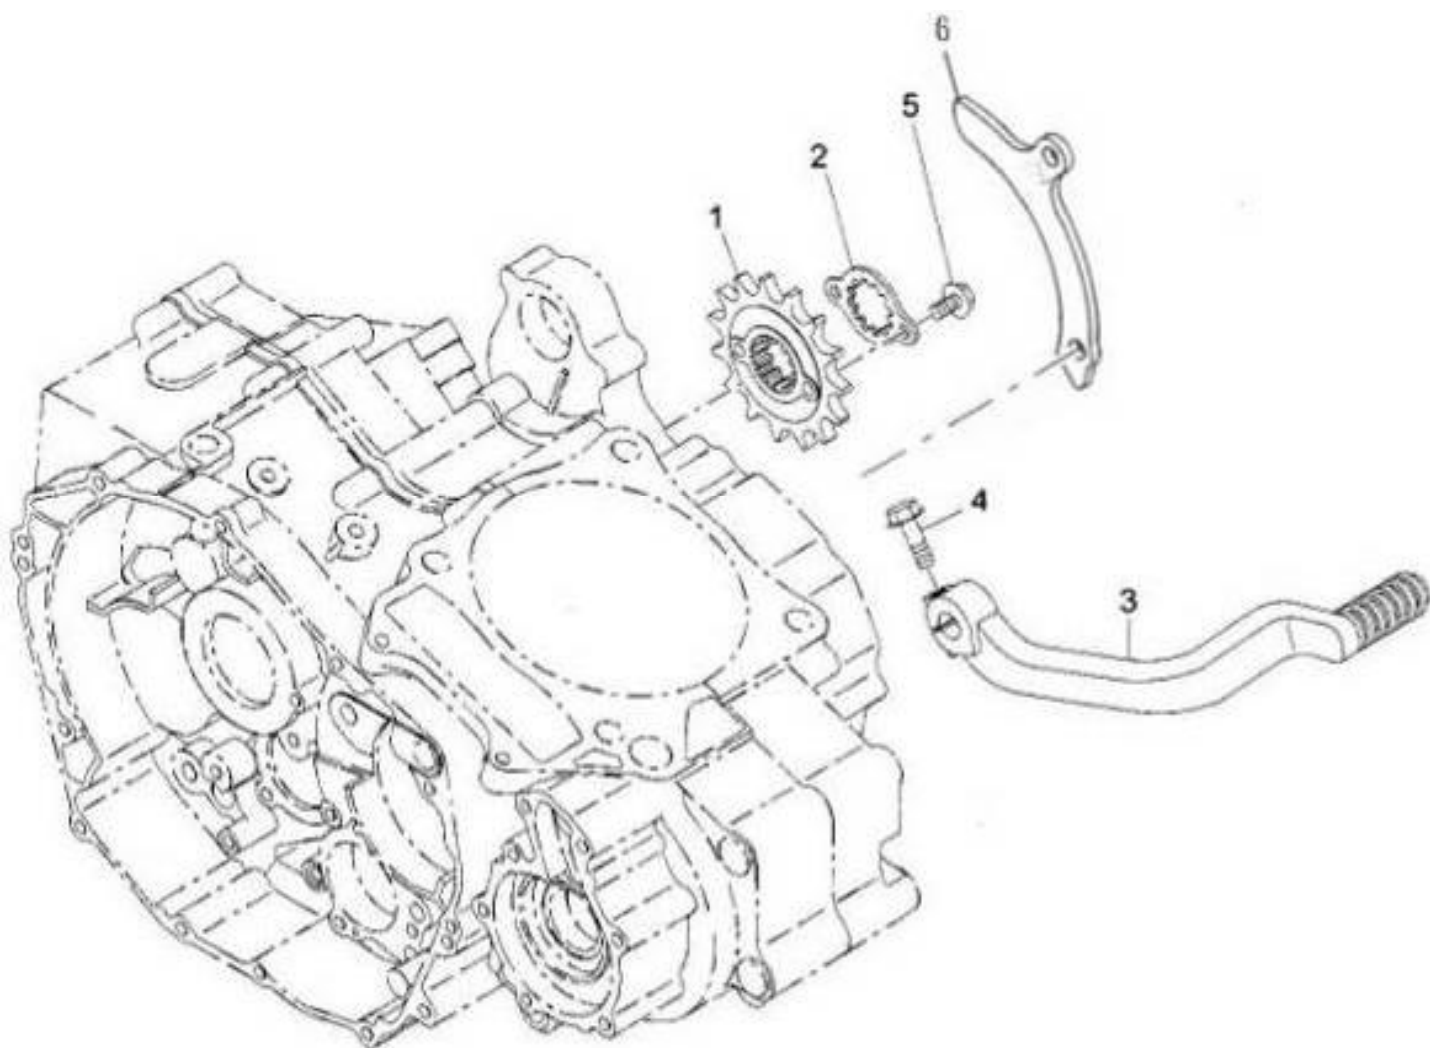

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	283-89603-03	1	DRIVE SPROCKET	驅動鏈輪組 (23801-501-000)
2	283-89702-03	1	DRIVE SPROCKET FIXING PLATE	驅動鏈輪固定板 (23811-501-000)
3	24700-501-000	1	GEAR CHANGE PEDAL ASS'Y	變速桿總成(鋁)
4	91000-06025B	1	HEX SOCKET BOLT	六角承窩螺栓(白)
5	96000-06012-08B	2	HEX FLANGE BOLT	六角緣面螺栓(白)
6	283-89503-03	1	CHAIN GUIDE	鏈條護板 (40516-501-000)

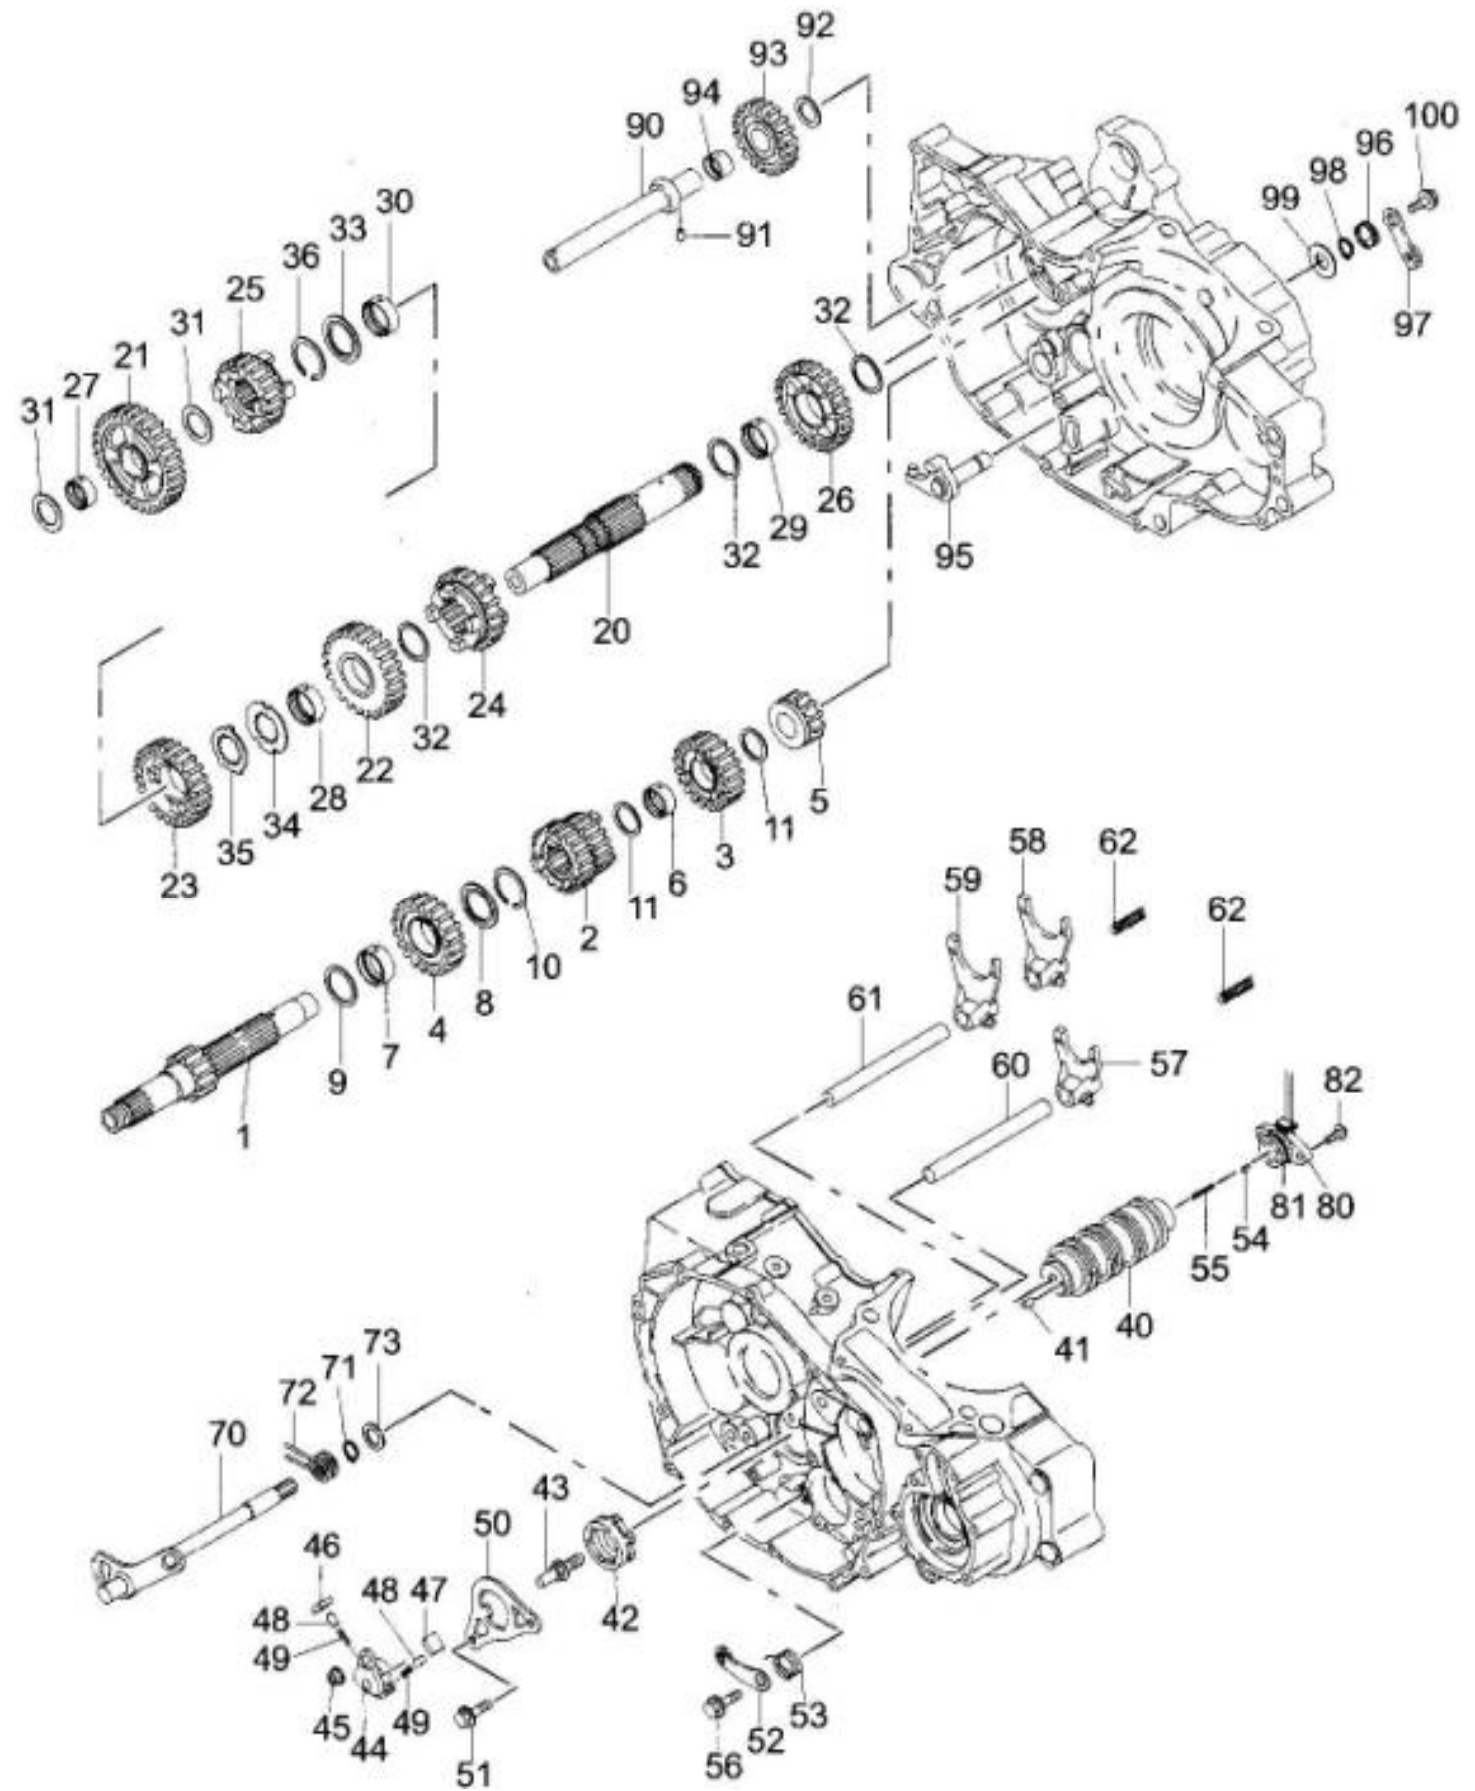


組件 編號：501-E12

離合器 2 CLUTCH

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	283-86202-00	1	MAIN SHAFT ASS'Y	變速主軸總成(23212-501-000)	
2	283-82208-03	1	M-2 GEAR	主軸二檔齒輪 (23441-501-000)	
3	283-82212-03	1	M-4 GEAR	主軸四檔齒輪 (23481-501-000)	
4	283-82213-03	1	M-5 GEAR	主軸五檔齒輪 (23501-501-000)	
5	283-82211-03	1	REVERSE GEAR(DRIVE)	倒檔驅動齒輪(24777-501-000)	
6	283-86406-03	1	COLLAR	間隔環	
7	283-86405-03	1	COLLAR	間隔環	
8	283-86701-03	1	SPLINE WASHER	片華司 (90455-501-000)	
9	283-86802-03	1	THRUST WASHER	止推華司 (90451-501-000)	
10	283-86901-03	1	CLIP	扣環	
11	283-86804-03	2	THRUST WASHER	止推華司 (90452-501-000)	
20	283-87002-00	1	COUNTER SHAFT ASS'Y	變速副軸總成(23222-501-000)	
	283-87002-01	1	COUNTER SHAFT ASS'Y	副滑動槽輪整體(23220-501-000)	
21	283-82106-03	1	GEAR COMP	副軸初速齒輪 (23421-501-000)	
22	283-82107-03	1	C-2 GEAR	副軸二檔齒輪 (23451-501-000)	
23	283-82108-03	1	C-3 GEAR	副軸三檔齒輪 (23471-501-000)	
24	283-82109-03	1	C-4 GEAR	副軸四檔齒輪(23491-501-000)	
25	283-82110-03	1	C-5 GEAR	副軸五檔齒輪 (23511-501-000)	
26	283-82111-03	1	COUNTERSHAFT REVERSE GEAR	副軸倒檔齒輪 (24776-501-000)	
27	283-86403-03	1	REVERSE GEAR BUSH	油套 (91007-501-000)	
28	283-86409-03	1	COLLAR	間隔環	
29	283-86405-03	1	COLLAR	間隔環	
30	283-86407-03	1	COLLAR(SPLINE)	間隔環(栓槽)	
31	283-86803-03	2	WASHER	墊圈	
32	283-87402-03	3	WASHER	墊圈	
33	283-86701-03	1	SPLINE WASHER	片華司 (90455-501-000)	
34	283-86801-03	1	WASHER	墊圈	
35	283-86702-03	1	LOCK WASHER	定位墊圈	
36	283-86901-03	1	CLIP	扣環	
40	283-87612-01	1	SHIFT DRUM	變速筒 (24301-501-000)	
=====				=====	

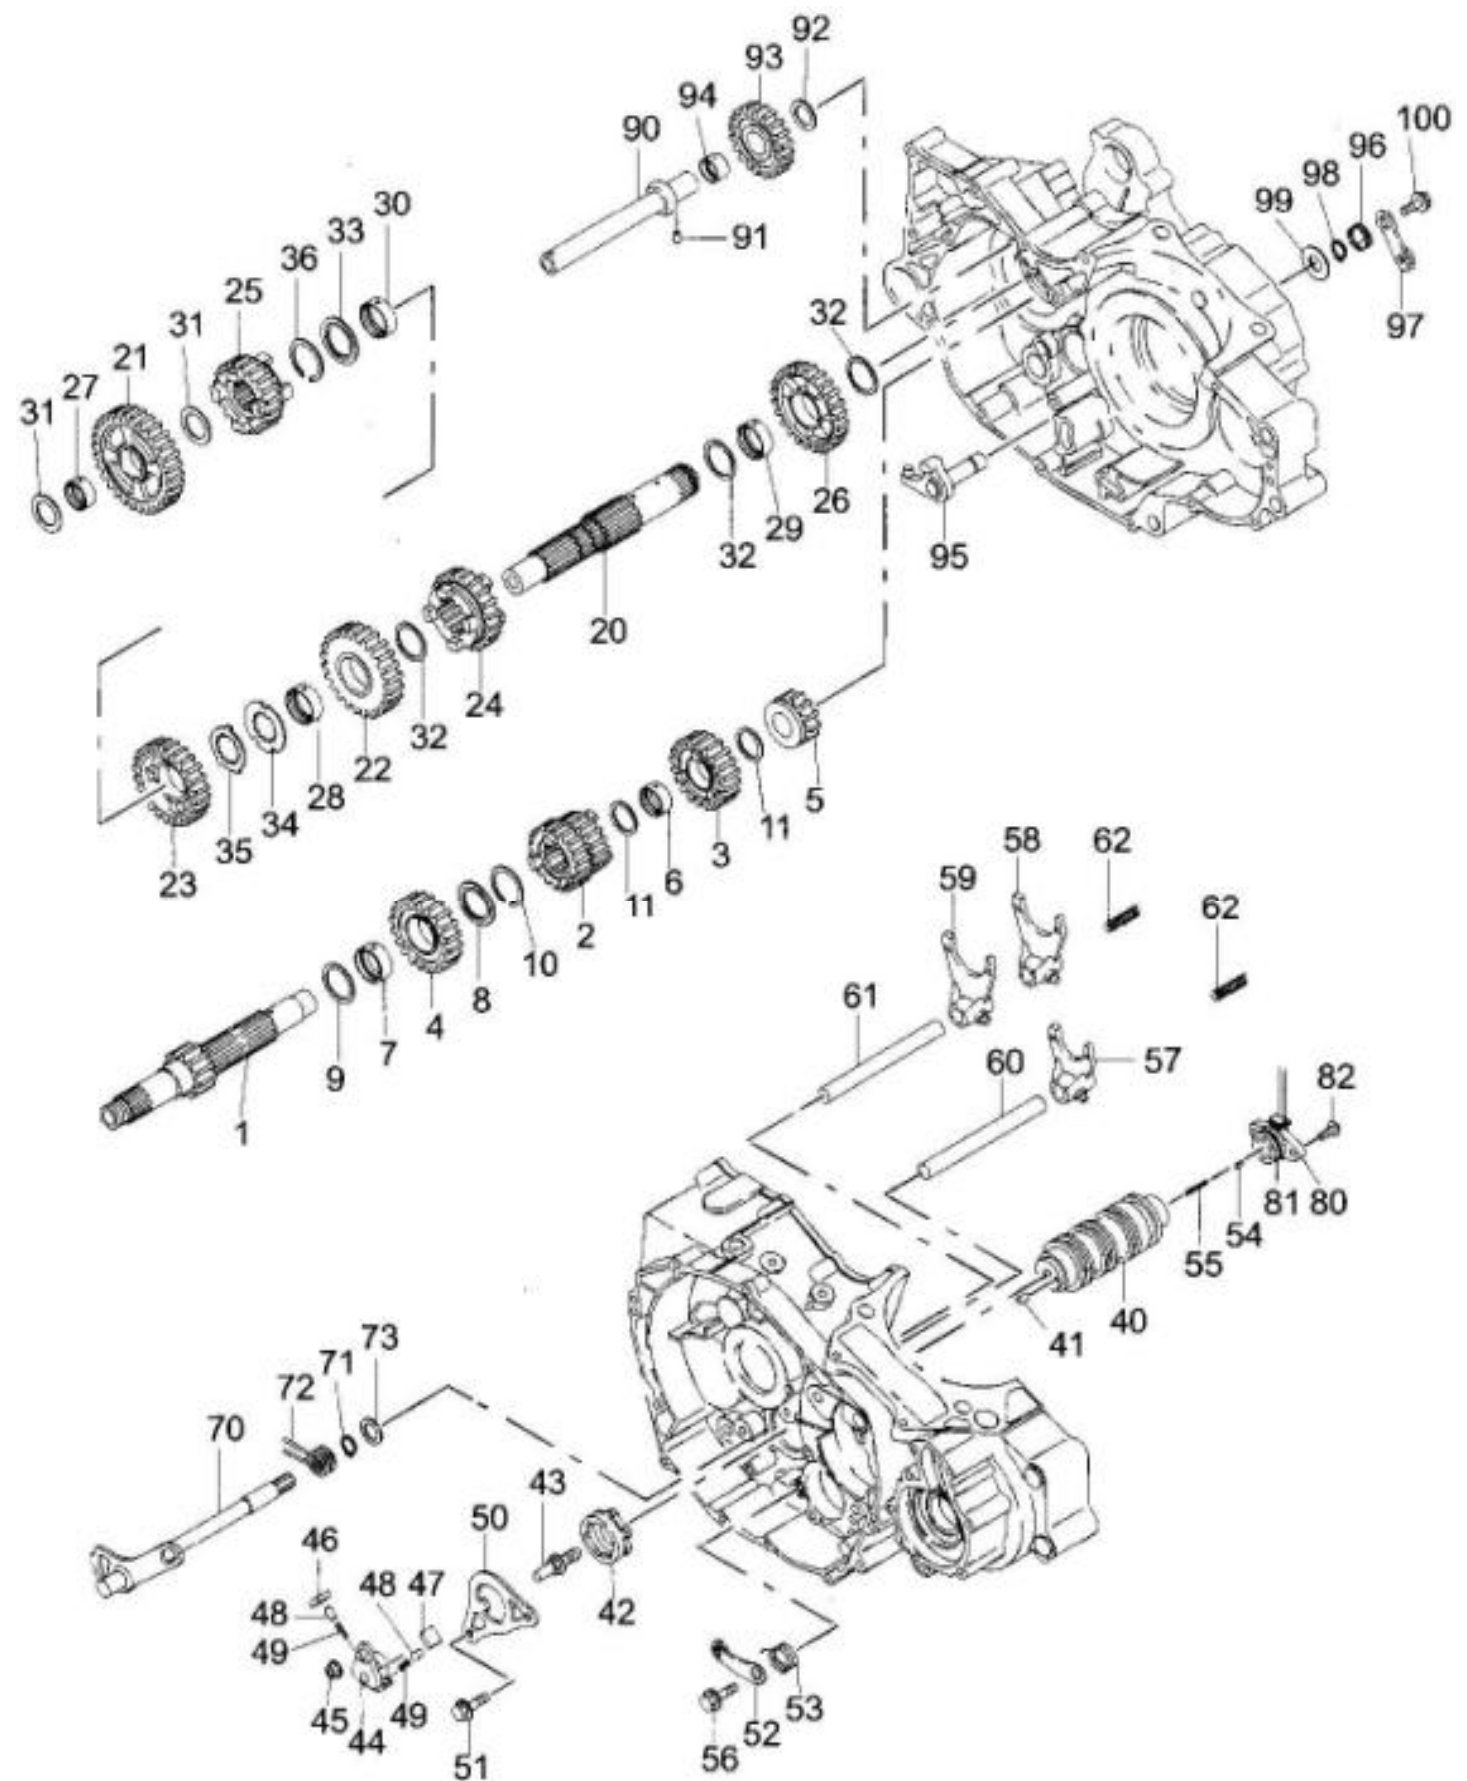


組件 編號：501-E12

離合器 2 CLUTCH

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
41	283-87801-03	1	COLLER	滾子(96220-40080)	
42	283-87702-03	1	GEAR SHIFT CAM	變速凸輪 (24411-501-000)	
43	283-8B001-03	1	SHIFTER PIN	定位梢 (24412-501-000)	
44	283-8B102-03	1	DRUM SHIFTER	定位鼓轉子 (24413-501-000)	
45	283-8B201-03	1	SHIFTER COLLAR	移動護套 (24414-501-000)	
46	283-8B301-03	1	RATCHET PAWL A	卡爪 A (24416-501-000)	
47	283-8B401-03	1	RATCHET PAWL B	卡爪 B (24415-501-000)	
48	283-8B501-03	2	PLUNGER	卡爪導筒 (24418-501-000)	
49	283-8B601-03	2	PLUNGER SPRING	卡爪彈簧 (24417-501-000)	
50	283-8B701-13	1	GUIDE PLATE	定位鼓固定片 (24419-501-000)	
51	96000-06020-10C	2	HEX FLANGE BOLT	六角緣面螺栓(五彩)	
52	283-8C301-01	1	GEAR SHIFT DRUM STOPPER COMP	變速筒制止器 (24430-501-000)	
53	283-88005-13	1	SHIFT DRUM STOPPER SPRING	變速統制止器彈簧(24435-501-000)	
54	283-88101-03	1	ROLLER	滾子(96220-38069)	
55	283-88201-03	1	SPRING(POINT)	定位彈簧(24401-501-000)	
56	283-89906-03	1	LADDER BOLT	台階螺絲(90111-0616045)	
57	283-88410-03	1	GEAR SHIFT FORK	變速叉 (24231-501-000)	
58	283-88411-03	1	L.GEAR SHIFT FORK	左變速叉 (24212-501-000)	
59	283-88412-03	1	R.GEAR SHIFT FORK	右變速叉 (24211-501-000)	
60	283-88506-03	1	SHIFT FORK GUIDE SHAFT	變速叉導桿 (24241-501-000)	
61	283-88506-03	1	SHIFT FORK GUIDE SHAFT	變速叉導桿 (24241-501-000)	
62	283-88601-03	2	SPRING	撥叉導桿彈簧(24243-501-000)	
70	283-8C002-11	1	SHIFT SHAFT ASS'Y	變速軸組 (24630-501-000)	
71	283-86902-03	1	SNAP RING	扣環	
72	283-8C201-03	1	GEAR SHIFT RETURN SPRING	變速回動彈簧 (24651-501-000)	
73	94101-1421010	1	PLAIN WASHER	平面墊圈	
80	283-89304-00	1	NEUTRAL SWITCH CONTACT ASS'Y	空檔燈接觸開關(35750-501-000)	
81	024-02100-10	1	OIL RING	油環(91321-501-000)	
82	013-10500-30	2	PANPHILLIPS BOLT	十字圓頭螺栓附墊圈(93502-05020)	
90	283-8A001-01	1	REVERSE IDLE GEAR ASS'Y	逆轉惰輪總成 (24773-501-000)	
91	283-87801-03	1	COLLER	滾子(96220-40080)	
=====				=====	

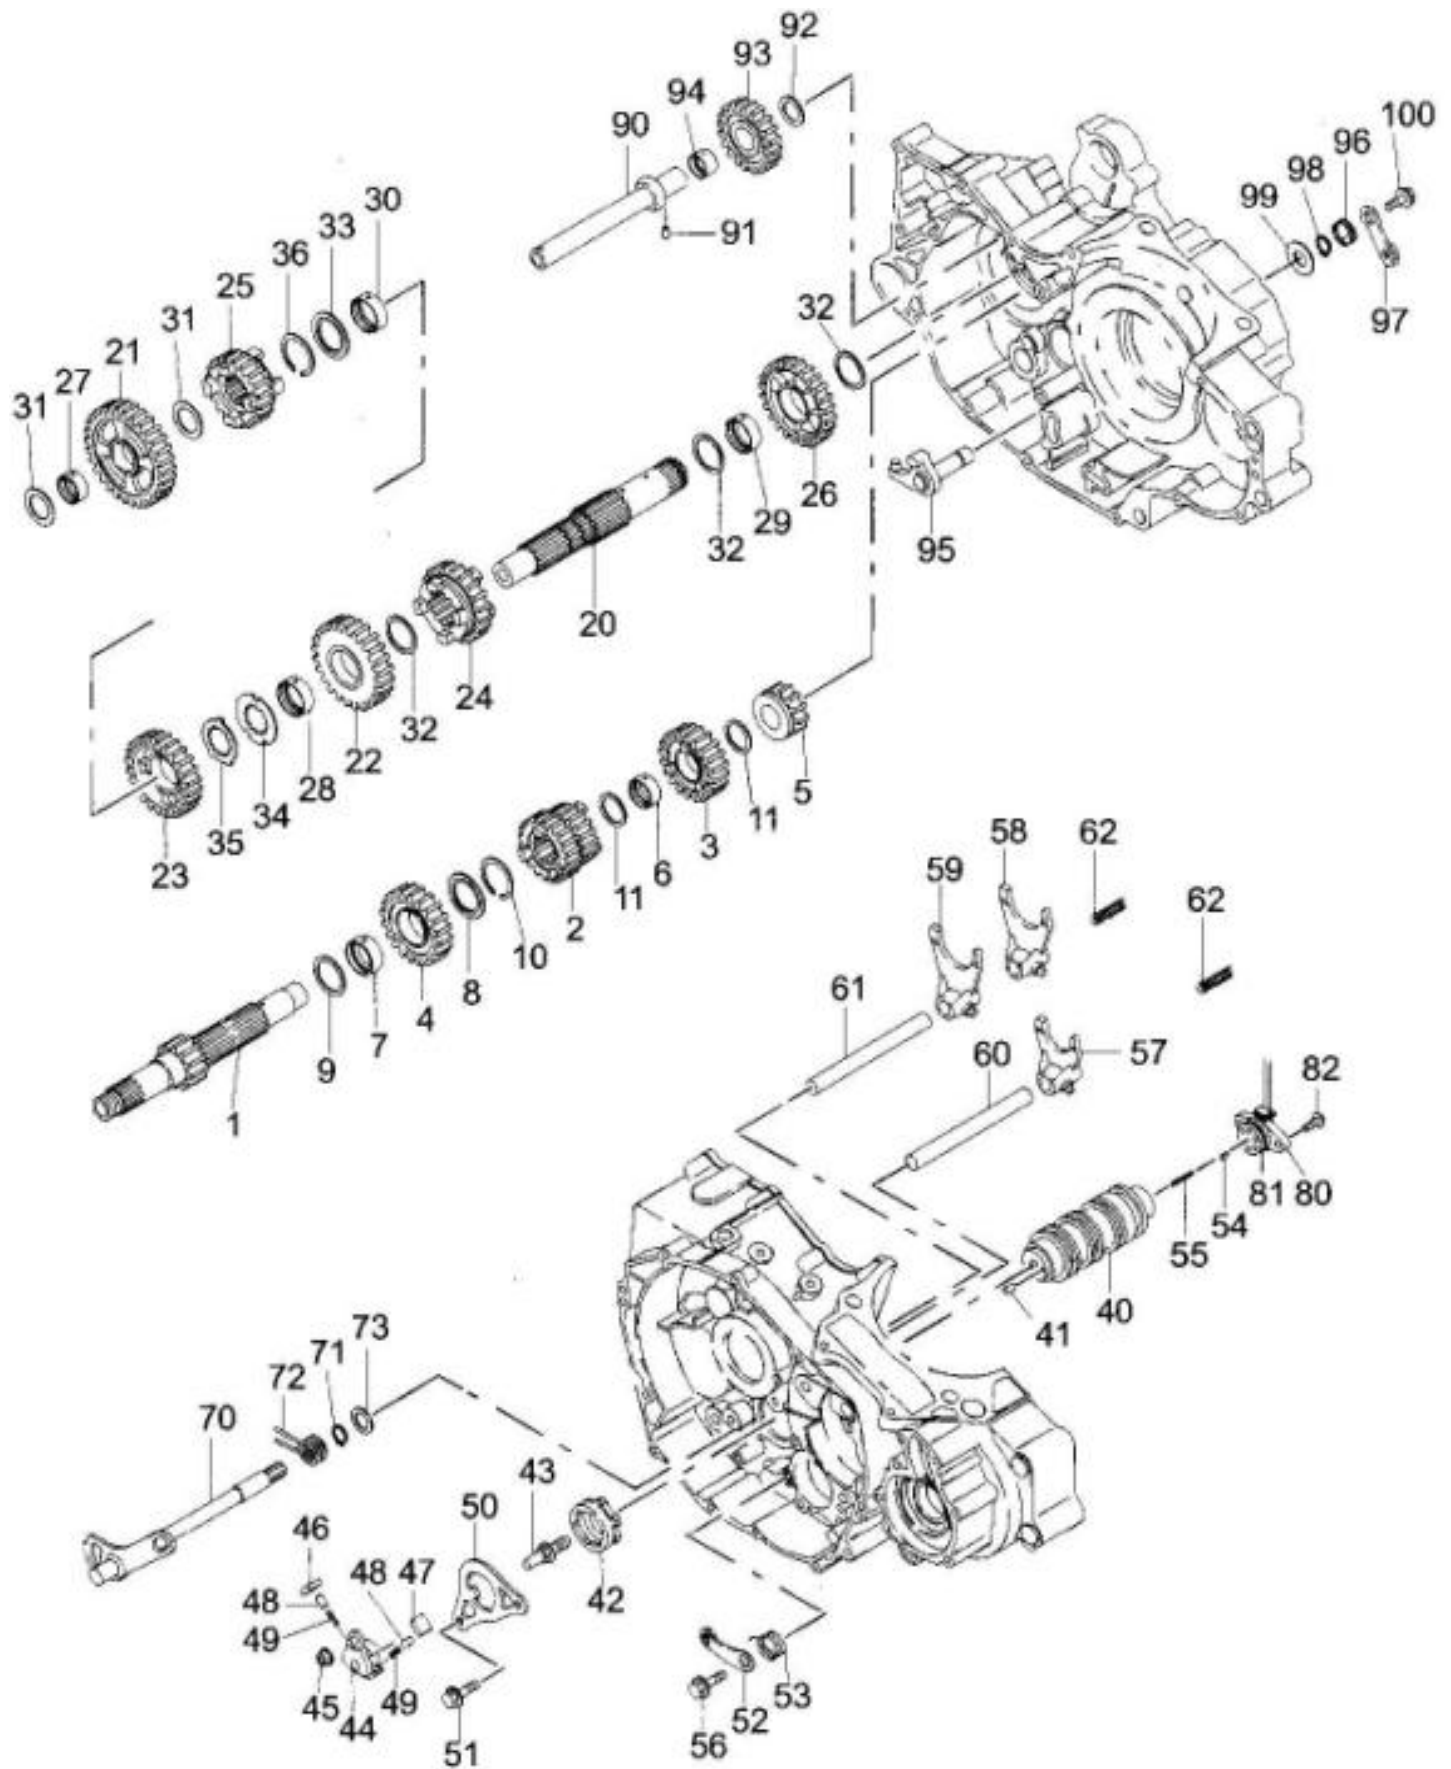


組件 編號：501-E12


離合器 2 CLUTCH

[TOP](#)

-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件 名 稱						
=====					=====				
92	94105-1624010	1	PLAIN WASHER		平面墊圈				
93	283-8A101-03	1	REVERSE SHAFT COMPL.		惰輪軸 (24775-501-000)				
94	283-86408-03	1	REVERSE IDLE GEAR BUSH		逆轉惰輪襯套(24774-501-000)				
95	283-8A201-01	1	GEAR SHIFT SPINDLE COMP		倒檔撥桿 (24610-501-000)				
96	283-8A401-03	1	REVERSE SHIFT DRUM STOPPER SPRING		變速筒倒檔制止器彈簧24432-501-				
97	283-8A301-03	1	REVERSE SHIFT STOPPER COMP		變速筒倒檔制止器(24431-501-000				
98	94511-1200S	1	EXTERNAL CIR CLIP		外環夾				
99	94101-1227010	1	PLAIN WASHER		平面墊圈				
100	96000-06012-08B	1	HEX FLANGE BOLT		六角緣面螺栓白				
=====					=====				

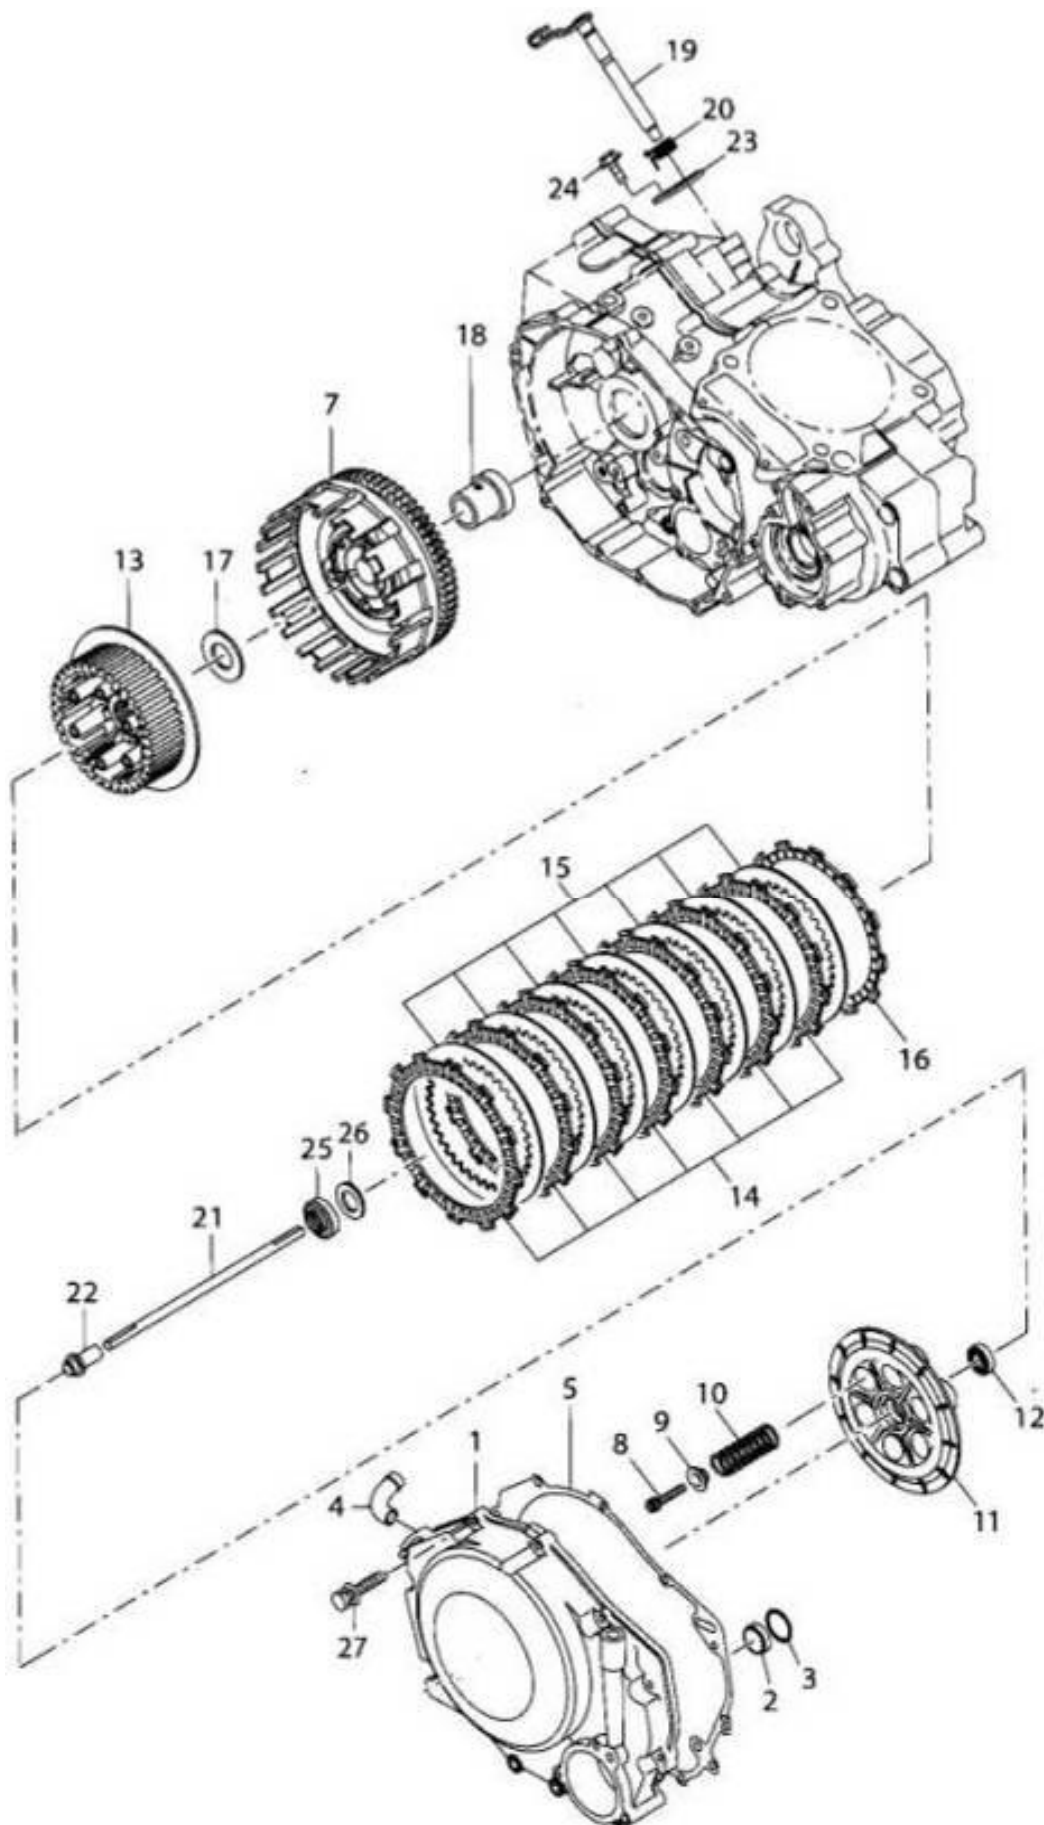

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	290-85004-01	1	RIGHT CRANKCASE COVER	右曲軸箱蓋 (11330-501-000)
2	283-85101-03	1	OIL SEAL(CRANK)	油封曲軸(22811-501-000)
3	003-14260-00	1	SNAP RING, INNER	內環
4	271-38201-01	1	PIPE COMPL.	通氣管
5	283-85302-03	1	R. CRANKCASE COVER GASKET	右曲軸箱蓋墊片 (11393-501-000)
7	283-83903-00	1	CLUTCH ASS'Y	離合器總成 (22100-501-000)
	283-83914-08	1	OUTER COMPL,CLUTCH	離合器外套 (22110-501-000)
8	91000-06025B	6	HEX SOCKET BOLT	六角承窩螺栓(白)
9	283-83905-08	6	FORMED WASHER	成型墊圈(94110-0620016)
10	283-83904-08	6	SPRING CLUTCH	離合器彈簧 (22401-501-000)
11	283-83909-08	1	DISK,CLUTCH PRESSURE	壓力板(22350-501-000)
12	283-83910-08	1	RADIAL BALL BEARING	滾珠軸承(96100-60010)
13	283-83902-18	1	CENTER COMPL,CLUTCH	離合器中座(22121-501-000)
14	283-83915-08	7	CLUTCH FRICTION DISK	離合器摩擦板 (22201-501-000)
15	283-83908-08	7	CLUTCH PLATE	離合器板 (22311-501-000)
16	283-83907-08	1	DISK B,CLUTCH FRICTION	摩擦板B(22202-501-000)
17	283-83913-08	1	PLAIN WASHER	平面墊圈(94105-2242025)
18	283-85502-03	1	DISTANCE COLLAR	油套(22500-501-000)
19	283-85601-01	1	CLUTCH LEVER COMP.	離合器桿 (22810-501-000)
20	283-85701-03	1	CLUTCH LEVER SPRING	離合器桿彈簧 (22815-501-000)
21	283-85802-03	1	CLUTCH LIFTER GUIDE PIN	離合器舉起導梢 (22366-501-000)
22	283-85901-03	1	CLUTCH LIFTER ROD	離合器舉起桿 (22850-501-000)
23	283-86102-03	1	PLATE(RELEASE SHAFT)	離合器桿壓板(22811-501-000)
24	011-00602-30	1	HEX WASHER FACE BOLT	六角緣面螺栓(96000-06020-08C)
25	980-26180-10	1	LOCK NUT	六角凸高止鬆螺帽(93961-18100)
26	980-35180-20	1	DISC SPRING WASHER	盤形墊圈(94113-1830023)
27	96000-06025-08B	11	HEX FLANGE BOLT	六角緣面螺栓(白)

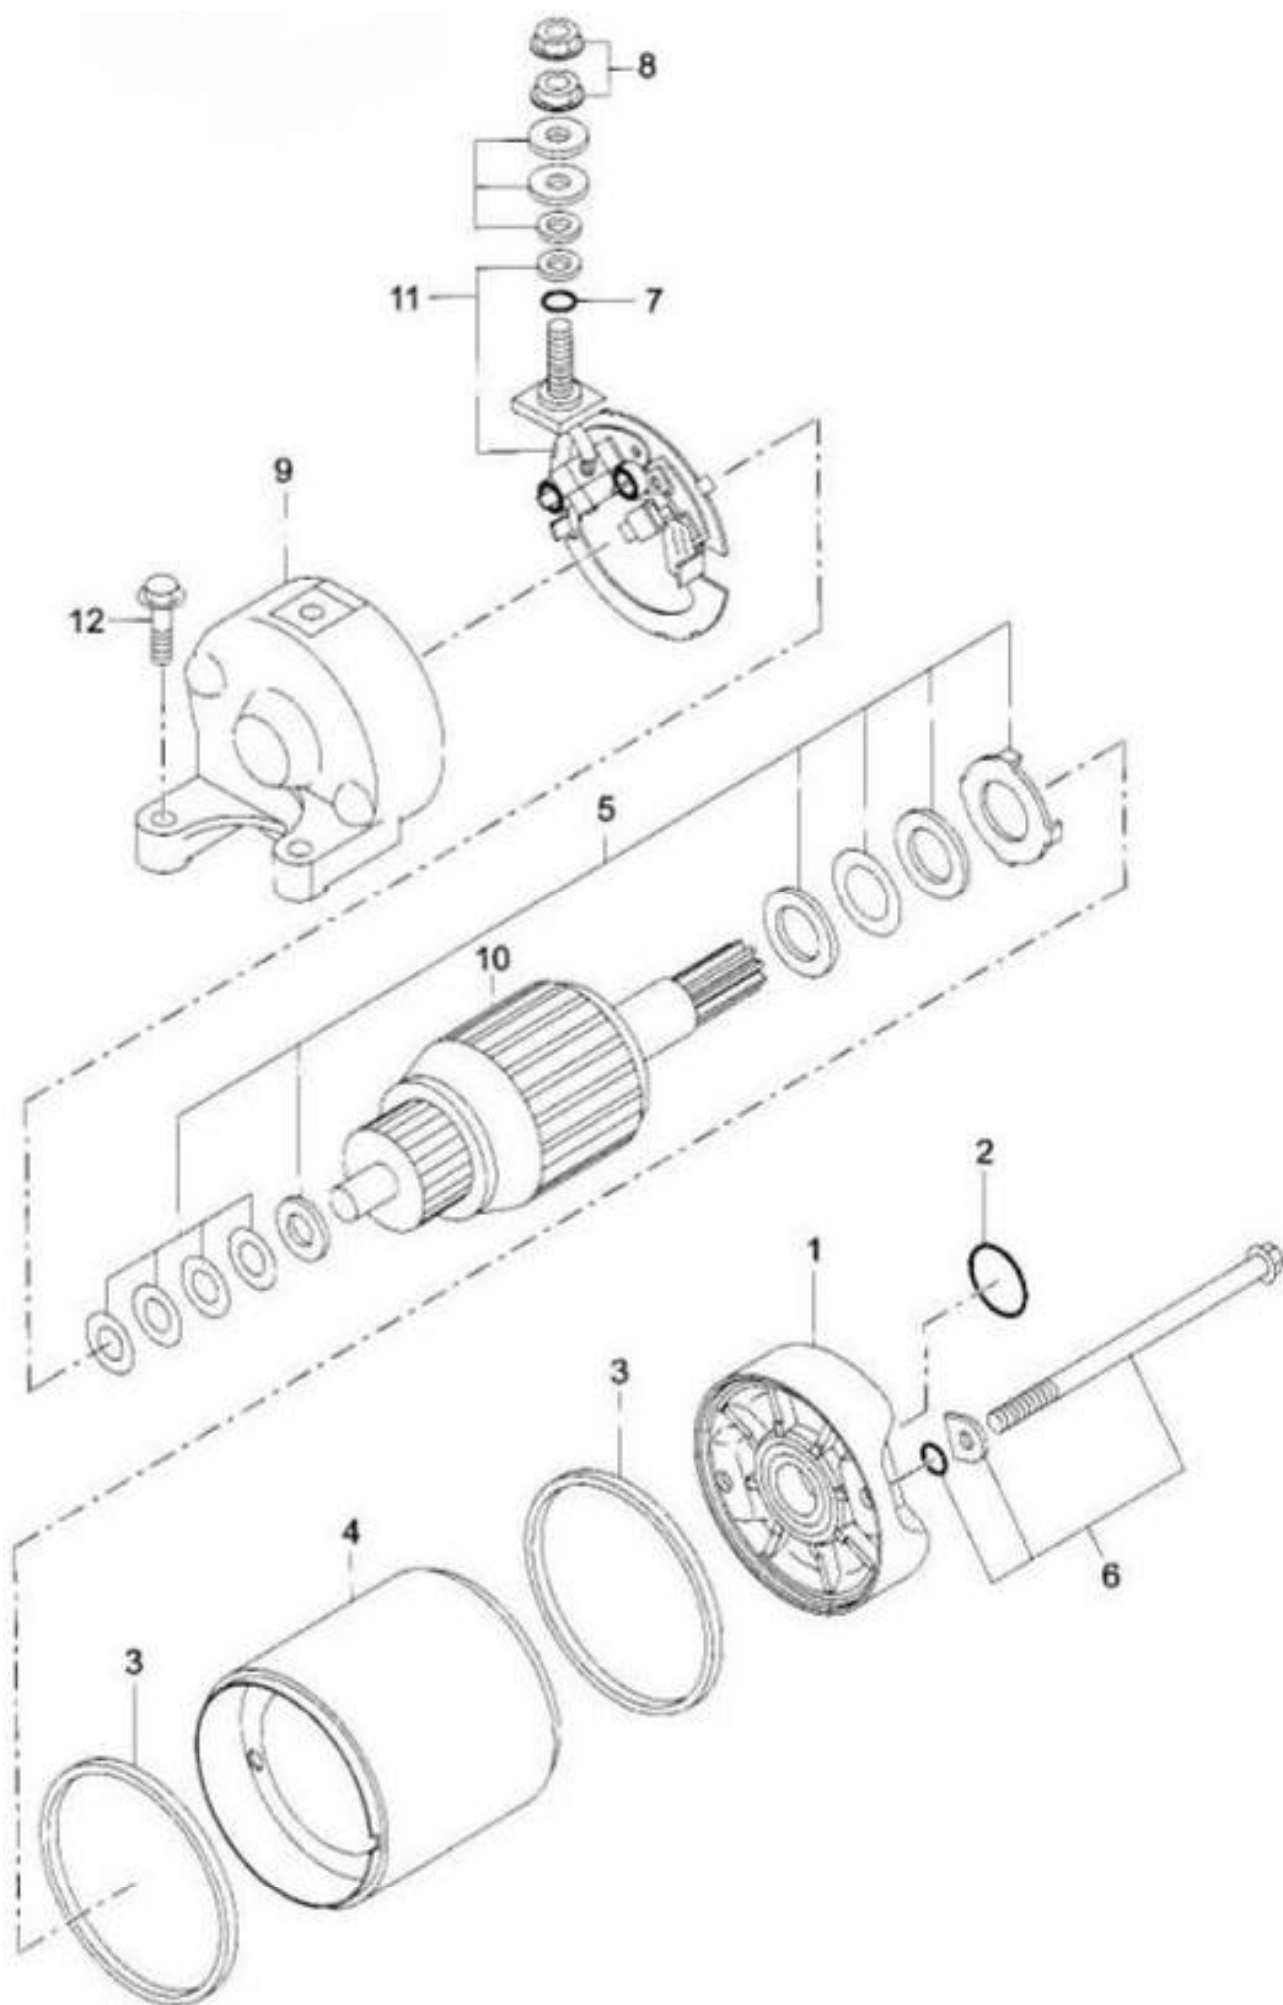


組件 編號：501-E14

起動馬達 STARTING MOTOR

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	283-70501-00	1	STARTING MOTOR ASS'Y	起動馬達總成 (31200-501-000)	
	257-70501-08	1	FRONT BRACKET ASSY	起動馬達前座	
2	164-70553-08	1	"O"RING	O 型環	
3	155-70572-08	2	RUBBER RING	橡膠環	
5	257-70550-08	1	WASHER SET	墊圈組	
6	257-70551-08	2	SET BOLT ASSY	螺栓組	
7	155-70575-08	3	"O"RING	O 型環	
8	94050-06000B	1	FLANGE NUT	六角緣面螺帽	
9	283-70505-08	1	REAR BRACKET ASSY	後托架組	
10	257-70552-08	1	ARMATURE ASSY	起動馬達心軸組	
11	155-70573-08	1	CARBON BRUSH SET	碳刷組	
12	96000-06025-08B	2	HEX FLANGE BOLT	六角緣面螺栓(白)	
=====				=====	

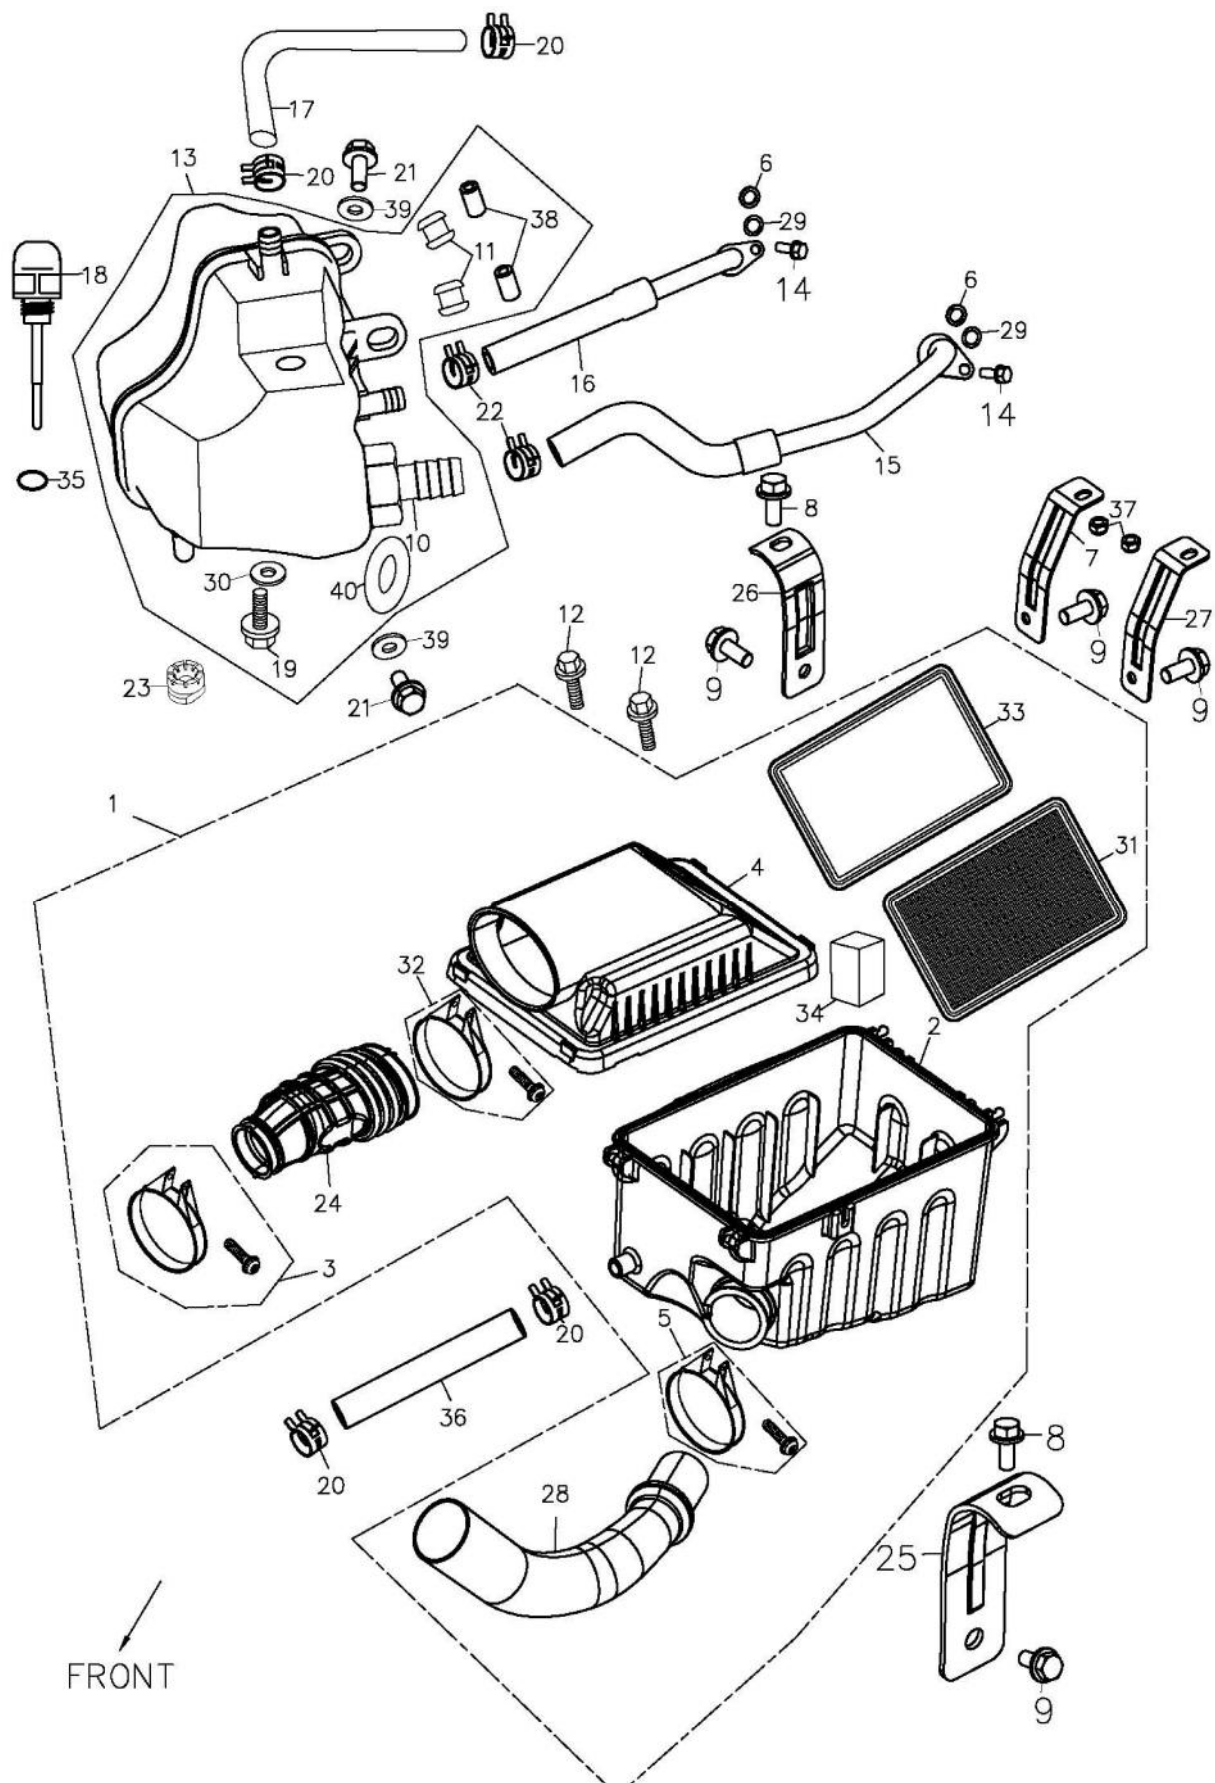


組件 編號：501-F01


空氣濾清器 & 副機油箱 A I R C L E A N E R & O I L T A N K

[TOP](#)


Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	17200-501-000	1	AIR CLEANER ASS'Y	空氣濾清器總成
2	17206-501-000	1	AIR CLEANER CASE	空氣濾清器箱
3	94516-74000	1	CLAMP	管夾
4	17207-501-000	1	CLEANER CASE CAP	空氣濾清器箱蓋
5	17255-501-000	1	CLAMP	夾環
6	94103-131820	2	COPPER PLAIN WASHER	平面墊圈(銅)
7	17284-501-000	1	REAR L.AIR CLEANER BRACKET	空氣濾清器後左托架
8	92003-06015K	2	HEX BOLT(TRIANGE)	六角螺栓(三角牙)-黑
9	96000-06012-08G	4	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)
10	55124-501-000	1	OIL FILTER SCREEN BOLT	機油濾網座
11	55123-501-000	2	GROMMET	機油箱減震橡膠
12	90111-06011-10G	2	LADDER BOLT	六角緣面台階螺栓(墨綠)
13	55110-501-000	1	OIL TANK ASS'Y	副機油箱總成
14	96000-06010-08B	2	HEX FLANGE BOLT	六角緣面螺栓(白)
15	55112-501-000	1	OIL SUCTION HOSE ASS'Y	機油箱進油管
16	55111-501-000	1	OIL RETURN HOSE ASS'Y	機油箱出油管
17	55113-501-000	1	BREATHER HOUSE	油氣回收管
18	15650-501-000	1	OIL LEVEL GAUGE	機油尺
19	11131-179-000	1	MAGNETIC DRAIN PLUG(COLOR)	機油洩放螺栓(五彩)
20	94513-16000	4	SPRING CLAMP	彈扣
21	96000-06035-10B	2	HEX FLANGE BOLT	六角緣面螺栓(白)
22	94513-17000	2	SPRING CLAMP	彈扣(B00035-03)
23	77211-145-001	1	RUBBER	緩衝橡膠
24	17253-501-000	1	VENT HOSE	空氣濾清器連接管
25	17281-501-000	1	FRONT R.AIR CLEANER BRACKET	空氣濾清器前右托架
26	17282-501-000	1	FRONT L.AIR CLEANER BRACKET	空氣濾清器前左托架
27	17283-501-000	1	REAR L.AIR CLEANER BRACKET	空氣濾清器後右托架
28	17213-501-000	1	SEAL OIL CLEANER COVER	空氣濾清器進氣管
29	91312-501-000	2	OIL RING	油環
30	94104-1320020	1	PLAIN WASHER	平面墊圈(鋁)

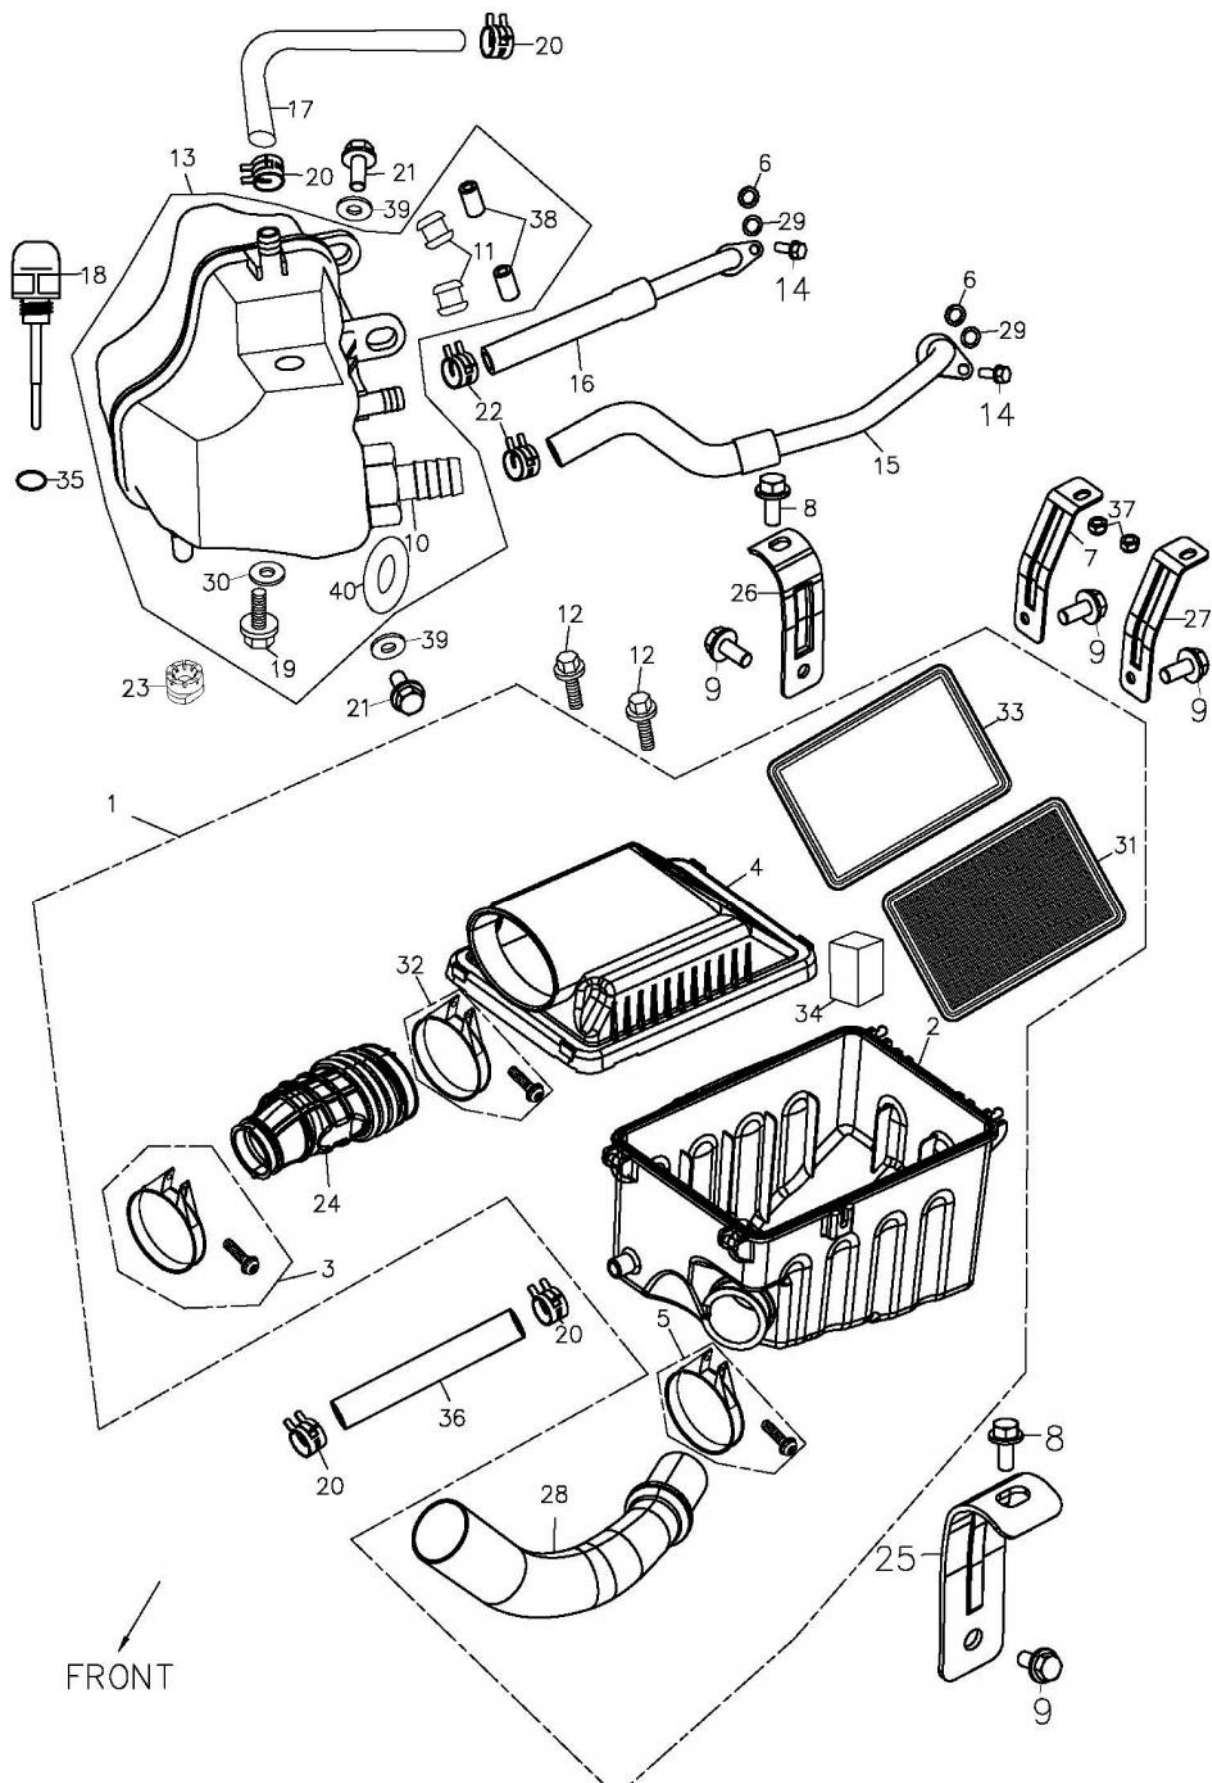


-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件 名 稱						
=====					=====				
31	17210-501-000	1	CLEANER FILTER NET		濾清器過濾網總成				
32	94516-91000	1	CLAMP		管夾(NO.64)				
33	17228-501-000	1	SPONGE A		過濾海綿A				
34	17229-501-000	1	SPONGE B		過濾海綿B				
35	91316-179-000	1	OIL RING		油環				
36	94400-1218230	1	HOSE		軟管(L=230)				
37	90350-06000G	2	NYLON NUT		止鬆螺帽(墨綠)				
38	96401-0610019	2	SPACE TUBE		間隔管				
39	94101-0618020B	2	PLAIN WASHER		平面墊圈(白)				
40	91318-108-000	1	OIL RING		油環				
=====					=====				

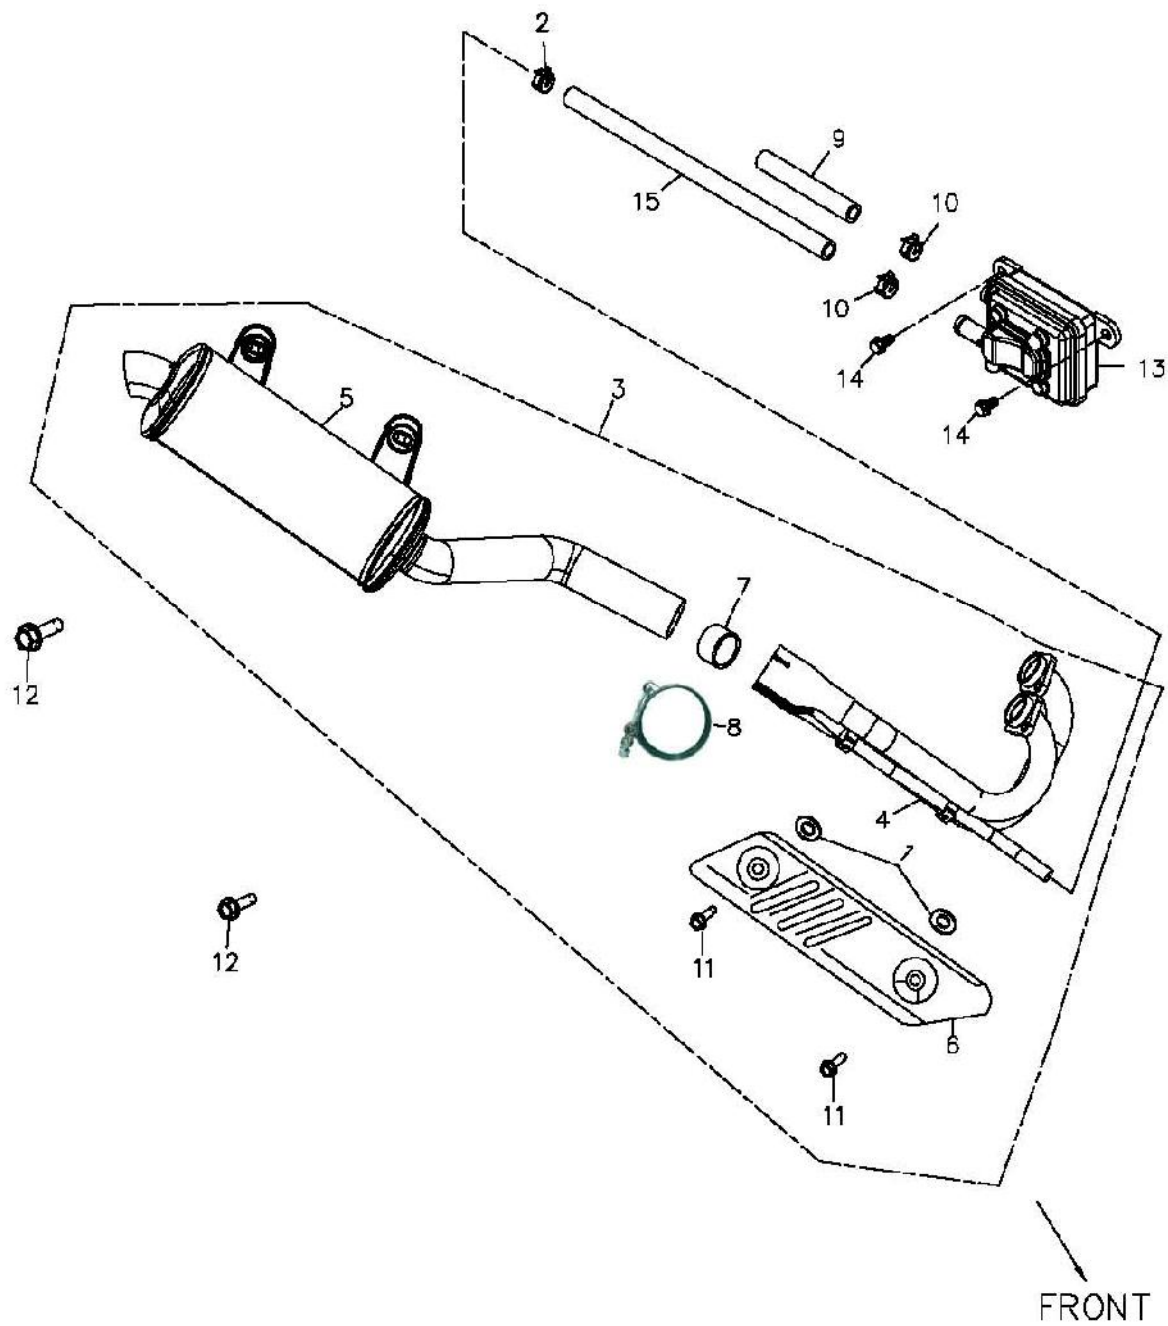

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	94102-0615010	2	PAPER PLATE WASHER	紙板墊圈
2	94513-18000	1	SPRING CLAMP	彈扣
3	18300-501-00A	1	EXHAUST PIPE ASS'Y	排氣管總成(觸媒)
4	18311-501-00A	1	EXHAUST PIPE OF FRONT SECTION	排氣管前段
5	18321-501-00A	1	SILENCER MUFFLER	排氣尾管
6	18301-154-000	1	PROTECTOR COMP MUFFLER	排氣管護板(電鍍)
7	18308-501-000	1	PIPE GASKET	排氣管襯套
8	18302-501-000	1	MUFFLER CLAMP	排氣管夾緊環
9	17411-501-000	1	REED VALVE COMP IN. PIPE	單向閥進氣管
10	94513-16000	2	SPRING CLAMP	彈扣
11	93701-06012S	2	PAN FLAT HEAD PHILLIPS BOLT	十字扁圓平頭螺栓
12	96000-10040-14G	1	HEX FLANGE BOLT	六角緣面螺栓(墨綠)
13	17410-116-000	1	REED VALVE COMP	單向閥
14	92006-06016-10G	2	HEX WASHER FACE BOLT	六角螺栓附墊圈(墨綠)
15	17412-501-000	1	REED VALVE COMP EX. PIPE	單向閥排氣管

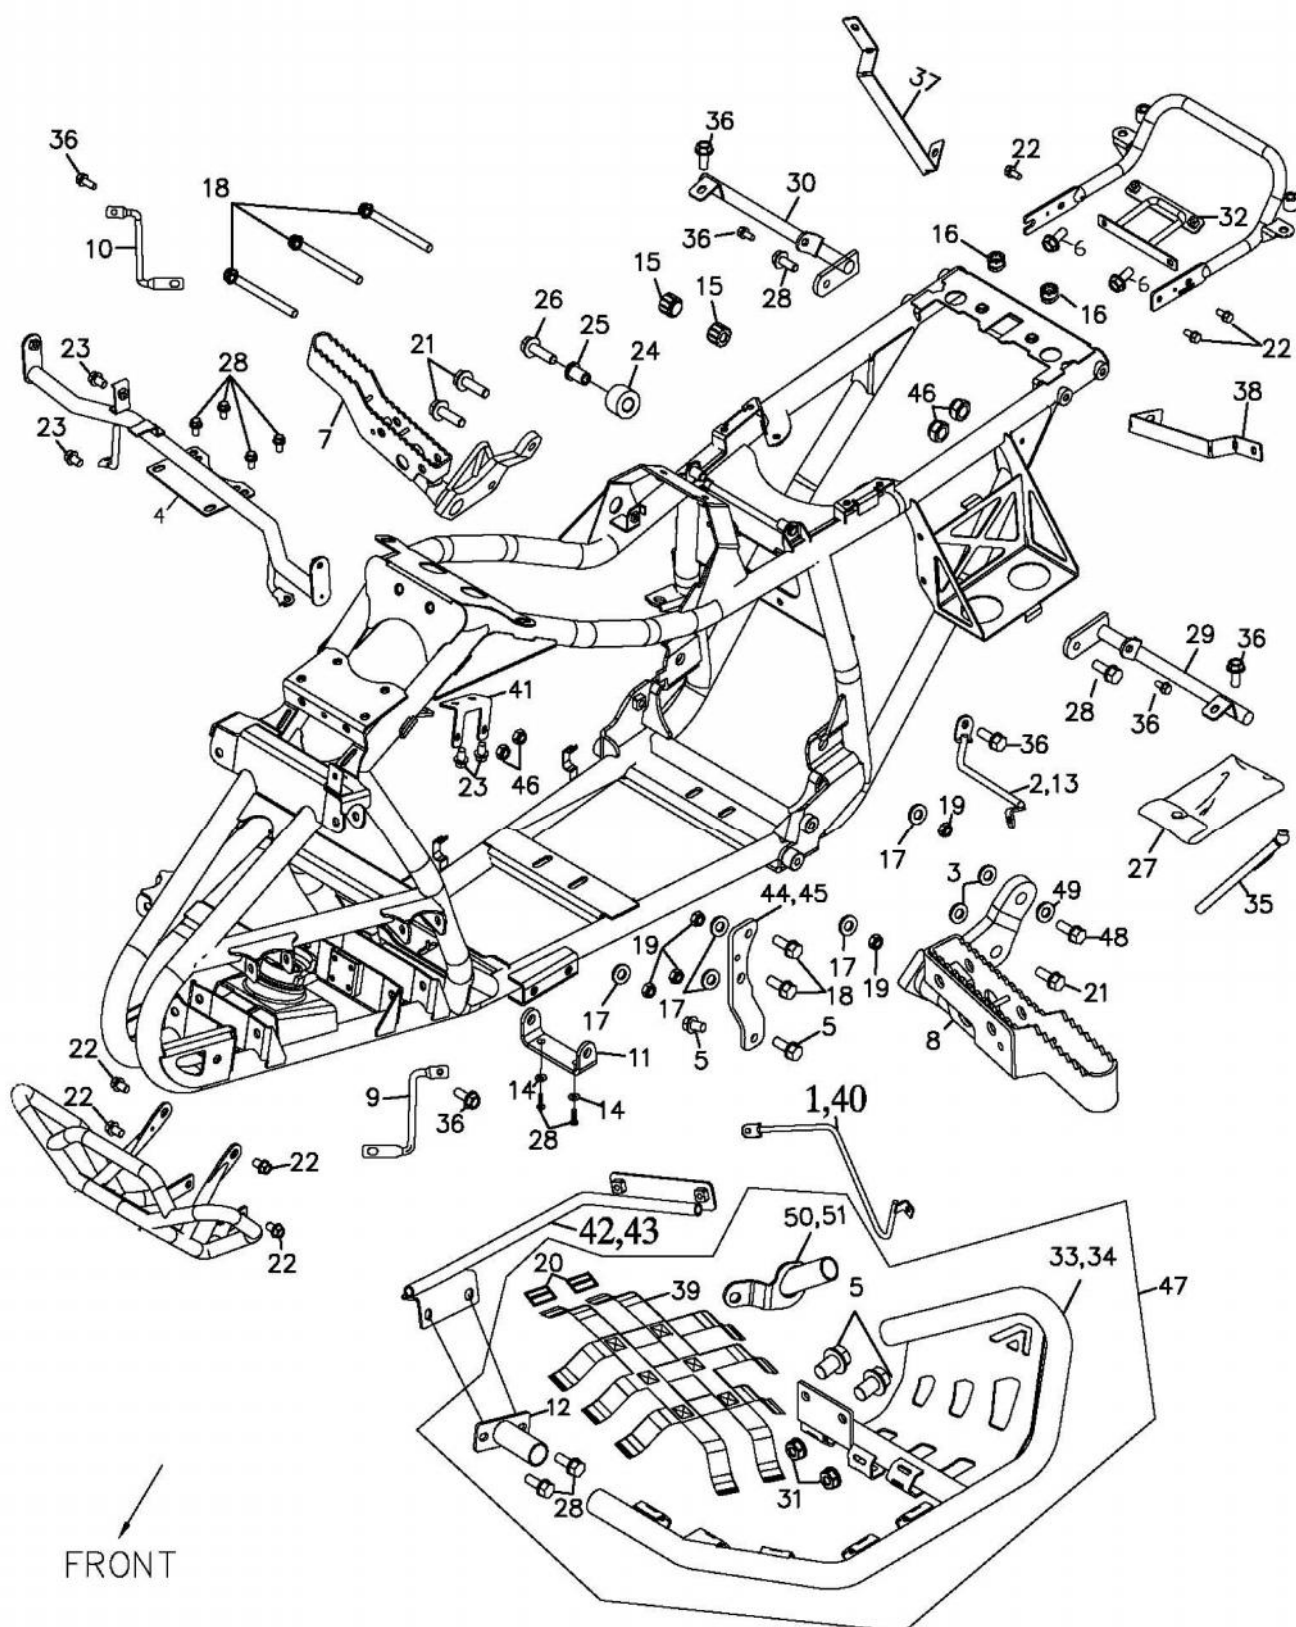

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	61104-501-000	1	R. BRACKET FOR FRONT FENDER	前土除右支架
2	83431-501-000	1	REAR COVER LOWER R.SUP.	後蓋右前固定桿
3	94101-1225050C	2	PLAIN WASHER	平面墊圈(五彩)
4	64309-501-000	1	FRONT COVER FIXED POLE	前蓋固定桿
5	96000-10020-14B	6	HEX WASHER FACE BOLT	六角緣面螺栓(白)
6	96000-06016-10G	6	HEX FLANGE BOLT	六角緣面螺栓(墨綠)
7	50717-182-00A	1	R.STEP BAR COMP	右腳踏桿(92/61)
8	50718-182-00A	1	L.STEP BAR COMP	左腳踏桿(92/61)
9	64341-225-000	1	FRONT COVER LEFT FIXED POLE	前蓋前左固定桿
10	64342-225-000	1	FRONT COVER RIGHT FIXED POLE	前蓋前右固定桿
11	54325-901-000	1	REAR ENG MT BRACKET(LOWER)	後引擎下固定片
12	64509-501-000	2	FOOLD PANEL SPACE	彎管套管
13	83432-501-000	1	REAR COVER LOWER R.SUP.	後蓋左前固定桿
14	94101-0822015B	2	PLAIN WASHER	平面墊圈(白)
15	77212-169-000	2	RUBBER	座墊固定橡膠
16	77211-145-001	2	RUBBER	緩衝橡膠
17	94101-1022020G	5	PLAIN WASHER	X平面墊圈(墨綠)
18	96000-10120-14G	5	HEX WASHER FACE BOLT	XX六角緣面螺栓
19	90350-10000Z	5	NYLON NUT	止鬆螺帽
20	64358-501-000	4	LOOP FOR PROTECTION NET	護網扣環(D 733)
21	96000-10035-14G	3	HEX WASHER FACE BOLT	六角緣面螺栓(耐落)
22	96000-10015-14G	7	HEX FLANGE BOLT	六角緣面螺栓(墨綠)-包裝
23	96000-06010-10K	4	HEXFLANGE BOLT	六角緣面螺栓
24	52112-169-000	1	CHAIN ROLLER	防撞膠套
25	52119-169-000	1	CHAIN ROLLER COLLER	防撞膠套襯套(版1)
26	96000-0803512CL	1	HEX WASHER FACE BOLT	六角緣面螺栓(加膠)
27	290-90301-00	1	TOOL BAG	工具包
28	96000-08016-12G	12	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)
29	83402-903-000	1	REAR COVER UP FIXED PLATE	後蓋上固定桿
30	83403-903-000	1	REAR COVER UP RIGHT FIXED PLATE	後蓋右固定桿

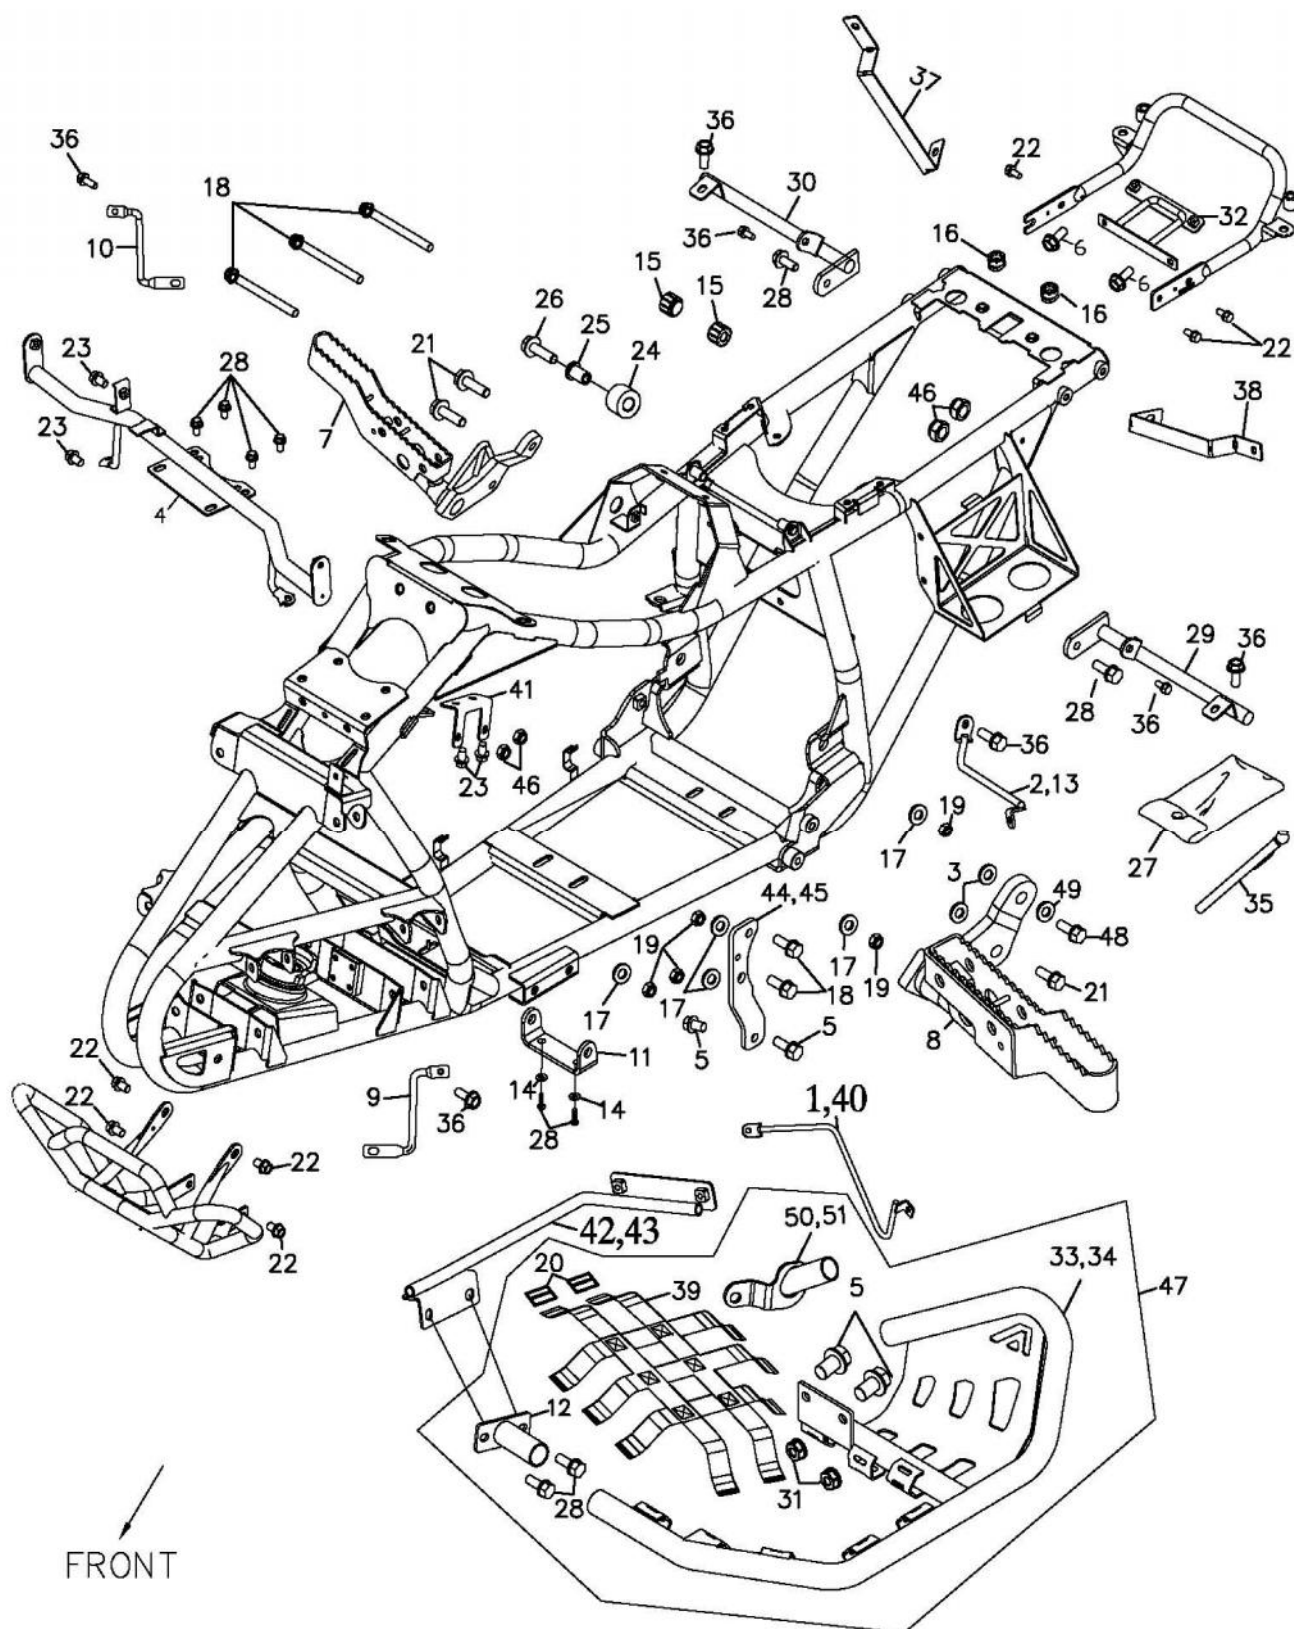


組件 編號：501-F03

車架總成 FRAME BODY

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
31	90350-10000B	31	NYLON NUT	止鬆螺帽(白)	
32	80120-903-000	1	PLATE BRACKET	牌照板固定架	
33	64507-501-000	1	R. FOOLD PANEL BAR	右踏彎管(含套管)	
34	64508-501-000	1	L. FOOLD PANEL BAR	左踏彎管(含套管)	
35	42714-145-000	1	TIRE PRESSURE GAGE	胎壓計	
36	96000-06014-10G	8	HEX FLANGE BOLT	X*六角緣面螺栓(墨綠)	
37	33449-225-000	1	R.R. BLINKER BRACKET	後右方向燈固定座	
38	33461-225-000	1	R.L. BLINKER BRACKET	後左方向燈固定座	
39	64324-501-000	2	FOOLR PANEL NET	腳踏板護網	
40	61103-501-000	1	L. BRACKET FOR FRONT FENDER	前土除左支架	
41	54486-501-000	1	IG COIL BEACKRT	高壓線圈固定座	
42	64307-501-000	1	FRONT COVER LEFT FIXED POLE	前蓋左固定桿	
43	64308-501-000	1	FRONT COVER RIGHT FIXED POLE	前蓋右固定桿	
44	50201-501-000	1	R.ENGINE FIXED PLATE	右引擎托架	
45	50202-501-000	1	L.ENGINE FIXED PLATE	左引擎托架	
46	94050-06000G	4	HEX FLANGE NUT WITH SERRATION	六角緣面螺帽(墨綠)	
47	64310-501-000	1	FLOOR PANEL(AL)	鋁腳踏板	
48	96000-10045-14G	1	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)	
49	94101-1222060G	1	PLAIN WASHER	平面墊圈(墨綠)	
50	64510-501-000	1	R.NURFBAR FIX BRACKET	右踏固定座	
51	64511-501-000	1	L.NURFBAR FIX BRACKET	左踏固定座	
=====				=====	

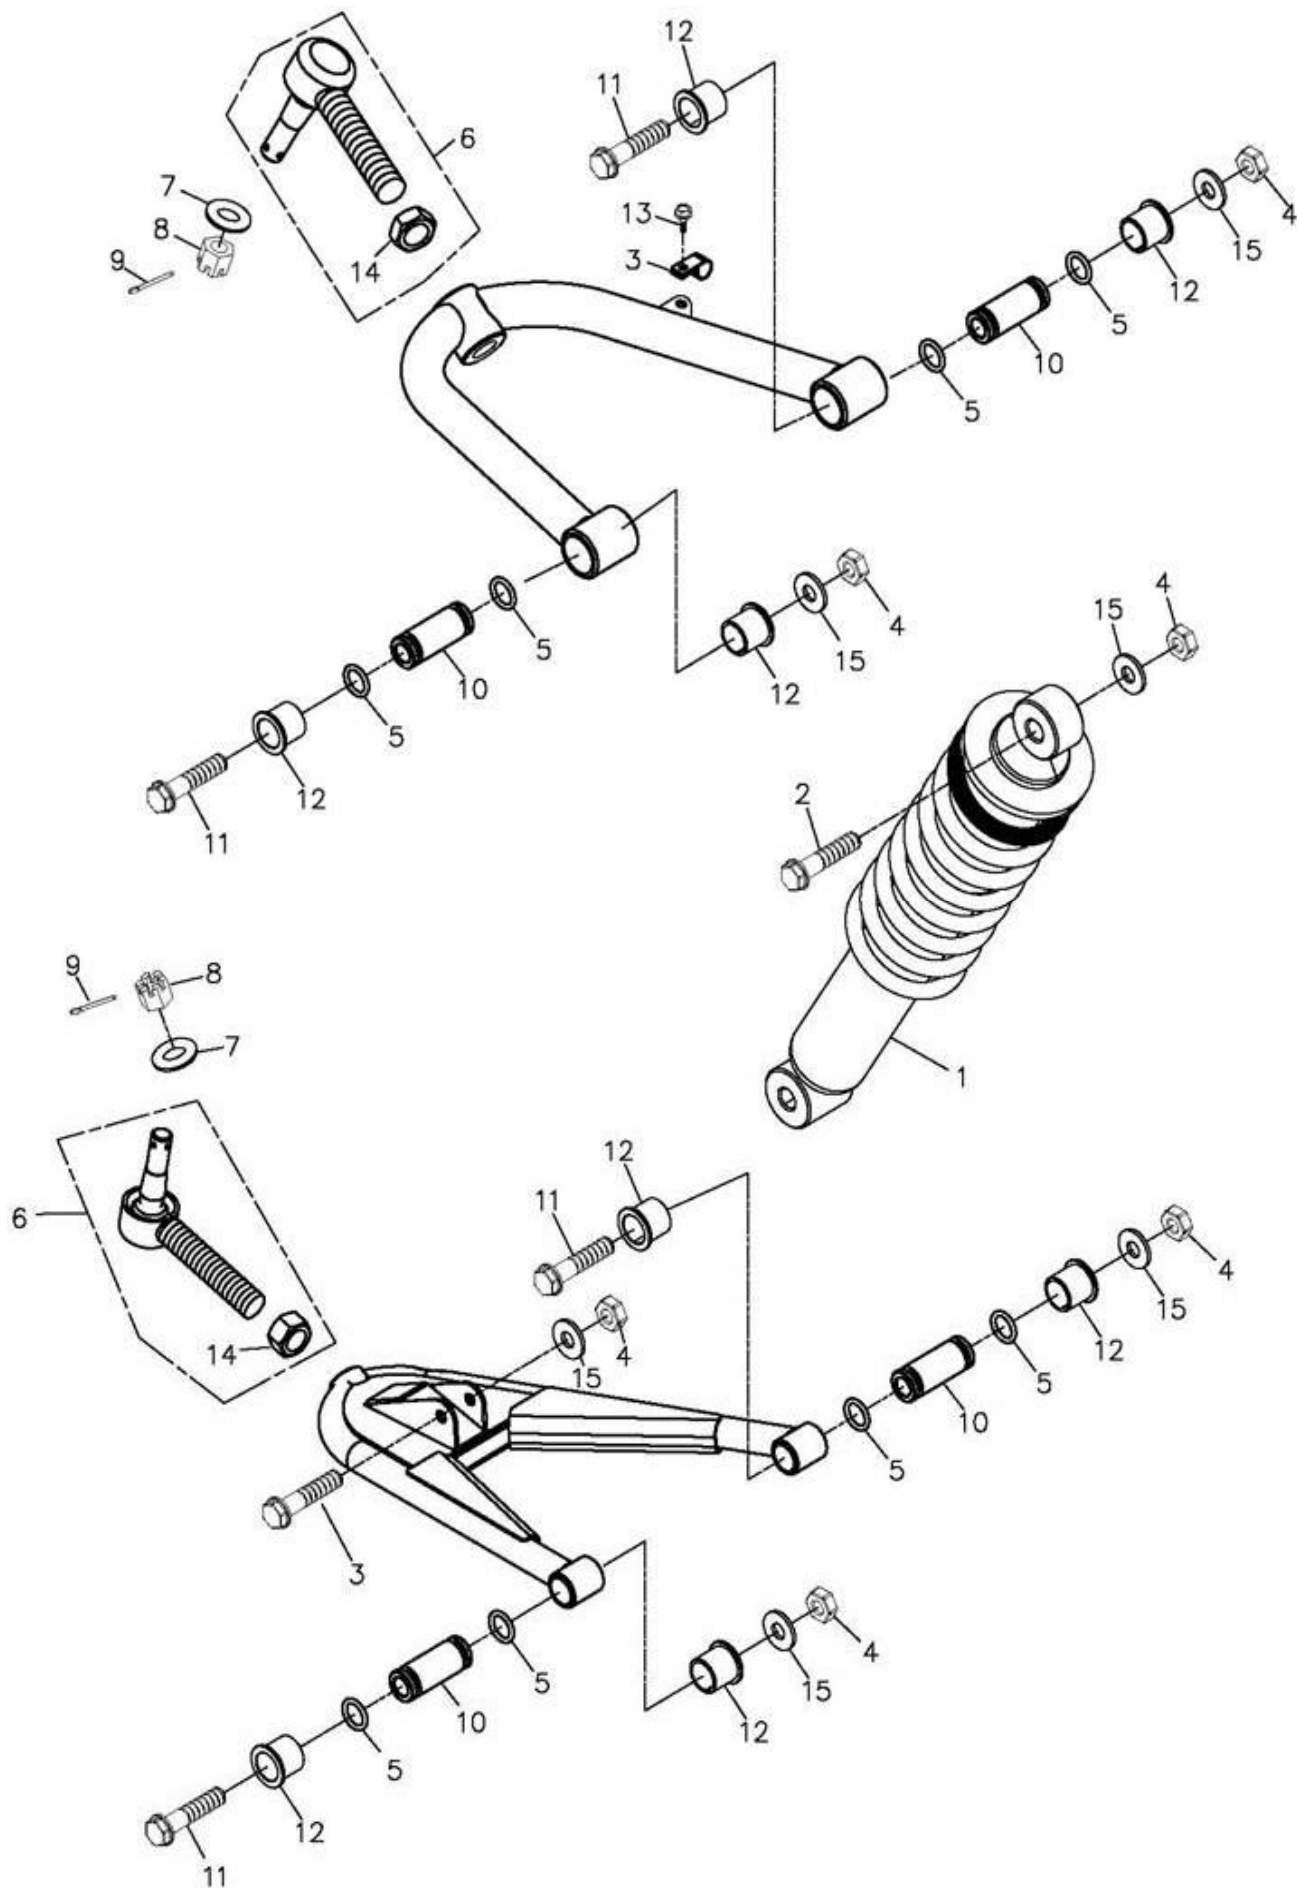


組件 編號：501-F04


三角架 ARM

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	51400-501-000	2	FRONT CUSHION ASS`Y	前避震器	
2	96000-10050-14G	4	HEX FLANGE BOLT	六角緣面螺栓(墨綠)	
3	45452-197-000	2	BRAKE HOSE CLAMP	軟管固定夾(版1)	
4	90350-10000G	12	NYLON NUT	止鬆螺帽(墨綠)	
5	91312-169-00A	16	O-RING	油環	
6	44540-901-000	4	BALL JOINT	萬向頭	
7	94101-1222020G	4	PLAIN WASHER	平面墊圈(墨綠)	
8	94051-12000-17G	4	HEX, SLOTTED NUT	開槽螺帽(墨綠)	
9	94201-30320B	4	COTTER PIN	開口梢(白)	
10	51350-169-00A	8	BUSHING	軸襯套	
11	96000-10065-14G	8	HEX FLANGE BOLT	六角緣面螺栓X (墨綠)	
12	51202-169-000	16	BUSH	含油襯套-版1	
13	96000-06012-10G	2	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)	
14	94001-16000	4	HEX NUT	六角螺帽	
15	94101-1020020G	10	COPPER PLAIN WASHER	平面墊圈(墨綠)	
=====				=====	

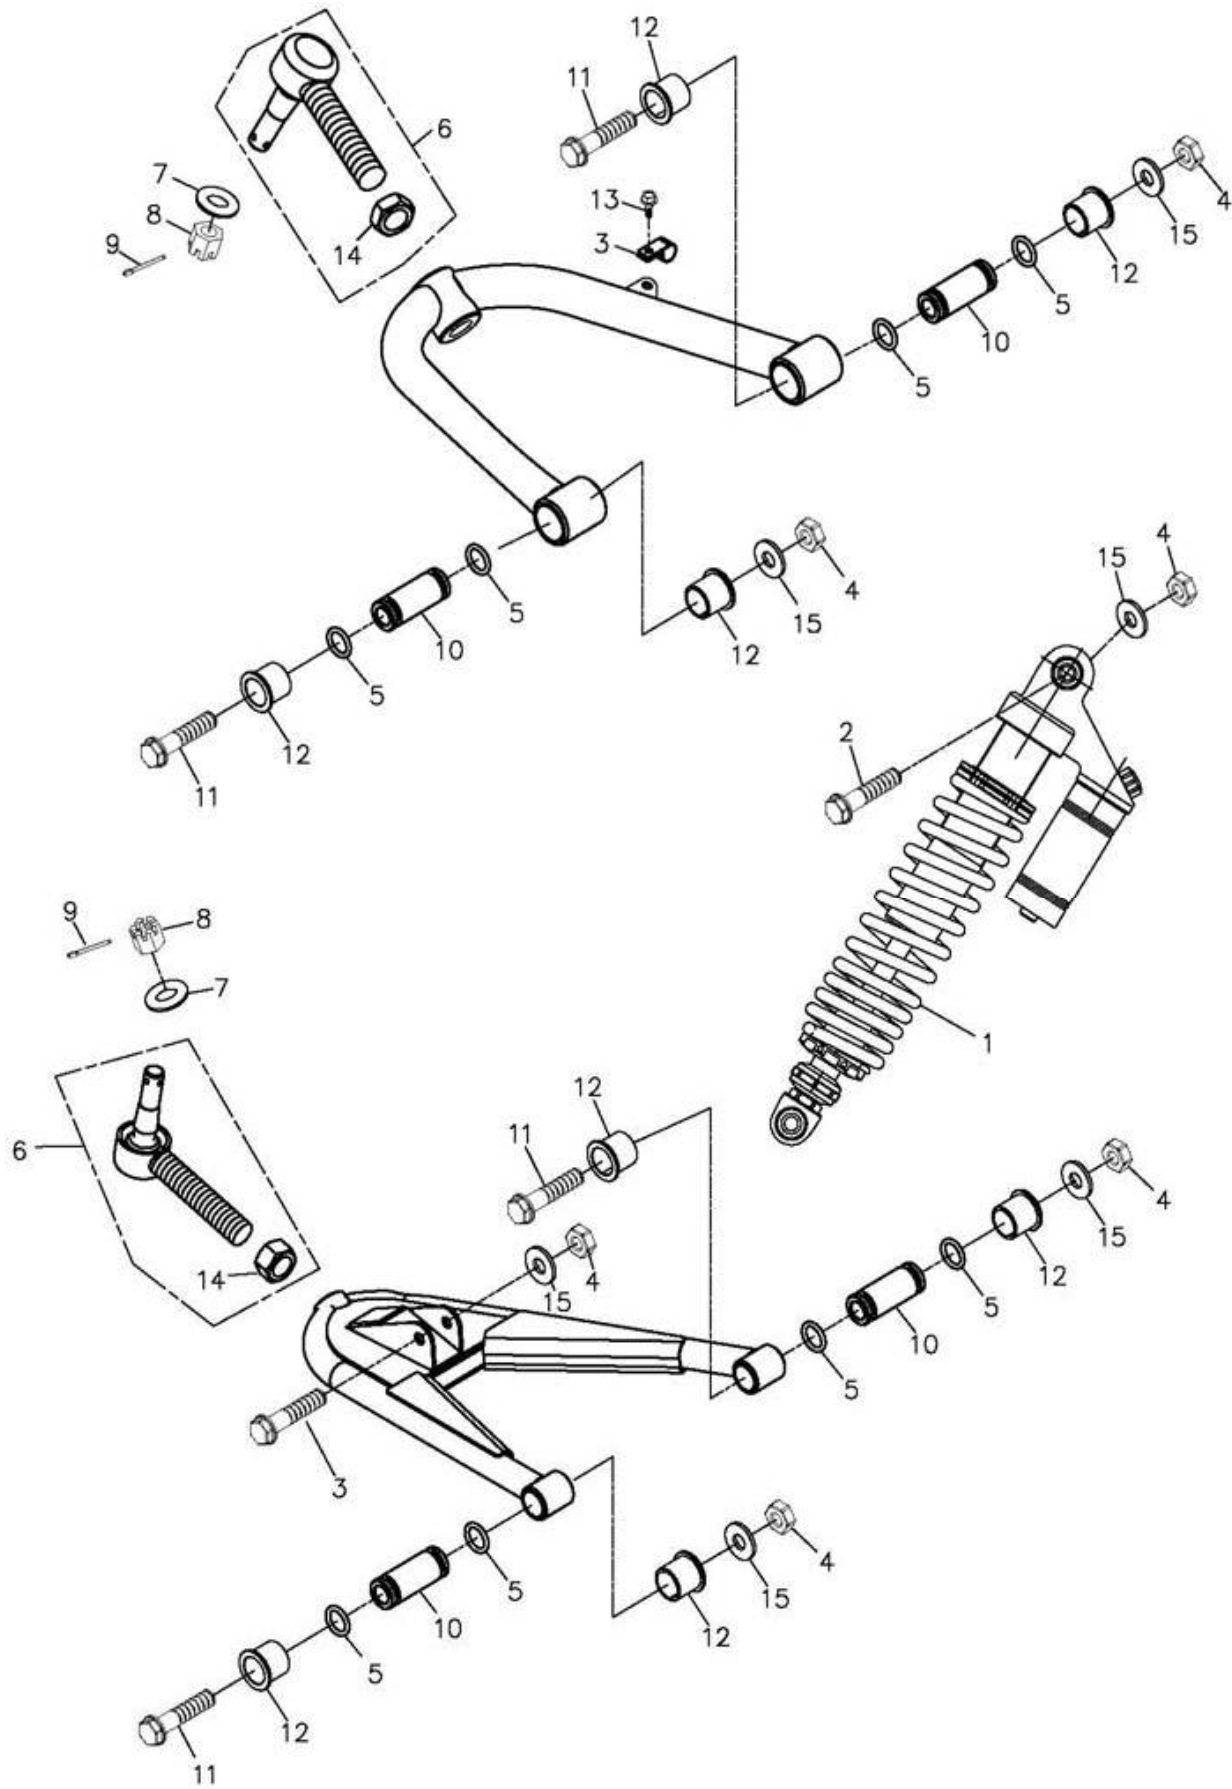

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	51400-501-00A	2	FRONT CUSHION ASS`Y(NITROGEN)	前避震器(氮氣)	
2	96000-10050-14G	4	HEX FLANGE BOLT	六角緣面螺栓(墨綠)	
3	45452-197-000	2	BRAKE HOSE CLAMP	軟管固定夾(版1)	
4	90350-10000G	12	NYLON NUT	止鬆螺帽(墨綠)	
5	91312-169-00A	16	O-RING	油環	
6	44540-901-000	4	BALL JOINT	萬向頭	
7	94101-1222020G	4	PLAIN WASHER	平面墊圈(墨綠)	
8	94051-12000-17G	4	HEX,SLOTTED NUT	開槽螺帽(墨綠)	
9	94201-30320B	4	COTTER PIN	開口梢(白)	
10	51350-169-00A	8	BUSHING	軸襯套	
11	96000-10065-14G	8	HEX FLANGE BOLT	六角緣面螺栓X (墨綠)	
12	51202-169-000	16	BUSH	含油襯套-版1	
13	96000-06012-10G	2	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)	
14	94001-16000	4	HEX NUT	六角螺帽	
15	94101-1020020G	10	COPPER PLAIN WASHER	平面墊圈(墨綠)	
=====				=====	

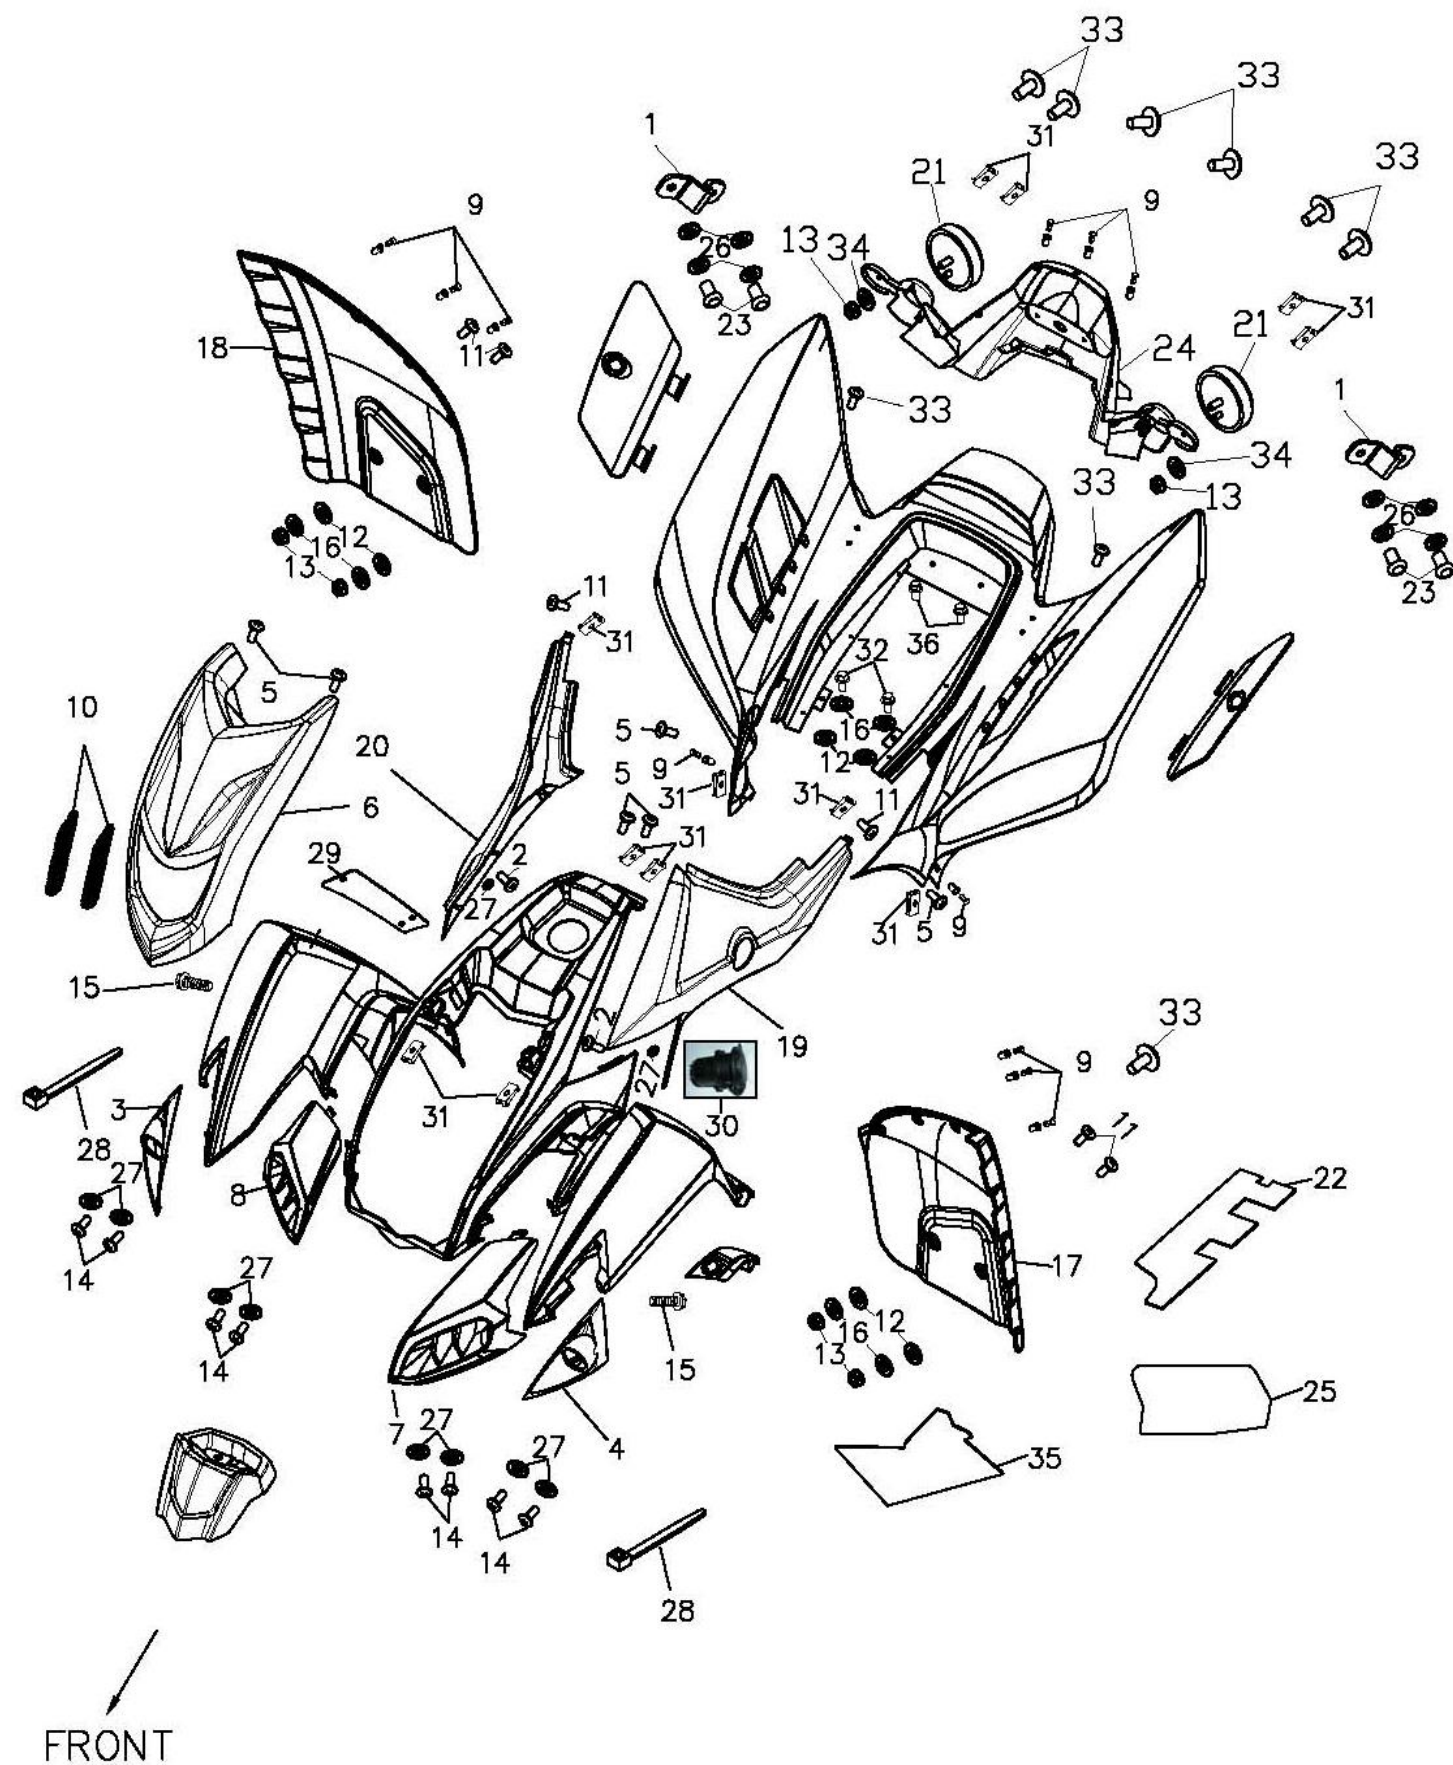


組件 編號：501-F05


車體蓋,座墊 BODY COVER,SEAT

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	81144-225-000	2	INNER BOX LID BRACKET	行李箱蓋固定片
2	93903-04012K	2	TAPPING SCREW TRUSS HEAD PHILLIPS	自攻螺絲(黑)
3	64325-225-000	1	LEFT SIGNAL LIGHT COVER	左方向燈座
4	64326-225-000	1	RIGHT SIGNAL LIGHT COVER	右方向燈座
5	93701-06015G	6	PAN FLAT HEAD PHILLIPS BOLT	十字扁圓平頭螺栓(墨綠)
6	64321-225-000	1	FRONT FASCIA	前燈罩
7	64305-501-000	1	LEFT AIRING COVER	*左導氣罩(-225-)
8	64304-501-000	1	RIGHT AIRING COVER	*右導氣罩(-225-)
9	90663-179-000	11	PLASTIC BOLT	塑膠鉚釘
10	64353-225-000	2	SCREEN NET	導氣罩飾網(小)
11	93800-06015S	6	PAN PHILLIPS BOLT	十字扁圓頭螺栓附墊圈(大面)
12	94102-145-000	8	RUBBER WASHER	橡膠墊圈
13	90350-06000G	8	NYLON NUT	止鬆螺帽(墨綠)
14	93903-04016K	8	TAPPING SCREW TRUSS HEAD PHILLIPS	自攻螺絲(黑)
15	92000-06020-10K	4	HEX BOLT	六角螺栓附墊圈(黑)
16	94101-0618020B	6	PLAIN WASHER	平面墊圈(白)
17	61100-501-000	1	L.FRONT FENDER	左前土除
18	61101-501-000	1	R.FRONT FENDER	右前土除
19	83600-501-000	1	LEFT SIDE COVER	左側蓋
20	83500-501-001	1	LEFT BODY COVER	右側蓋(-225-)
21	33741-145-000	2	REFLECTOR	反射片(圓)
22	83407-225-000	1	REAR COVER ISOLATION GASKET	後蓋隔熱墊
23	90662-261-000	4	RIVET	拉釘
24	80118-225-000	1	TAIL LIGHT BASE	牌照板
25	83420-225-000	1	R. R.COVER ISOLATION GASKET	右後置物箱隔熱墊
26	94101-0310010B	8	PLAIN WASHER	平面墊圈
27	94101-0514010K	10	PLAIN WASHER	平面墊圈(黑)
28	90669-168-000	6	CABLE TIE	塑膠束帶
29	64355-903-000	1	COVER	排檔桿飾片
30	35116-225-000	1	POWER SUPPLY	電源供應器

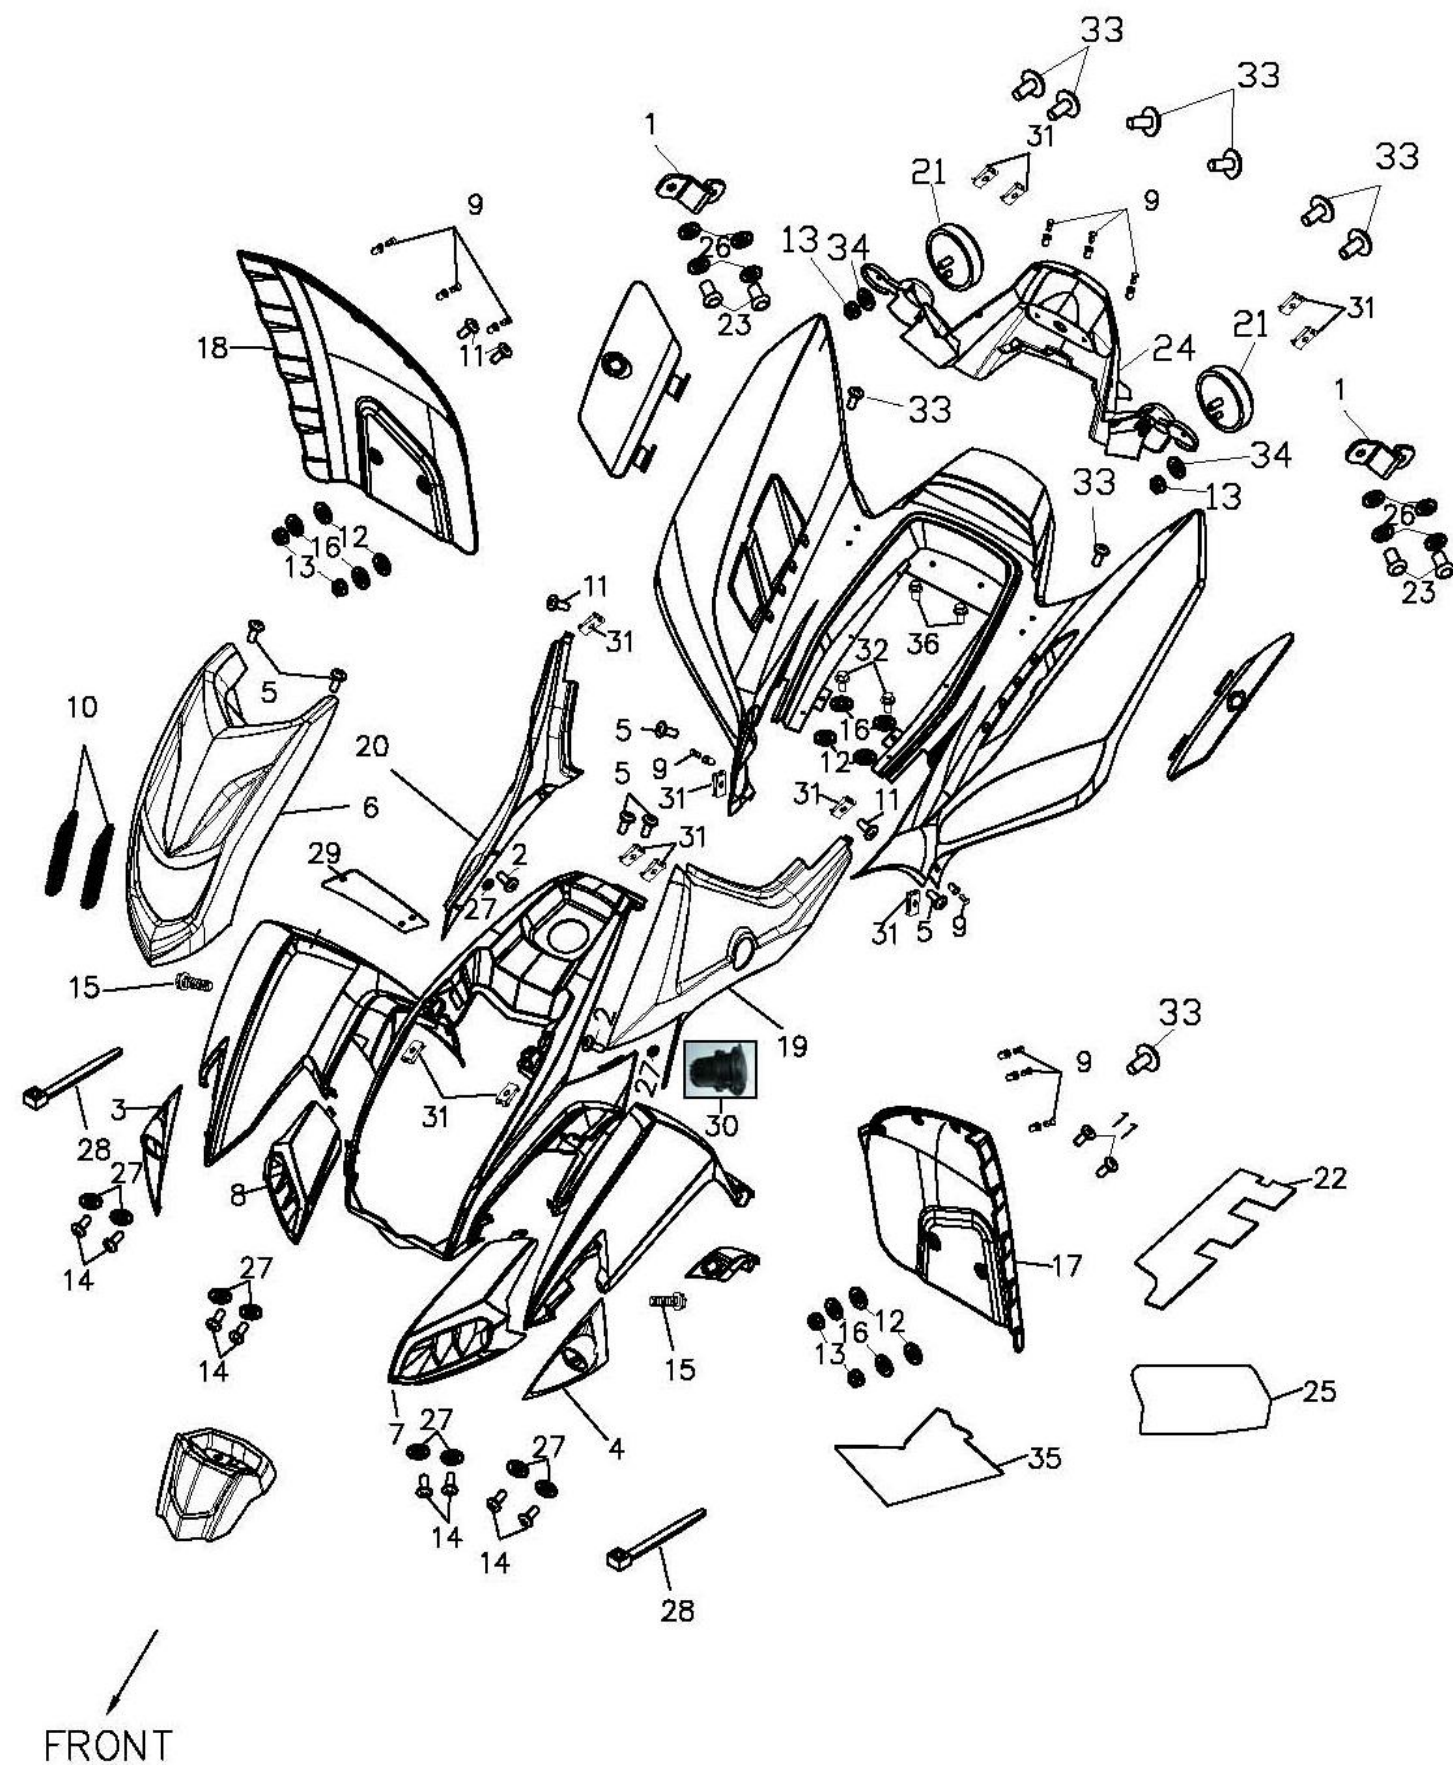

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
31	90344-0600A	12	U PLATE NUT	U型板螺帽 6m m
32	92003-06020K	2	HEX BOLT(TRIANGE)	六角螺栓(三角牙)-黑
33	93800-06020K	12	PAN PHILLIPS BOLT	十字扁圓頭螺栓附墊圈
34	94101-0615010B	2	PLAIN WASHER	平面墊圈(白)
35	64345-225-000	1	SIDE COVER ISOLATION GASKET	側蓋隔熱墊

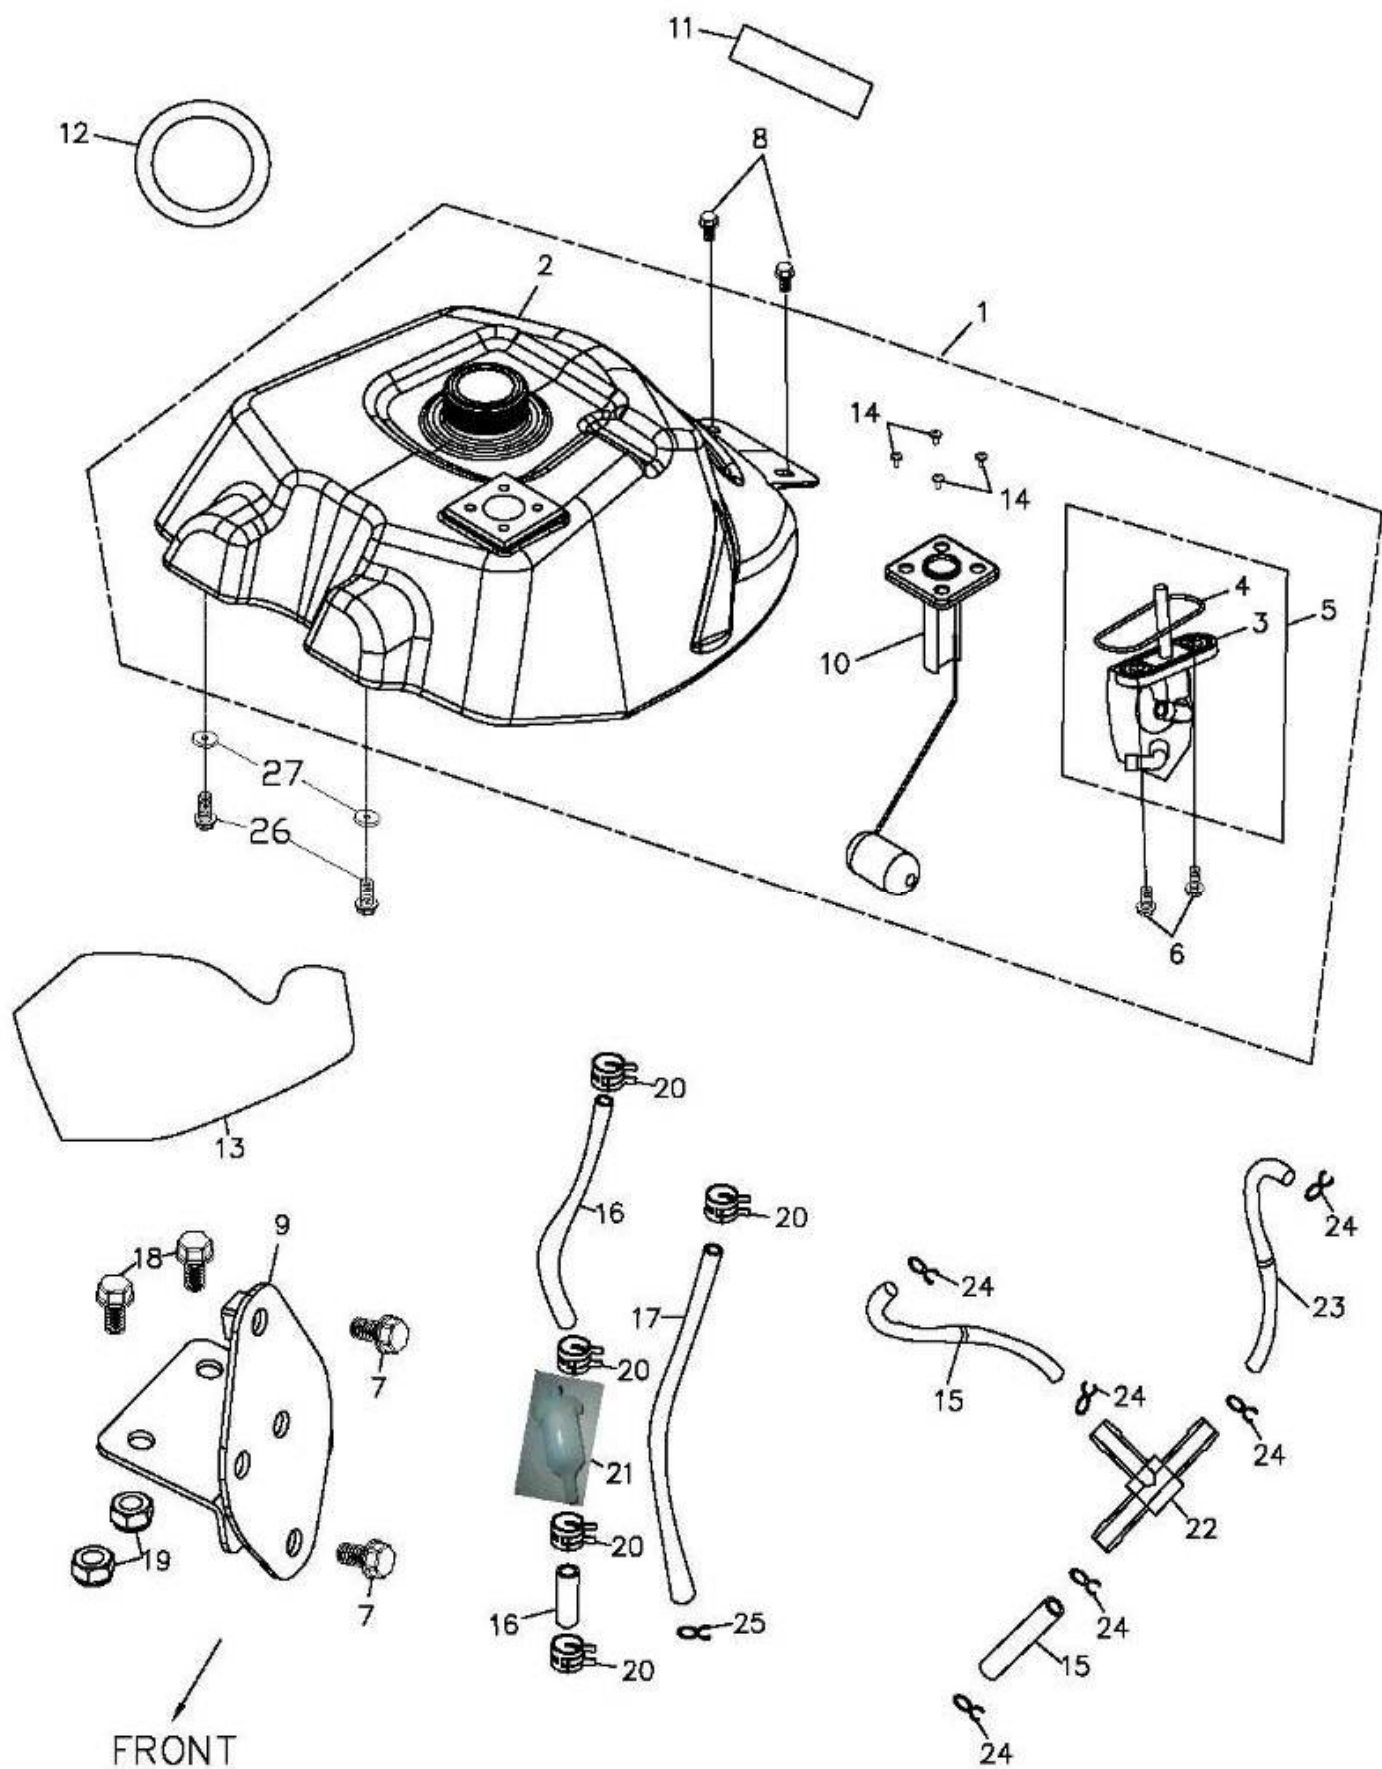


組件 編號：501-F06

油箱 FUEL TANK

[TOP](#)

-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件	名 稱					
=====					=====				
1	17511-501-000	1	FUEL TANK ASS'Y		汽油箱組合				
2	17500-501-000	1	FUEL TANK COMP		汽油箱				
3	16953-501-000	1	FUEL CAP BODY		汽油杯本體				
4	16951-169-000	1	FUEL CUP RING		油杯油環				
5	16950-501-000	1	OIL CUP		汽油杯				
6	96000-06012-08B	2	HEX FLANGE BOLT		六角緣面螺栓(白)				
7	96000-06020-10G	2	HEX FLANGE BOLT		六角緣面螺栓(墨綠)				
8	92006-06014-10G	2	HEX WASHER FACE BOLT		六角螺栓附墊圈(墨綠)				
9	50129-501-000	1	FUEL PUMP BRACKET		汽油泵固定座				
10	37800-225-000	1	PETROL GAUGE ASS'Y		汽油計量器				
11	94701-3004140	1	SPONGE PAD		海綿條				
12	17504-272-000	1	FRONT COVER RUBBER GASKET		前蓋墊片				
13	55101-169-000	1	ISOLATION PAD		油箱隔熱墊				
14	93000-05012C	4	ROUND PHILLIPS BOLT		十字圓錐頭螺栓(五彩)				
15	94400-0408150	2	FUEL TUBE		油管(L=150)				
16	94400-0510180	2	HOSE		軟管(L=180)				
17	94400-0510470	1	FUEL TUBE		油管(L=470)				
18	96000-06010-10B	2	HEX WASHER FACE BOLT		六角緣面螺栓(白)				
19	94050-05000C	2	HEX FLANGE NUT WITH SERRATION		六角緣面螺帽(五彩)				
20	94513-09000	7	SPRING CLAMP		彈扣B00004-04				
21	16952-145-000	1	PETROL FILTER		汽油過濾杯				
22	45453-501-000	1	OIL TUBE JOINT		三通接頭				
23	94400-0408210	1	OIL TUBE		油管				
24	94510-08000	6	CLIP		夾緊扣				
25	94510-09000	1	CLIP		夾緊扣				
26	90111-08008-12G	2	LADDER BOLT		台階螺栓(墨綠)				
27	94102-1022020	2	RUBBER WASHER		橡膠墊圈				
=====					=====				

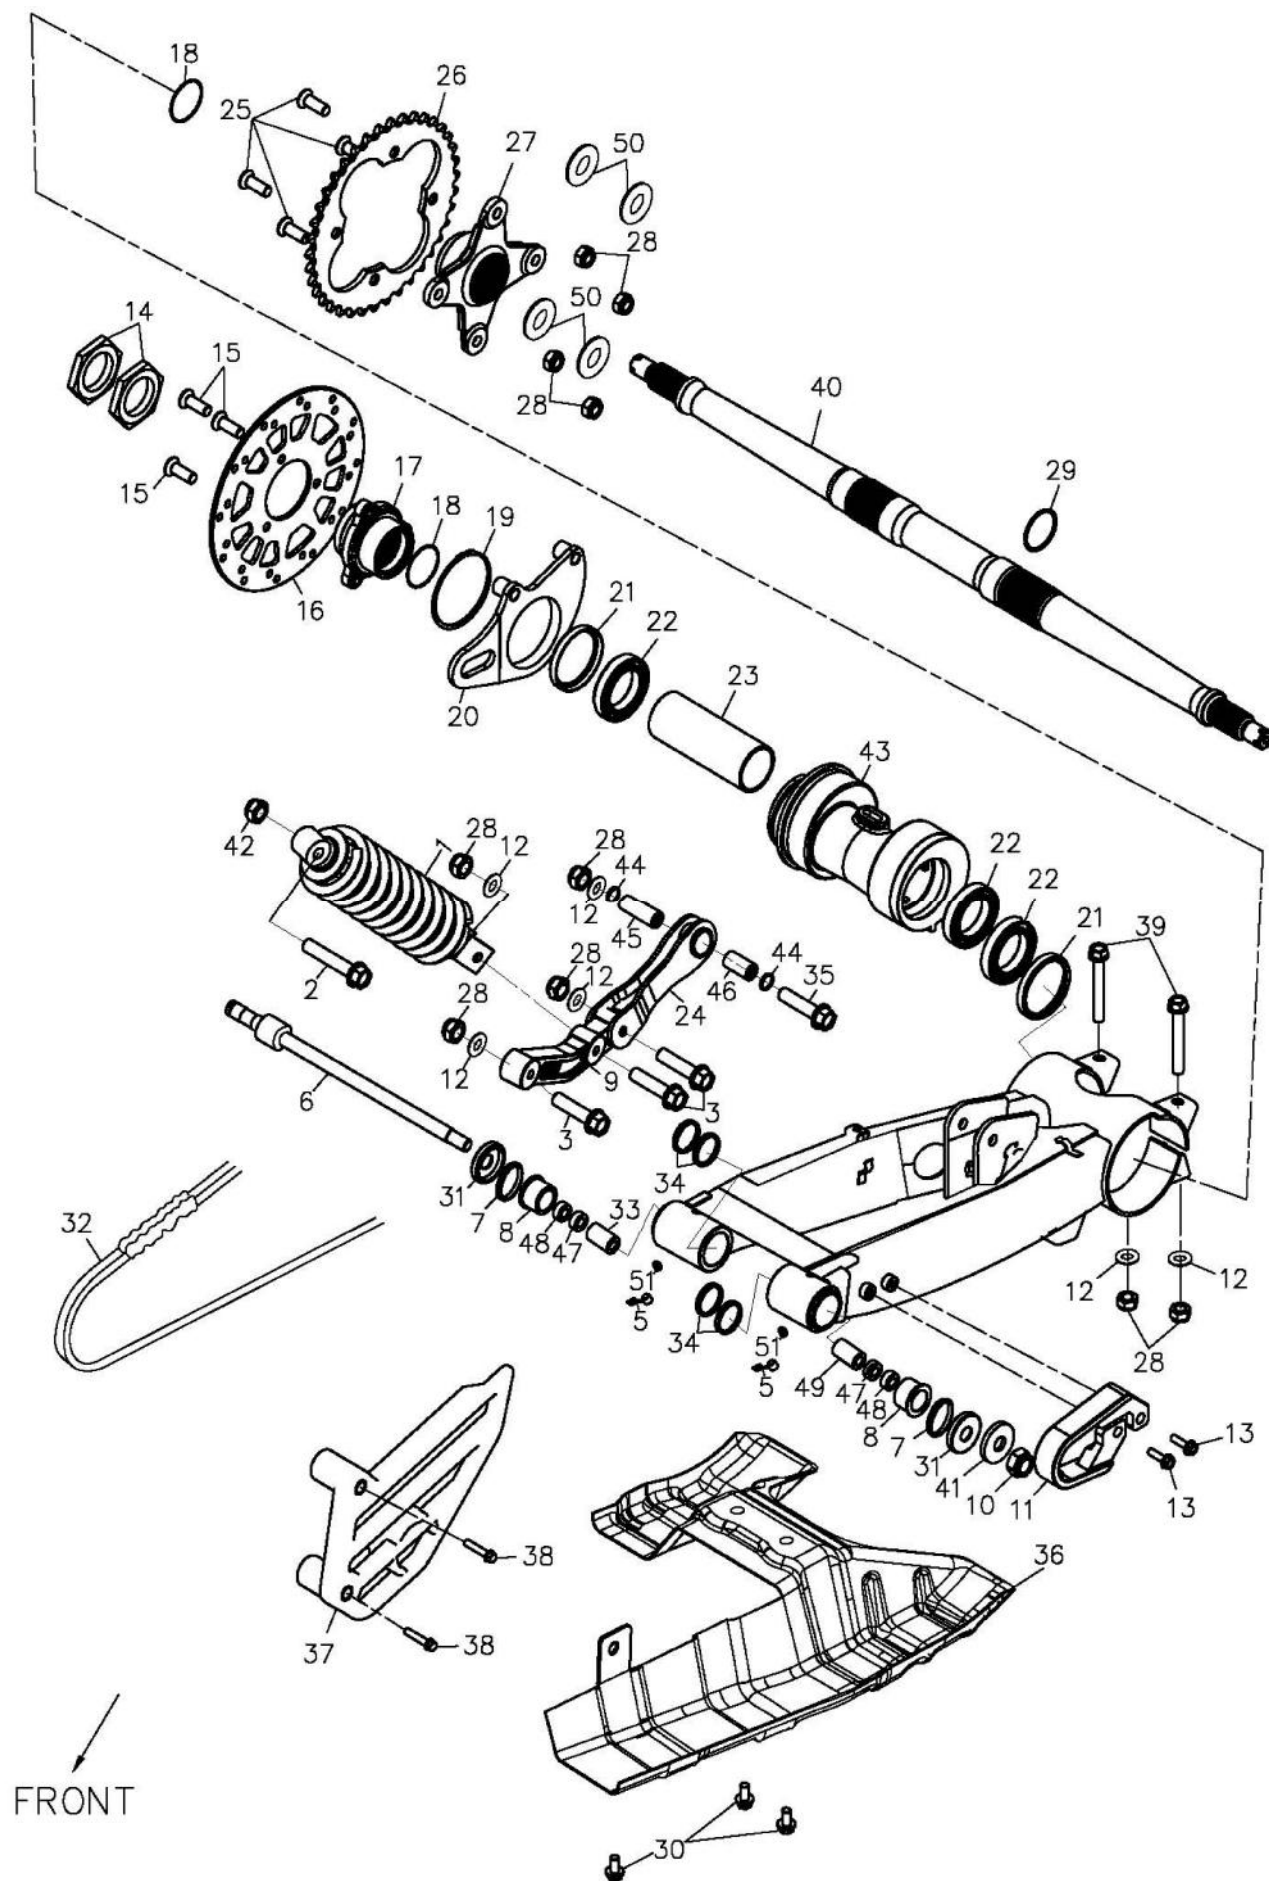


組件 編號：501-F07

後叉總成 SW ING ARM SUB ASS'Y

[TOP](#)

Item	Parts No.	Qt'y	Parts Name
項次	部 品 番 號	用 量	零 件 名 稱

1	52400-501-000	1	REAR CUSHION ASS'Y	後避震器組
2	96000-1206517GI	1	HEX FLANGE BOLT	六角緣面螺栓(墨綠+耐落膠)
3	96000-10055-14G	3	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)
4	90350-12000G	1	NYLON INSERT LOCK NUT	止鬆螺帽(墨綠)
5	96502-06000	2	GREASE VALEVE CAP	黃油嘴蓋(PP材質)
6	52116-501-002	1	SWING ARM BOLT	後叉螺栓
7	52144-501-000	2	DUST SEAL	防塵套
8	52103-501-000	2	CUSHION	後叉襯套
9	52125-225-000	1	ROCKER ARM OF REAR CUSHION	連桿搖臂總成
10	90350-14000G	1	NYLON NUT	止鬆螺帽(墨綠)
11	40533-261-001	1	SHOE SLIDER	鏈條滑塊
12	94105-1022025G	6	PLAIN WASHER	平面墊圈(墨綠)
13	92006-06020-10G	2	HEX WASHER FACE BOLT	六角螺栓(附墊圈)-墨綠
14	94001-38150B	2	HEX NUT	六角螺帽(白)
15	93901-08018GL	3	HEX SOCKET FLAT HEAD BOLT	六角承窩平頭螺栓(墨綠)
16	42105-169-00A	1	REAR BRAKE DISC	後剎車碟(92/61 版1)
17	42106-169-000	1	REAR BRAKE DISC FLANGE COMP.	後剎車碟連結器
18	91340-169-000	2	O-RING	油環 NBR 70
19	94511-7000S	1	EXTERNAL CIPCLIP	外環夾
20	52120-169-000	1	REAR CALIPER STAY	後輪軸調整固定架
21	52102-169-000	2	O-SEAL	油封 SPCC S25C
22	96100-6908LLU	3	BALL BEARING(6908 LLU/2AS)	滾珠軸承
23	52113-501-000	1	REAR AXLE BUSH	後軸襯套
24	52126-501-000	1	AUXILIARY ROCKER ARM(REV.1)	輔助搖臂(版1)
25	93901-10027G	4	HEX SOCKET FLAT HEAD BOLT	六角承窩平頭螺栓(墨綠)
26	23802-169-00A	1	DRIVE SPROCKET	後驅動鏈輪(92/61-版2)
27	42610-169-000	1	REAR SPROCKET FLANGE	後驅動齒輪座
28	90350-10000G	10	NYLON NUT	止鬆螺帽(墨綠)
29	42100-169-000	1	EXTERNAL CIRCLIP	外環夾(40mm)
30	96000-08016-12G	3	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)

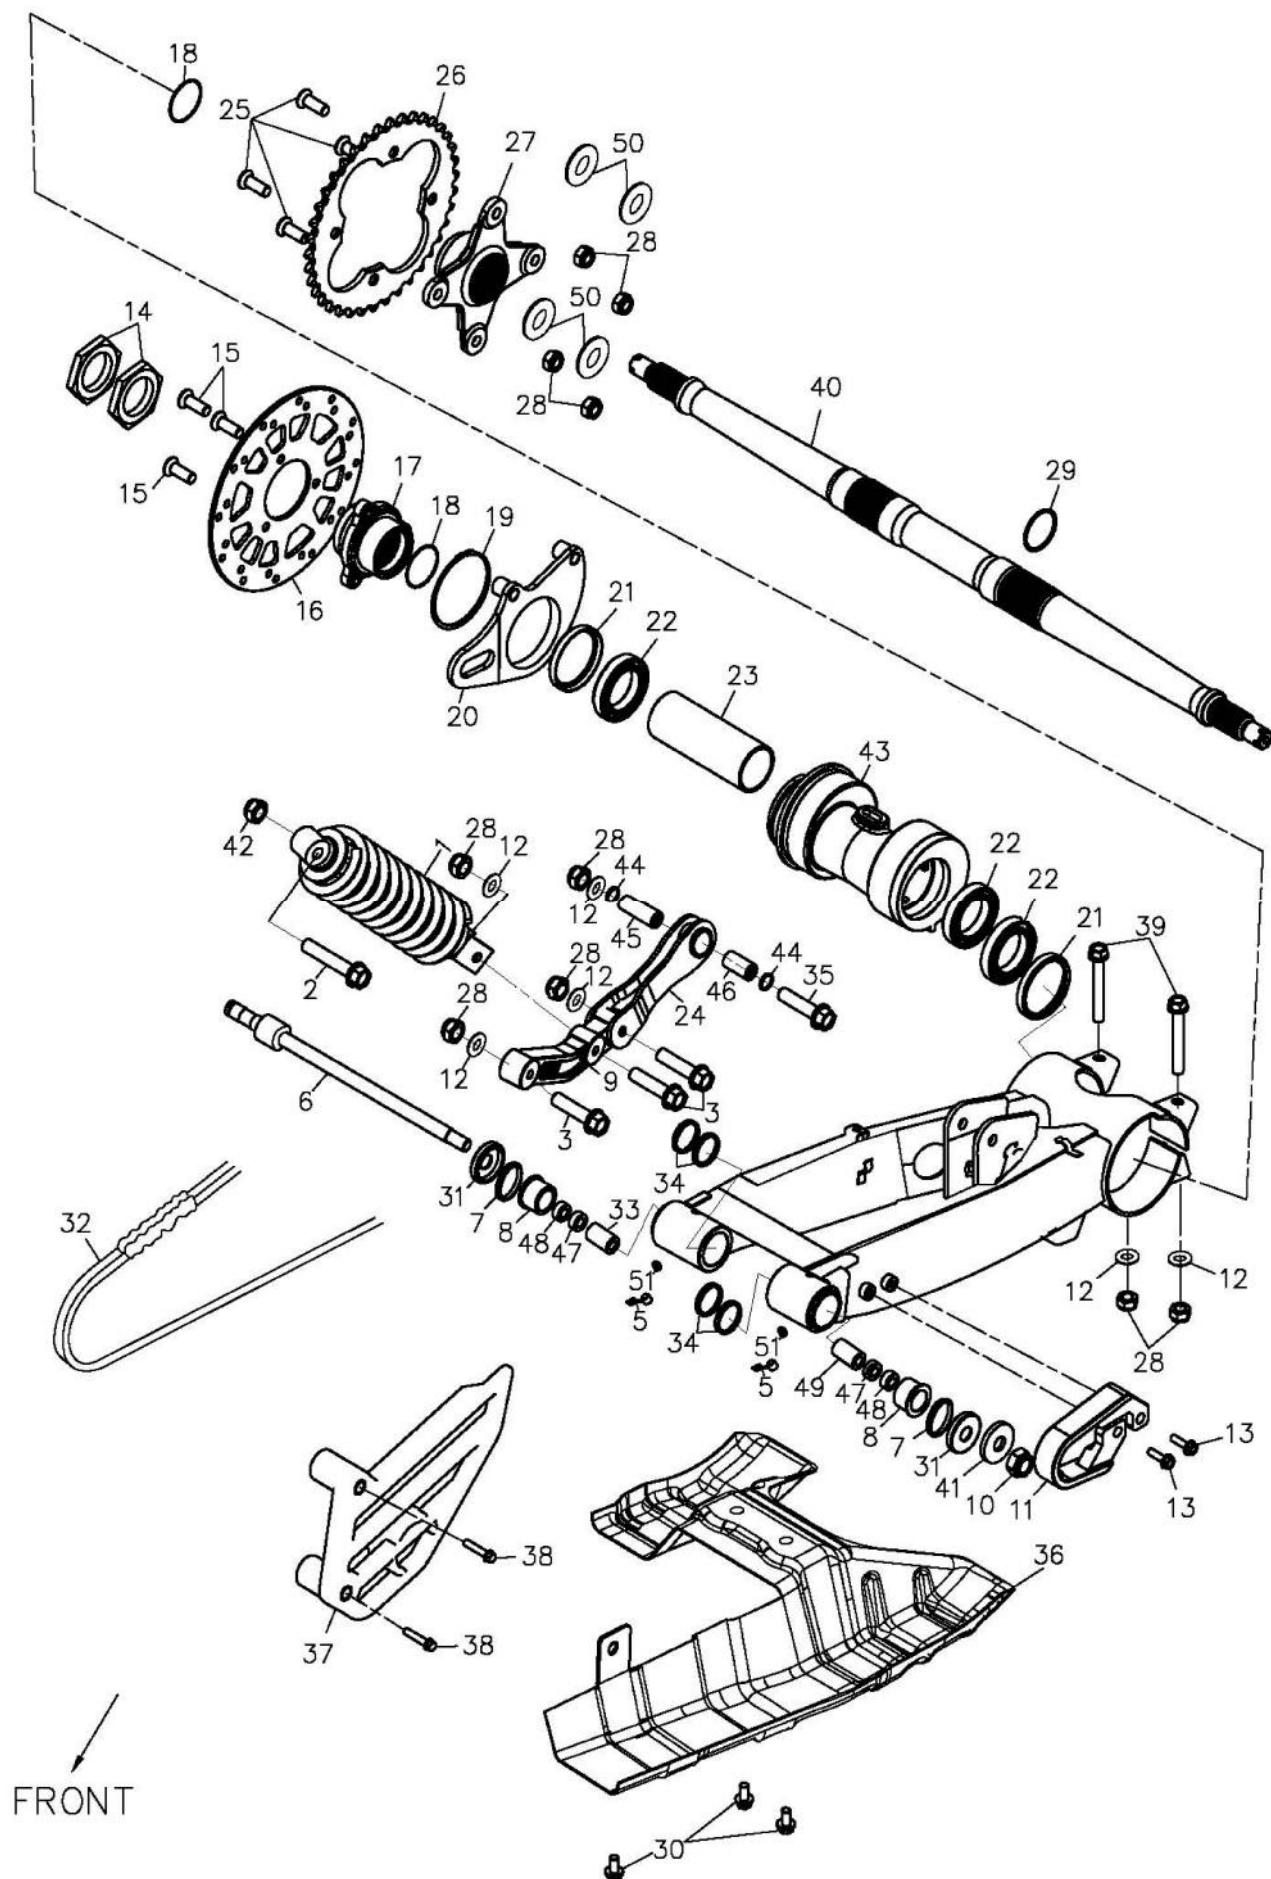


組件 編號：501-F07

後叉總成 SW ING ARM SUB ASS'Y

[TOP](#)


-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
31	52114-501-000	2	DUST SEAL		後叉封套
32	40530-256-00A	1	DRIVE CHAIN ASS'Y		鏈條
33	52128-501-000	1	BUSHING- INSIDE		內襯套 (R)
34	96500-25325	4	OIL SEAL		油封
35	96000-10080-14G	1	HEX FLANGE BOLT		六角緣面螺栓*(墨綠)
36	52117-501-001	1	SWING ARM PROTECTION		鏈條護蓋
37	40517-501-000	1	FRONT CHAIN PROTECTOR		鏈條前護蓋
38	96000-06045-10B	2	HEX FLANGE BOLT		六角緣面螺栓(白)
39	96000-10090-14G	2	HEX FLANGE BOLT		六角緣面螺栓(墨綠)
40	42301-501-000	1	REAR WHEEL AXLE		後輪軸
41	94105-1529030G	1	PLAIN WASHER		平面墊圈(墨綠)
42	94050-12000C	1	HEX FLANGE NUT WITH SERRATION		六角緣面螺帽(五彩)
43	52200-501-000	1	REAR AXLE HOLDER		後軸心固定器
44	96500-20265	2	O-SEAL		油封
45	96401-1020034	1	BUSHING		襯套
46	96200-202620	1	NEEDLE BEARING		滾針軸承
47	96200-253226	2	NEEDLE BEARING		滾針軸承
48	52103-501-000	2	CUSHION		後叉襯套
49	52119-501-000	1	BUSHING- INSIDE		內襯套 (L)
50	94111-1017025G	4	SPRING WASHER		彈簧墊圈(墨綠)
51	96501-06000	2	GREASE VALEVE		黃油嘴
=====				=====	

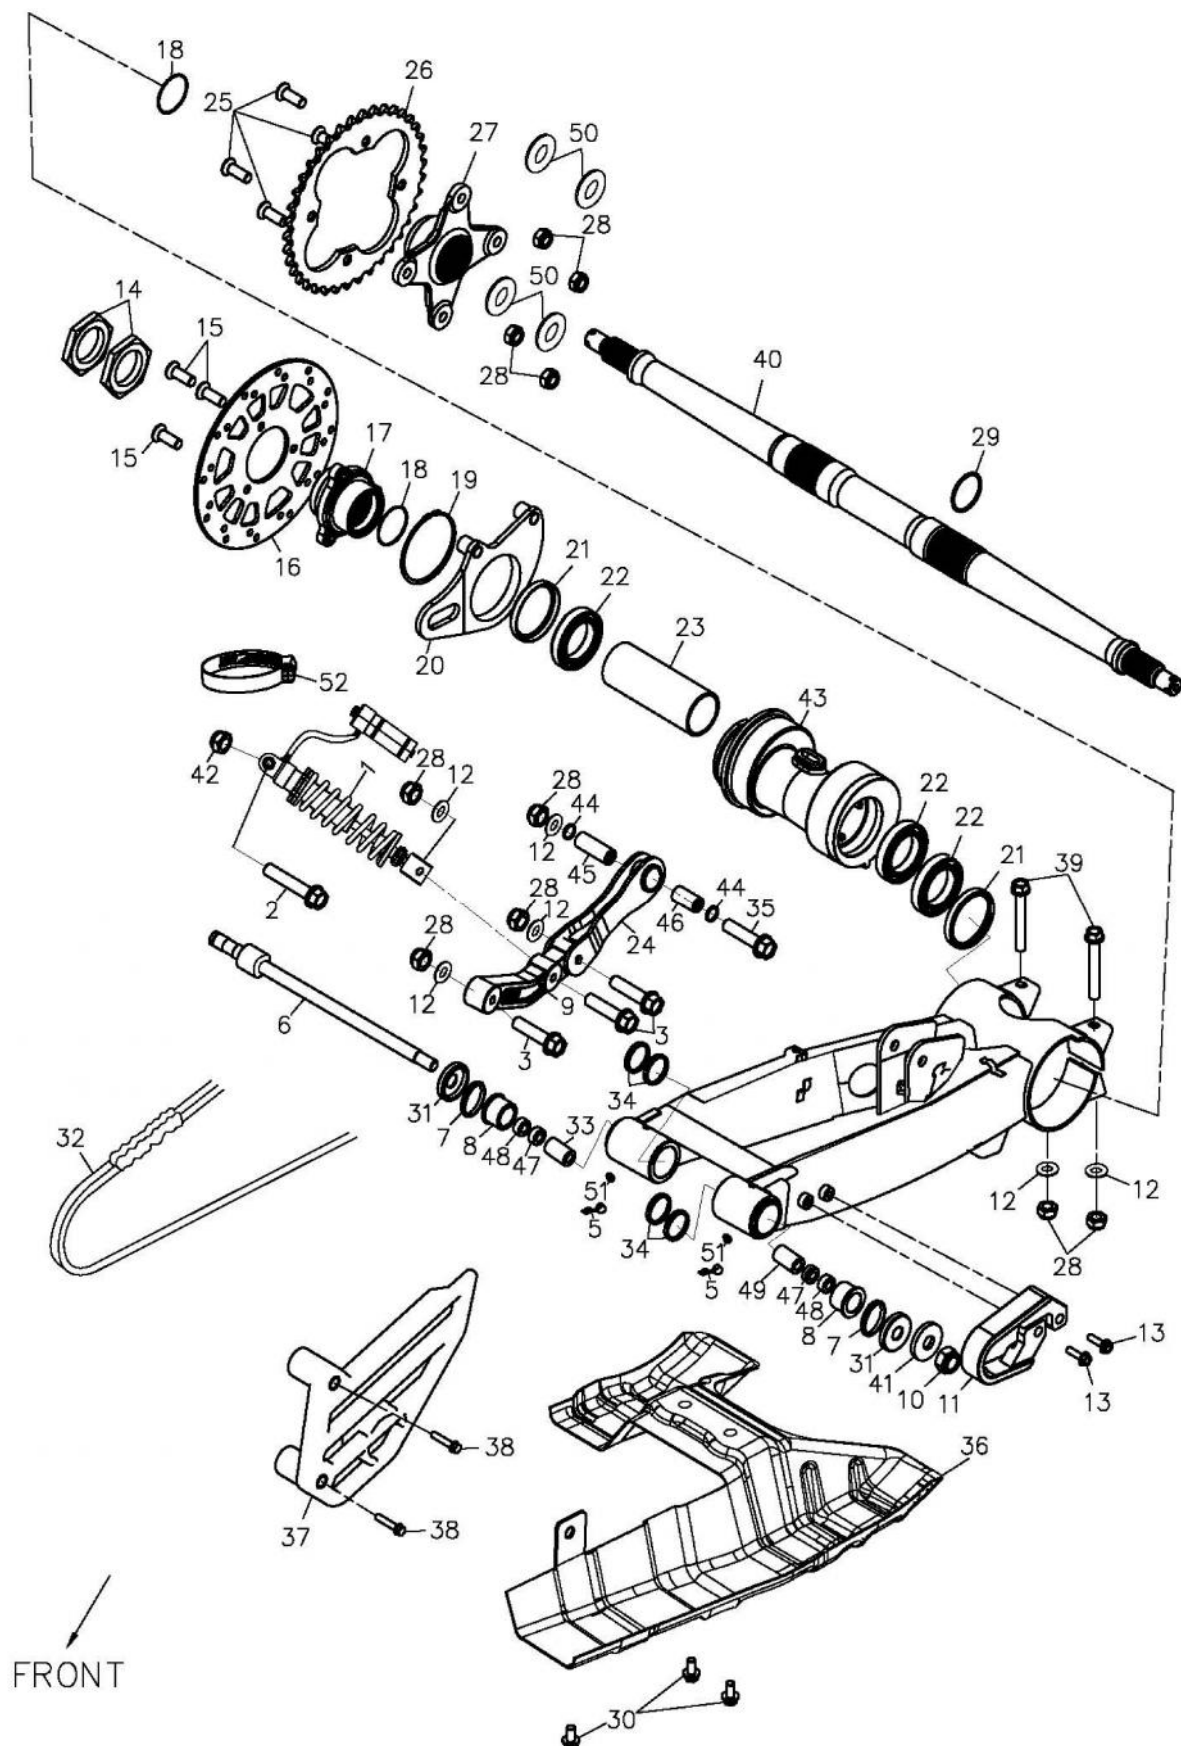


組件 編號：501-F07A 後叉總成 (後避震器 -氮氣)SW ING ARM SUBASS'Y

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	52400-501-00A	1	REAR CUSHION ASS'Y(NITROGEN)	後避震器組(氮氣)
2	96000-1206517GI	1	HEX FLANGE BOLT	六角緣面螺栓(墨綠+耐落膠)
3	96000-10055-14G	3	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)
4	90350-12000G	1	NYLON INSERT LOCK NUT	止鬆螺帽(墨綠)
5	96502-06000	2	GREASE VALEVE CAP	黃油嘴蓋(PP材質)
6	52116-501-002	1	SWING ARM BOLT	後叉螺栓
7	52144-501-000	2	DUST SEAL	防塵套
8	52103-501-000	2	CUSHION	後叉襯套
9	52125-225-000	1	ROCKER ARM OF REAR CUSHION	連桿搖臂總成
10	90350-14000G	1	NYLON NUT	止鬆螺帽(墨綠)
11	40533-261-001	1	SHOE SLIDER	鏈條滑塊
12	94105-1022025G	6	PLAIN WASHER	平面墊圈(墨綠)
13	92006-06020-10G	2	HEX WASHER FACE BOLT	六角螺栓(附墊圈)-墨綠
14	94001-38150B	2	HEX NUT	六角螺帽(白)
15	93901-08018GL	3	HEX SOCKET FLAT HEAD BOLT	六角承窩平頭螺栓(墨綠)
16	42105-169-00A	1	REAR BRAKE DISC	後剎車碟(92/61 版1)
17	42106-169-000	1	REAR BRAKE DISC FLANGE COMP.	後剎車碟連結器
18	91340-169-000	2	O-RING	油環 NBR 70
19	94511-7000S	1	EXTERNAL CIPCLIP	外環夾
20	52120-169-000	1	REAR CALIPER STAY	後輪軸調整固定架
21	52102-169-000	2	O-SEAL	油封 SPCC S25C
22	96100-6908LLU	3	BALL BEARING(6908 LLU/2AS)	滾珠軸承
23	52113-501-000	1	REAR AXLE BUSH	後軸襯套
24	52126-501-000	1	AUXILIARY ROCKER ARM(REV.1)	輔助搖臂(版1)
25	93901-10027G	4	HEX SOCKET FLAT HEAD BOLT	六角承窩平頭螺栓(墨綠)
26	23802-169-00A	1	DRIVE SPROCKET	後驅動鏈輪(92/61-版2)
27	42610-169-000	1	REAR SPROCKET FLANGE	後驅動齒輪座
28	90350-10000G	10	NYLON NUT	止鬆螺帽(墨綠)
29	42100-169-000	1	EXTERNAL CIRCLIP	外環夾(40m m)
30	96000-08016-12G	3	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)

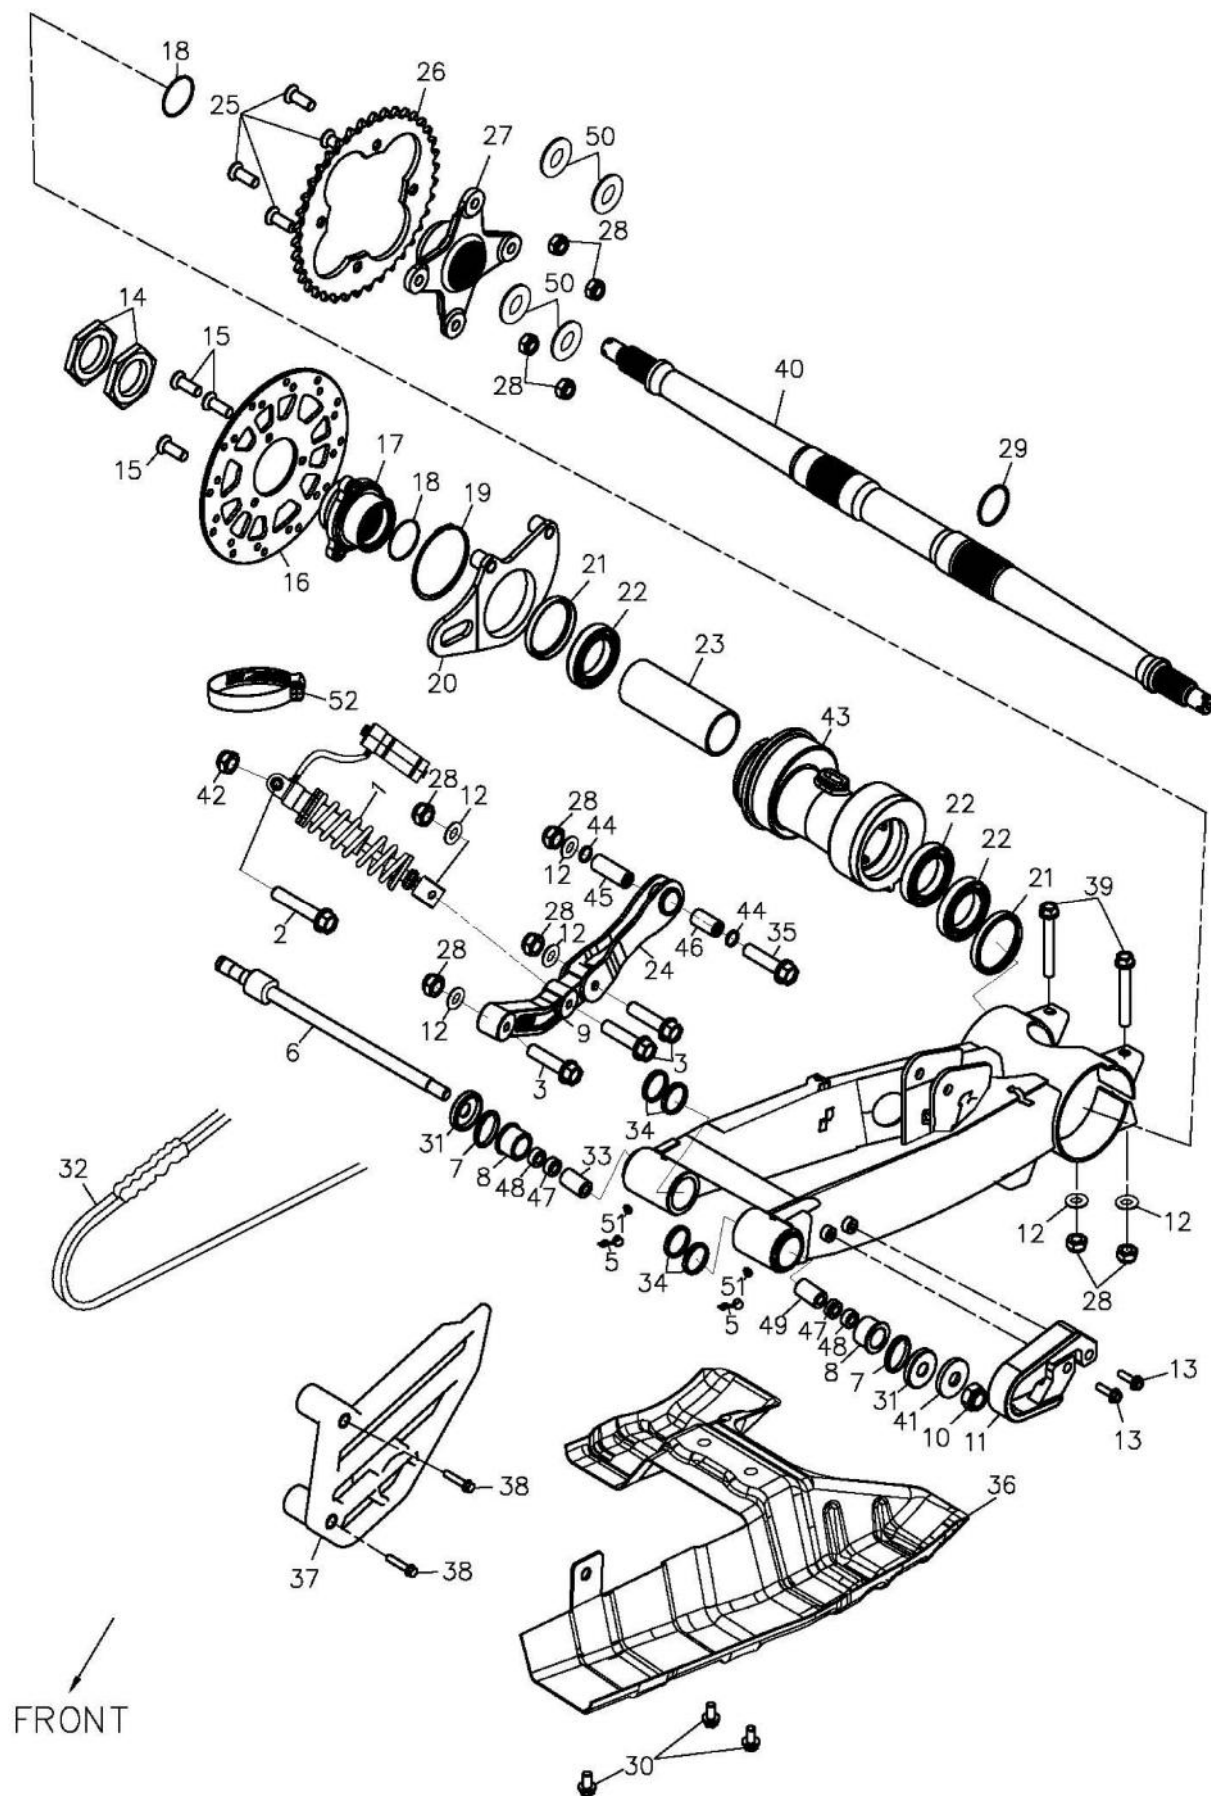

-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件 名 稱						
=====					=====				
31	52114-501-000	2	DUST SEAL		後叉封套				
32	40530-256-00A	1	DRIVE CHAIN ASS'Y		鏈條				
33	52128-501-000	1	BUSHING- INSIDE		內襯套 (R)				
34	96500-25325	4	OIL SEAL		油封				
35	96000-10080-14G	1	HEX FLANGE BOLT		六角緣面螺栓*(墨綠)				
36	52117-501-001	1	SWING ARM PROTECTION		鏈條護蓋				
37	40517-501-000	1	FRONT CHAIN PROTECTOR		鏈條前護蓋				
38	96000-06045-10B	2	HEX FLANGE BOLT		六角緣面螺栓(白)				
39	96000-10090-14G	2	HEX FLANGE BOLT		六角緣面螺栓(墨綠)				
40	42301-501-000	1	REAR WHEEL AXLE		後輪軸				
41	94105-1529030G	1	PLAIN WASHER		平面墊圈(墨綠)				
42	94050-12000C	1	HEX FLANGE NUT WITH SERRATION		六角緣面螺帽(五彩)				
43	52200-501-000	1	REAR AXLE HOLDER		後軸心固定器				
44	96500-20265	2	O-SEAL		油封				
45	96401-1020034	1	BUSHING		襯套				
46	96200-202620	1	NEEDLE BEARING		滾針軸承				
47	96200-253226	2	NEEDLE BEARING		滾針軸承				
48	52103-501-000	2	CUSHION		後叉襯套				
49	52119-501-000	1	BUSHING- INSIDE		內襯套 (L)				
50	94111-1017025G	4	SPRING WASHER		彈簧墊圈(墨綠)				
51	96501-06000	2	GREASE VALEVE		黃油嘴				
52	94516-48000	2	CLAMP		斑馬式管夾 2" 9寬				
=====					=====				

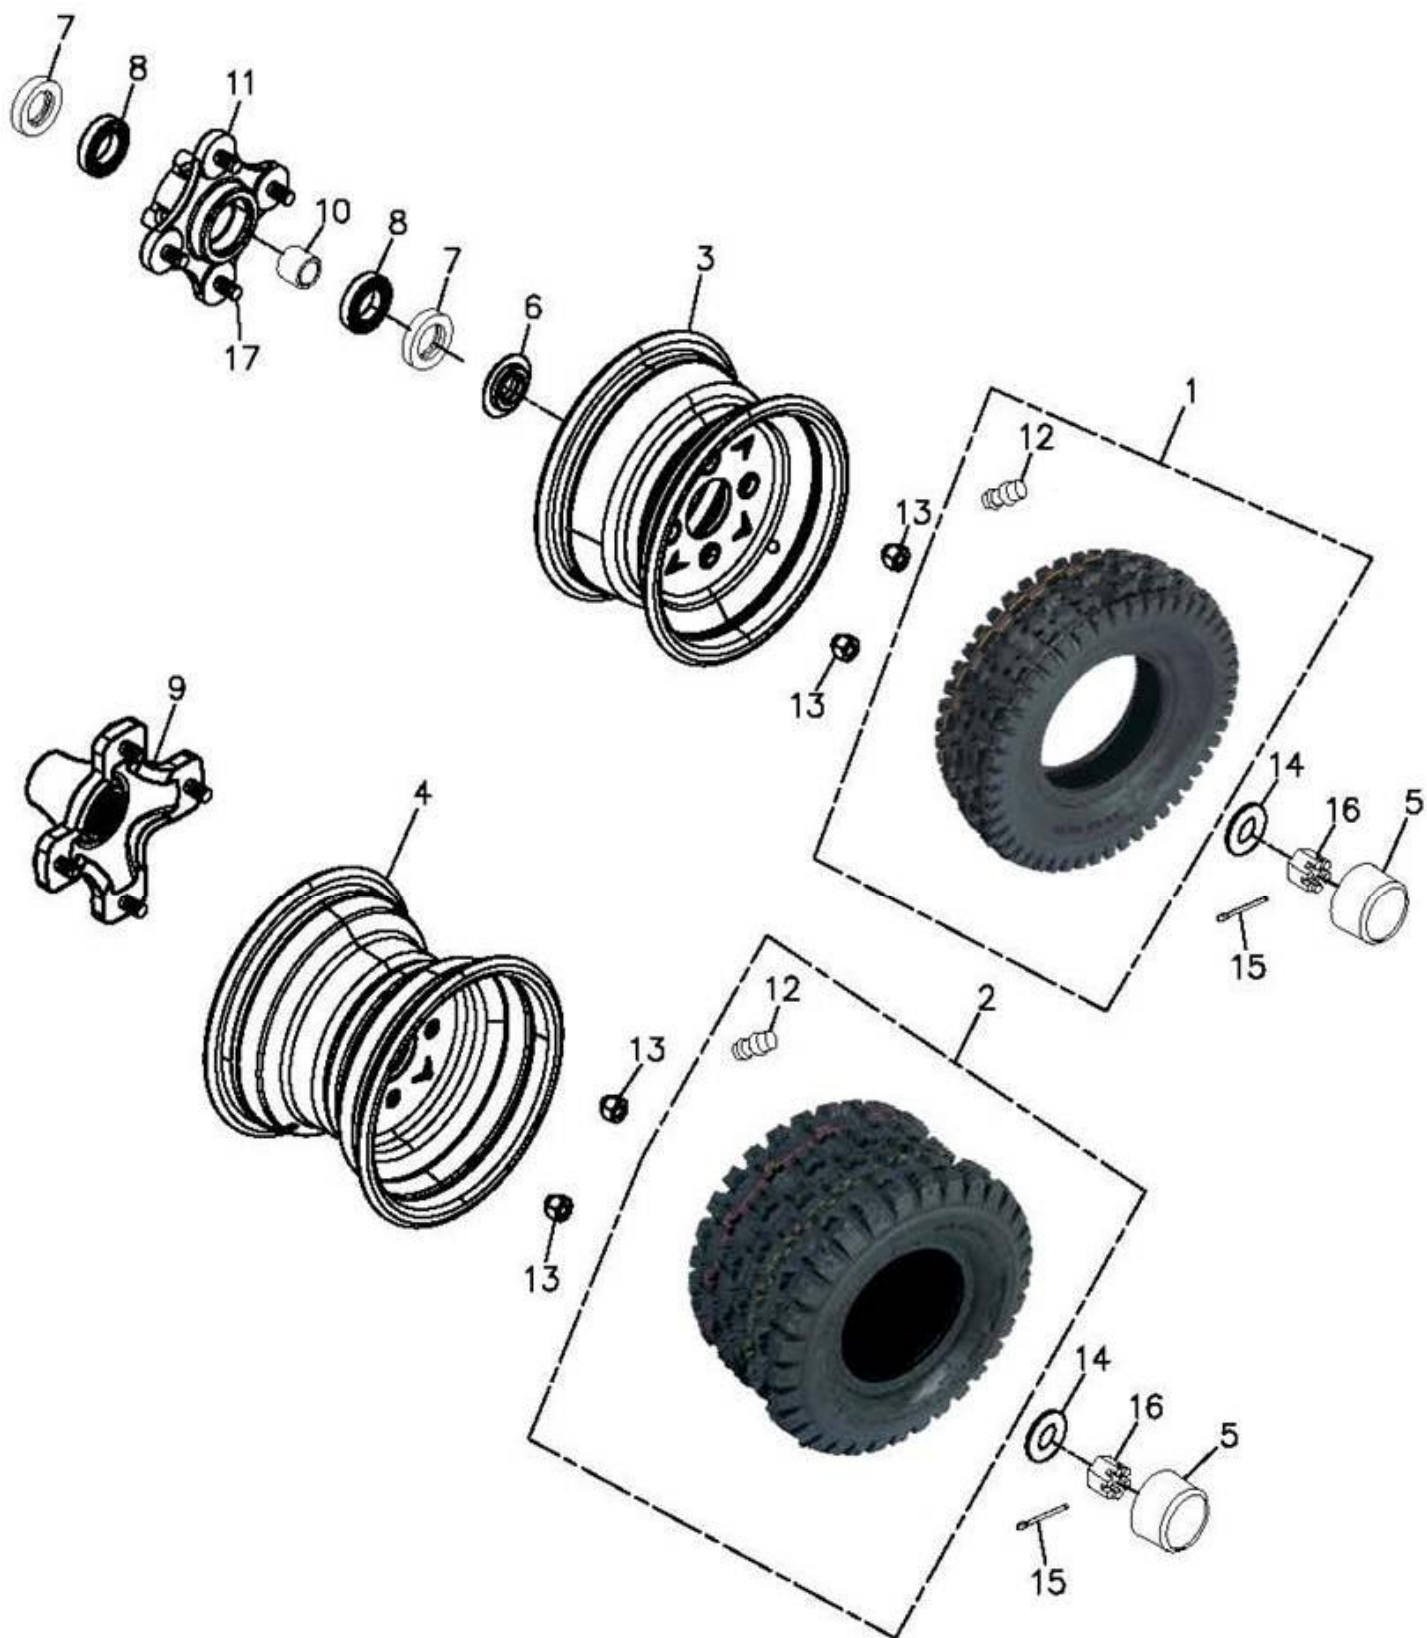


組件 編號：501-F08

前後輪鋁圈-(22*7-10/20*11-9)WHEEL FRONT & REAR

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
=====				
1	42711-182-00C	2	FRONT TIRE	前輪胎 22*7-10 D I2012
2	42811-182-00C	2	REAR TIRE	後輪胎 20*11-9 D I2011
3	42701-169-0AA	2	FRONT RIM (AL)	前鋁圈(60)
4	42801-169-0AC	2	REAR RIM (AL)	後鋁圈
5	42814-145-000	4	RUBBER COVER	橡膠套
6	42707-169-000	2	COLLAR	銅襯套
7	96500-29435	4	OIL SEAL	油封(含油)
8	96100-6004ZZ	4	RADIAL BALL BEARING	滾珠軸承
9	42037-256-000RD	2	REAR SHAFT HUB(RD)	後輪軸聯結器(紅)
10	42705-169-000	2	COLLER	銅襯套
11	42036-169-000RD	2	FRONT WHEEL HUB(RD)	前輪軸聯結器(紅)
12	42616-145-000	4	AIR NOZZLE	風嘴
13	94001-10018B	16	WHEEL NUT	六角螺帽*(輪圈用,白色)
14	94101-1840045C	4	PLANE WASHER	平面墊圈(五彩)
15	94201-35400B	4	COTTER PIN	開口梢
16	94051-18000B	4	SCOTCH NUT	開槽螺帽(白色)
17	96005-10035C	8	HUB STUD BOLT	輪圈固定螺栓
=====				

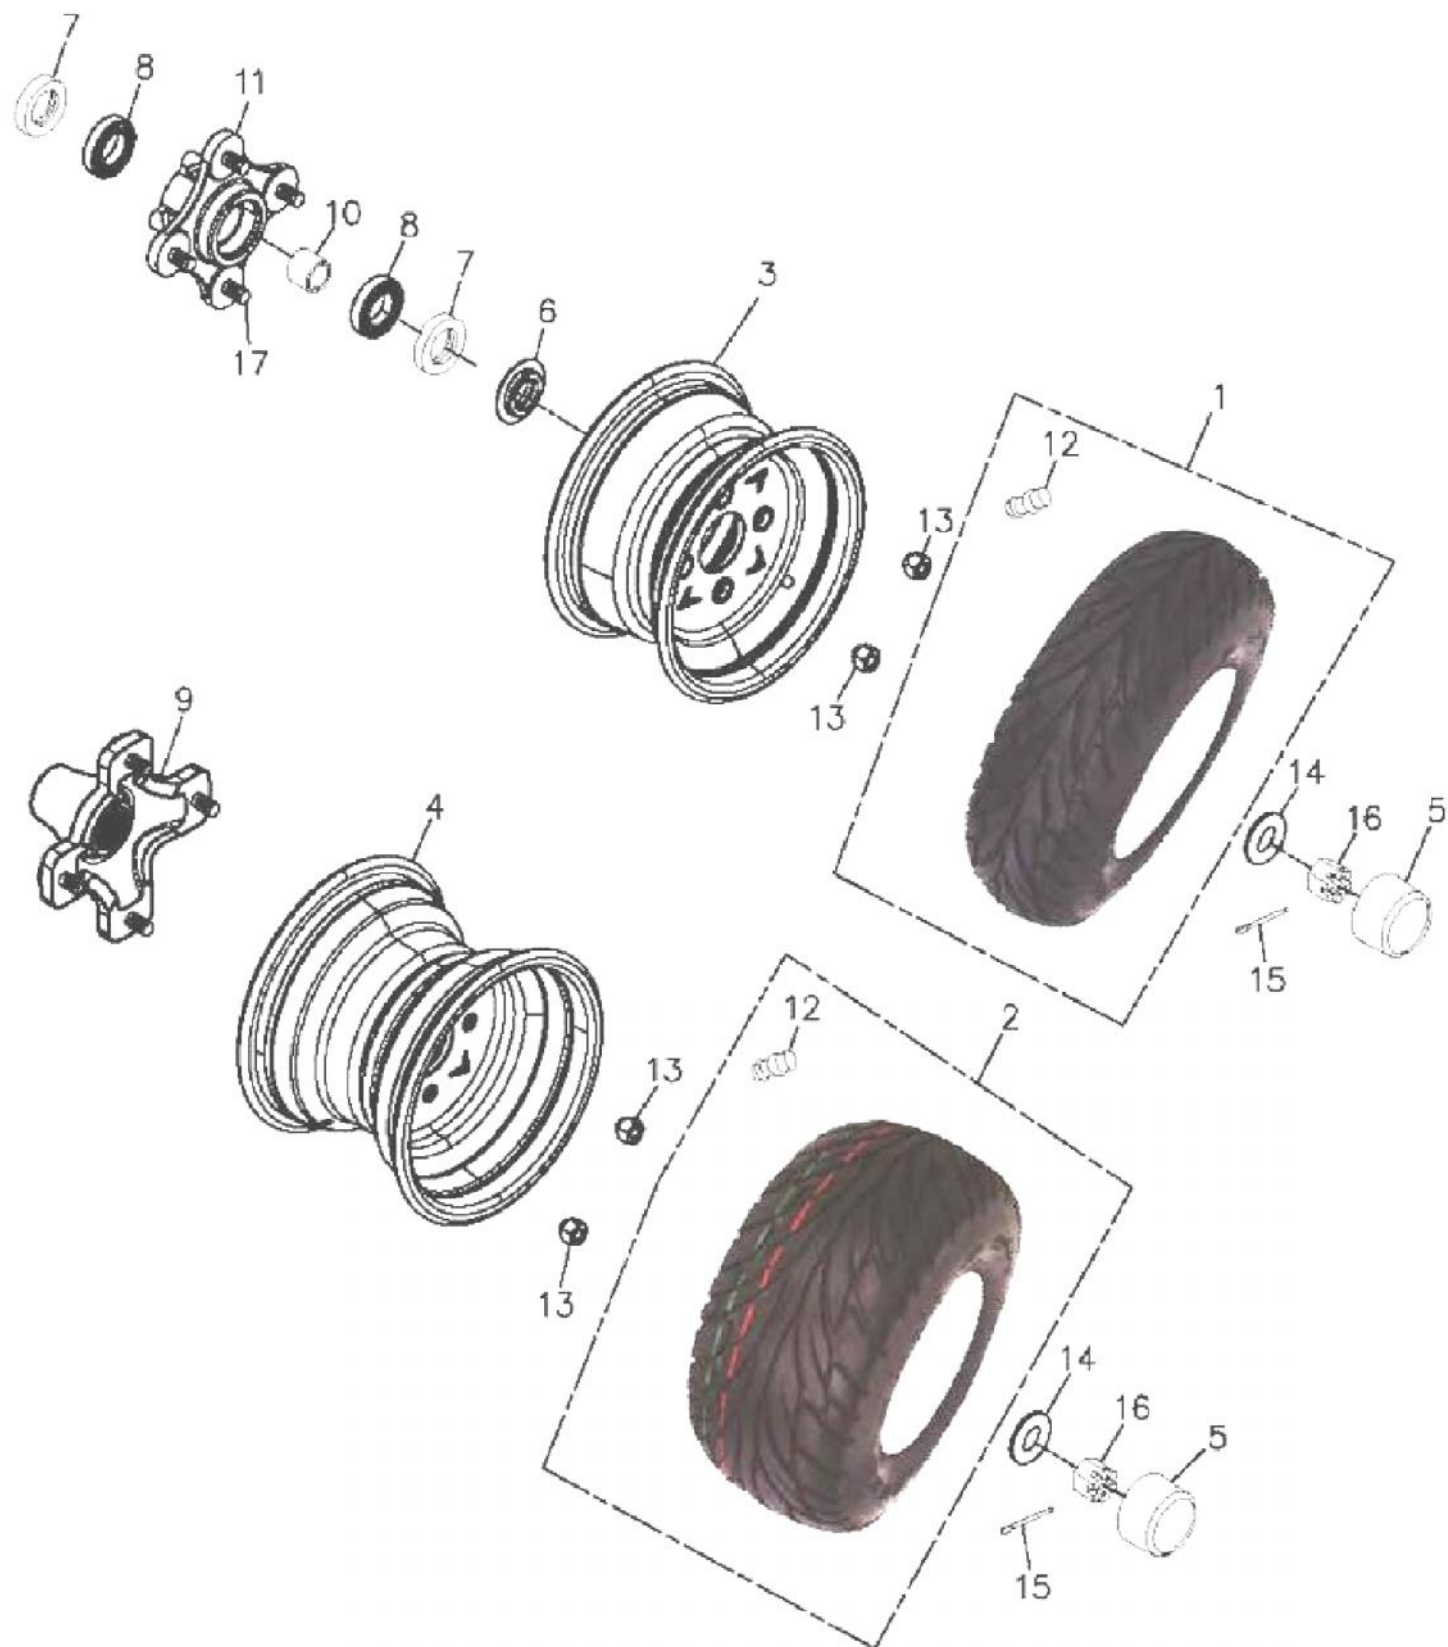


組件 編號：501-F08A

前後輪鋁圈(EU 2) 22*7-10/20* WHEEL FRONT & REAR

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	42711-501-000	2	FRONT TIRE	前輪胎 22*7-10(N28)
2	42811-501-000	2	REAR TIRE	後輪胎 20*10-9(N42)
3	42701-169-0AA	2	FRONT RIM (AL)	前鋁圈(60)
4	42801-169-0AC	2	REAR RIM (AL)	後鋁圈
5	42814-145-000	4	RUBBER COVER	橡膠套
6	42707-169-000	2	COLLAR	銅襯套
7	96500-29435	4	OIL SEAL	油封(含油)
8	96100-6004ZZ	4	RADIAL BALL BEARING	滾珠軸承
9	42037-256-000RD	2	REAR SHAFT HUB(RD)	後輪軸聯結器(紅)
10	42705-169-000	2	COLLER	銅襯套
11	42036-169-000RD	2	FRONT WHEEL HUB(RD)	前輪軸聯結器(紅)
12	42616-145-000	4	AIR NOZZLE	風嘴
13	94001-10018B	16	WHEEL NUT	六角螺帽*(輪圈用,白色)
14	94101-1840045C	4	PLANE WASHER	平面墊圈(五彩)
15	94201-35400B	4	COTTER PIN	開口梢
16	94051-18000B	4	SCOTCH NUT	開槽螺帽(白色)
17	96005-10035C	8	HUB STUD BOLT	輪圈固定螺栓

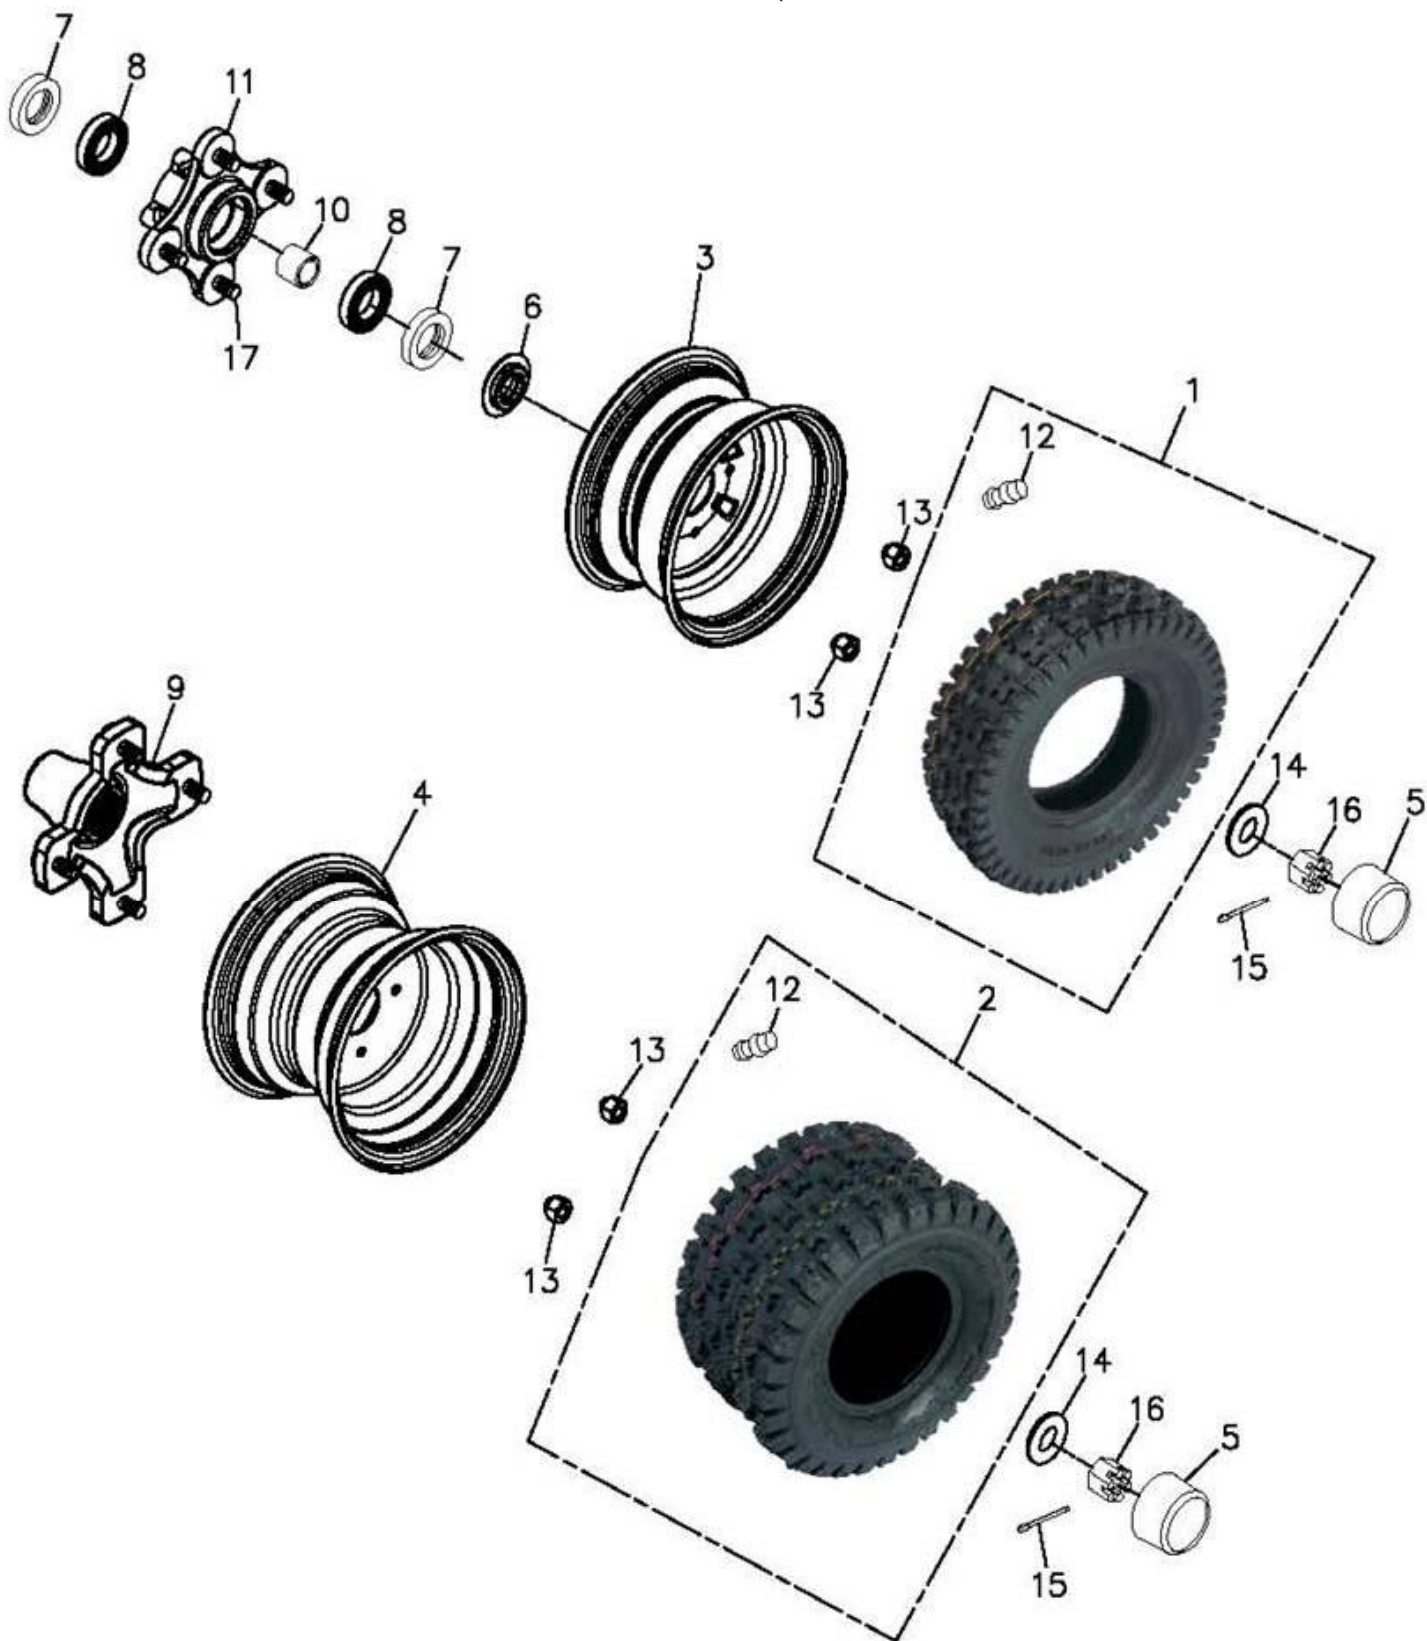


組件 編號：501-F08B


前後輪鋼圈(EU 2)22*7-10/2011-9 WHEEL FRONT& RE

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
=====				
1	42711-182-00C	2	FRONT TIRE	前輪胎 22*7-10 D I2012
2	42811-182-00C	2	REAR TIRE	後輪胎 20*11-9 D I2011
3	42701-169-00D	2	FRONT RIM	前鋼圈(10*5.5)十字孔
4	42801-169-00E	2	REAR RIM	後鋼圈(十字孔)
5	42814-145-000	4	RUBBER COVER	橡膠套
6	42707-169-000	2	COLLAR	銅襯套
7	96500-29435	4	OIL SEAL	油封(含油)
8	96100-6004ZZ	4	RADIAL BALL BEARING	滾珠軸承
9	42037-256-000RD	2	REAR SHAFT HUB(RD)	後輪軸聯結器(紅)
10	42705-169-000	2	COLLER	銅襯套
11	42036-169-000RD	2	FRONT WHEEL HUB(RD)	前輪軸聯結器(紅)
12	42616-145-000	4	AIR NOZZLE	風嘴
13	94001-10018B	16	WHEEL NUT	六角螺帽*(輪圈用,白色)
14	94101-1840045C	4	PLANE WASHER	平面墊圈(五彩)
15	94201-35400B	4	COTTER PIN	開口梢
16	94051-18000B	4	SCOTCH NUT	開槽螺帽(白色)
17	96005-10035C	8	HUB STUD BOLT	輪圈固定螺栓
=====				

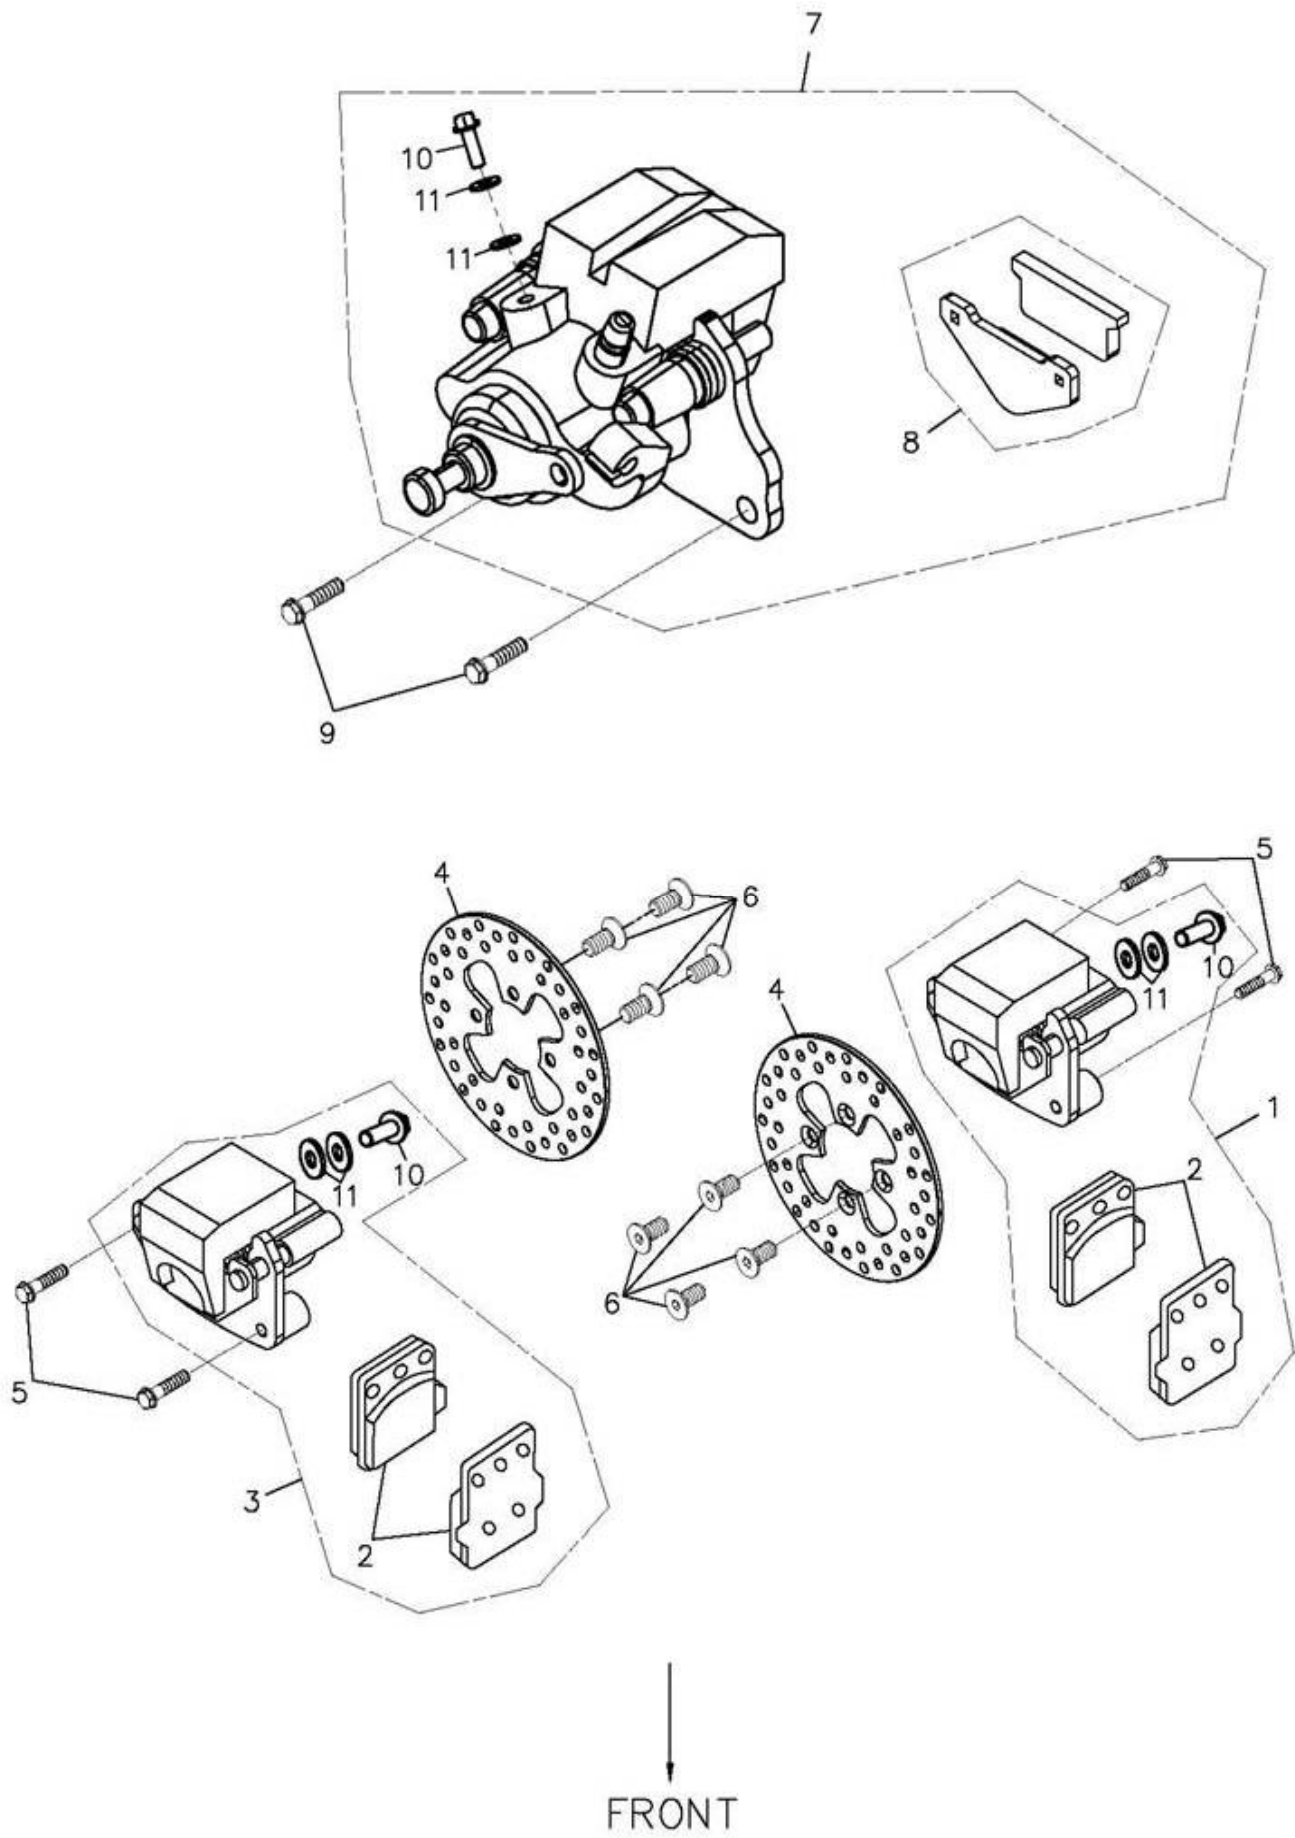


Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	45000-256-000	1	R. FRONT BRAKE CALIPER ASS'Y	前右剎車卡鉗總成
2	45120-256-000	2	FRONT BRAKE PAD KIT	前剎車片組
3	45200-256-000	1	L. FRONT BRAKE CALIPER ASS'Y	前左剎車卡鉗總成
4	45015-169-000	2	BRAKE DISC	剎車碟
5	96000-0802012GI	4	HEX FLANGE BOLT	六角緣面螺栓(墨綠+耐落膠)
6	93901-08018GL	8	HEX SOCKET FLAT HEAD BOLT	六角承窩平頭螺栓(墨綠)
7	43000-223-000	1	REAR BRAKE CALIPER ASS'Y	後剎車卡鉗總成
8	43120-256-000	1	BRAKE PAD KIT	剎車片組
9	96000-10028-14G	2	HEX WASHER FACE BOLT	六角緣面螺栓(耐落)
10	45456-107-000	3	BRAKE HOSE FIX BOLT	協宏---油管固定螺栓
11	94103-1015012	6	COPPER PLAIN WASHER	協宏--平面墊圈(銅)

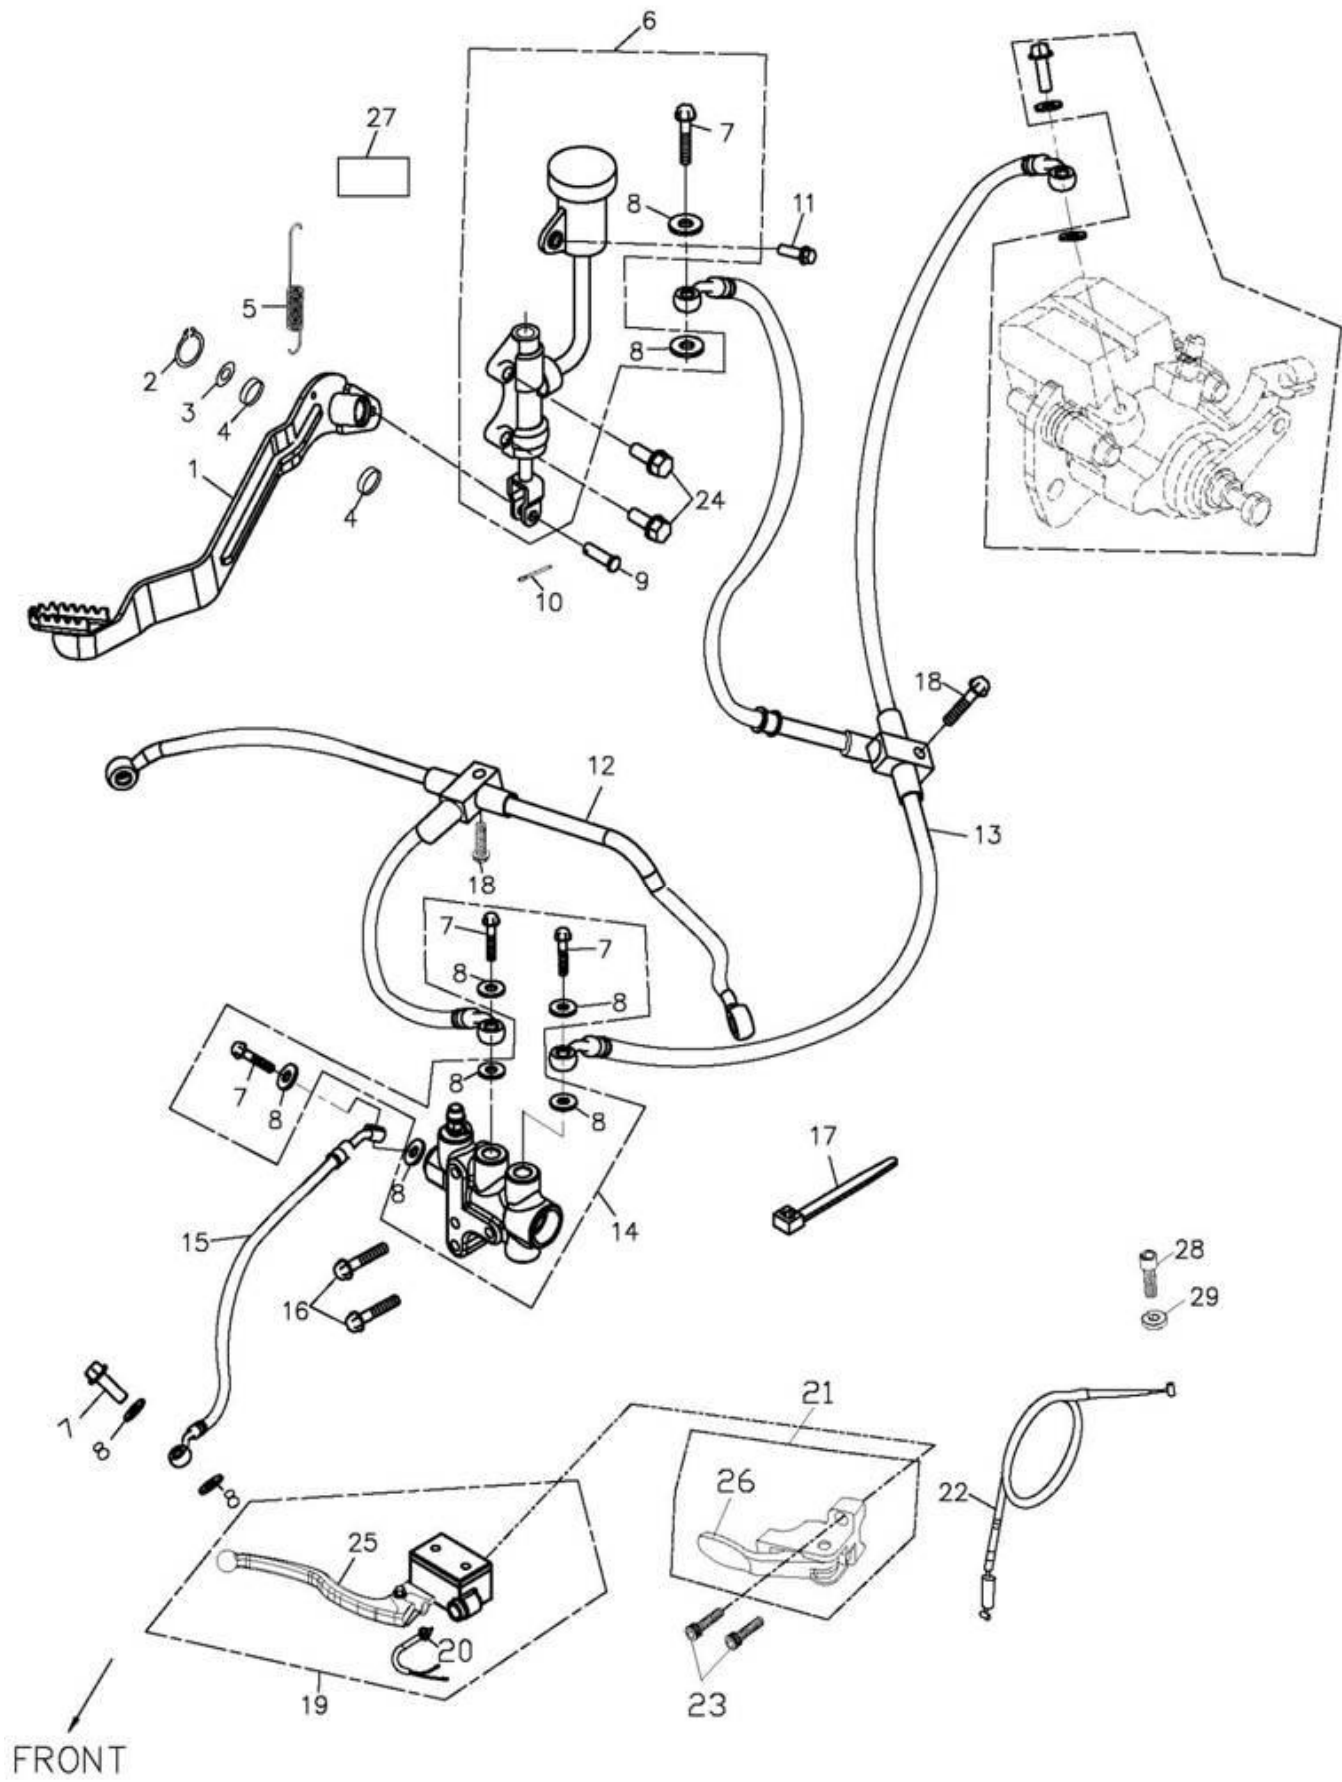


Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	46500-501-000	1	BRAKE PEDAL WELDED PAINTED	剎車踏桿
2	94511-1700S	1	EXTERNAL CIRCLIP	外環夾 S-17
3	94101-1731023B	1	PLAIN WASHER	平面墊圈(白)
4	91316-169-000	2	OIL RING	油環
5	46501-501-000	1	RETURN SPRING	剎車踏桿總成回拉彈簧
6	43500-256-00A	1	REAR BRAKE CYLINDER SUB ASS'Y	*後剎車泵總成-500C C
7	45456-107-000	5	BRAKE HOSE FIX BOLT	協宏 ---油管固定螺栓
8	94103-1015012	10	COPPER PLAIN WASHER	協宏 --平面墊圈(銅)
9	45521-168-000	1	PIN	剎車泵肘插銷
10	94251-108-000	1	LOCK PIN	固定梢(大)
11	96000-06016-10G	1	HEX FLANGE BOLT	六角緣面螺栓(墨綠)
12	45450-501-000	1	FRONT BRAKE HOSE ASS'Y	前剎車油管(三通)
13	43460-501-000	1	REAR BRAKE HOSE	剎車泵軟管
14	45502-256-000	1	BRAKE SHUNT ASS'Y	剎車分流泵
15	45550-901-000	1	R. BRAKE HOSE	右剎車軟管
16	96000-06035-10B	2	HEX FLANGE BOLT	六角緣面螺栓(白)
17	90669-101-000	1	CABLE TIE	塑膠束帶(4.8*200)
18	96000-06025-10C	2	HEX WASHER FACE BOLT	六角緣面螺栓(五彩)
19	45500-228-000	1	R. CYLINDER SUB ASS'Y	*右剎車總泵總成(不含固定塊)
20	35340-169-000	1	R.BRAKE SWITCH	右剎車開關線
21	53186-601-000	1	PRAKING BRAKE LEVER SET	駐車拉桿組
22	43482-501-000	1	PRAKING BRAKE CABLE	駐車導線
23	91000-06025B	2	HEX SOCKET BOLT	六角承窩螺栓(白)
24	96000-08028-12G	2	HEX WASHER FACE BOLT	X*六角緣面螺栓(墨綠)
25	53175-169-000	1	RIGHT LEVER	右拉桿
26	53187-601-000	1	PRAKING BRAKE LEVER	駐車拉桿
27	43503-256-000	1	REAR MASTER CYLINDER GASKET	後剎車泵(油杯)隔熱墊
28	53191-168-000	1	LOCK BLOT	剎車線調整螺栓
29	53192-168-000	1	LOCK NUT	調整螺帽

501-F11A HANDLE BAR


[TOP](#)

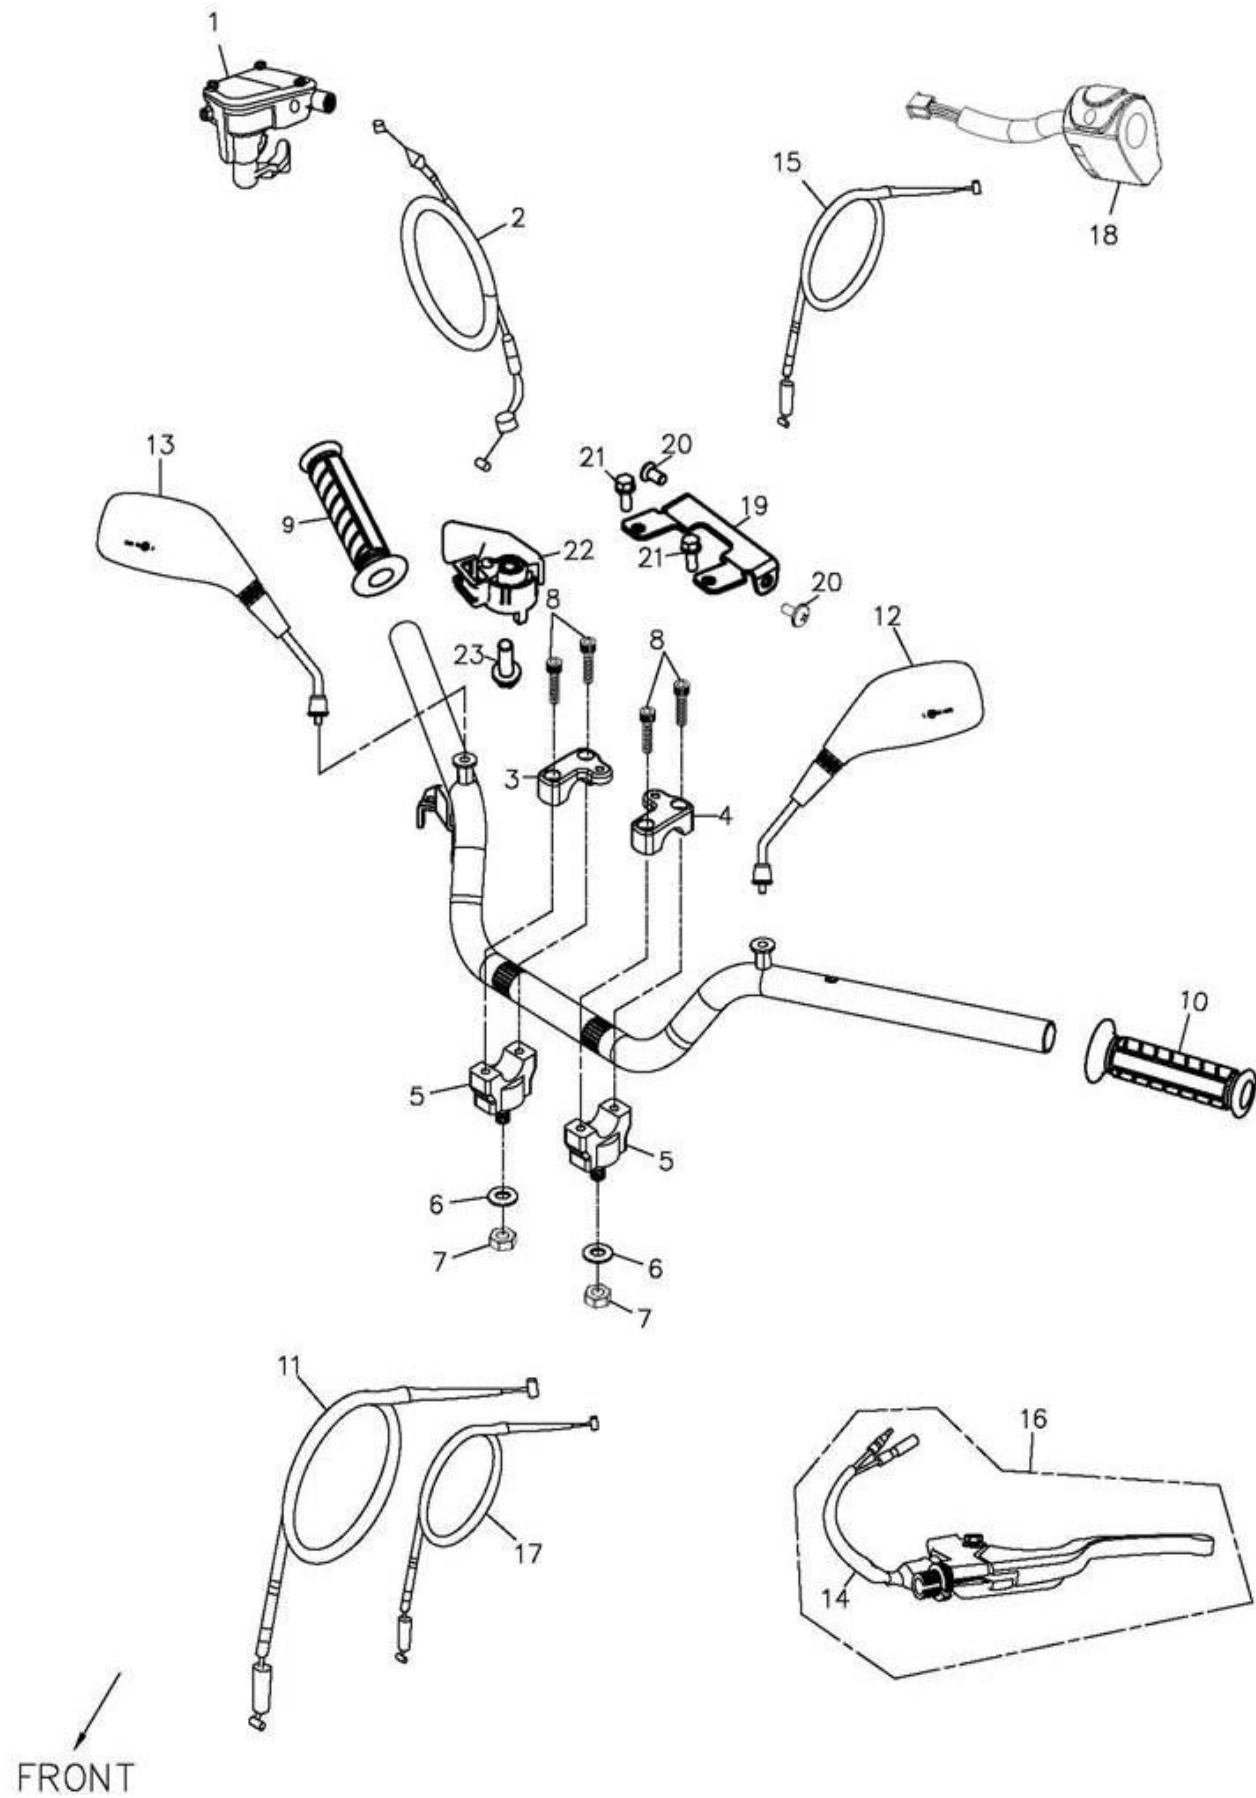

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	53170-169-000	1	THROTTLE LEVER ASS'Y	節流拉桿總成
2	17910-501-000	1	THROTTLE CABLE	節流導線
3	53103-145-00A	1	RIGHT HANDLE BAR CLAMP	*手把上右固定座(無字)
4	53102-145-00A	1	LEFT HANDLE BAR CLAMP	*手把上左固定座(無字)
5	53101-154-000	2	HANDLE BAR BOTTOM CLAMP	手把下固定座
6	94105-1022025G	2	PLAIN WASHER	平面墊圈(墨綠)
7	90350-10000G	2	NYLON NUT	止鬆螺帽(墨綠)
8	91000-06025K	4	HEX SOCKET BOLT	六角承窩螺栓(黑)
9	53165-501-000	1	R. HANDLE GRIP	右把手套
10	53166-501-000	1	L. HANDLE GRIP	左把手套
11	22870-501-000	1	CLUTCH CABLE	離合器導線
12	88120-145-000	1	L.REAR VIEW MIRROR	左後視鏡
13	88110-145-000	1	R.REAR VIEW MIRROR	右後視鏡
14	35345-169-000	1	L.CLUTCH SWITCH	左離合器開關線
15	17950-501-000	1	CHOCK CABLE	阻風門導線
16	53179-501-000	1	LEFT LEVER ASS'Y	左拉桿總成
17	43480-501-000	1	REVERSE CABLE A	倒檔導線
18	35200-169-00A	1	L.HANDLE SWITCH ASS'Y	左開關組合(92/61)
19	37210-225-000	1	SPEEDOMETER BRACKET	碼錶飾蓋固定座
20	93701-06015G	2	PAN FLAT HEAD PHILLIPS BOLT	十字扁圓平頭螺栓(墨綠)
21	91000-06012K	2	HEX SOCKET BOLT	六角承窩螺栓(黑)
22	35210-501-000	1	REVERSE SWITCH	倒檔開關(右)
23	96000-06030-10B	1	HEX FLANGE BOLT	六角緣面螺栓(白)

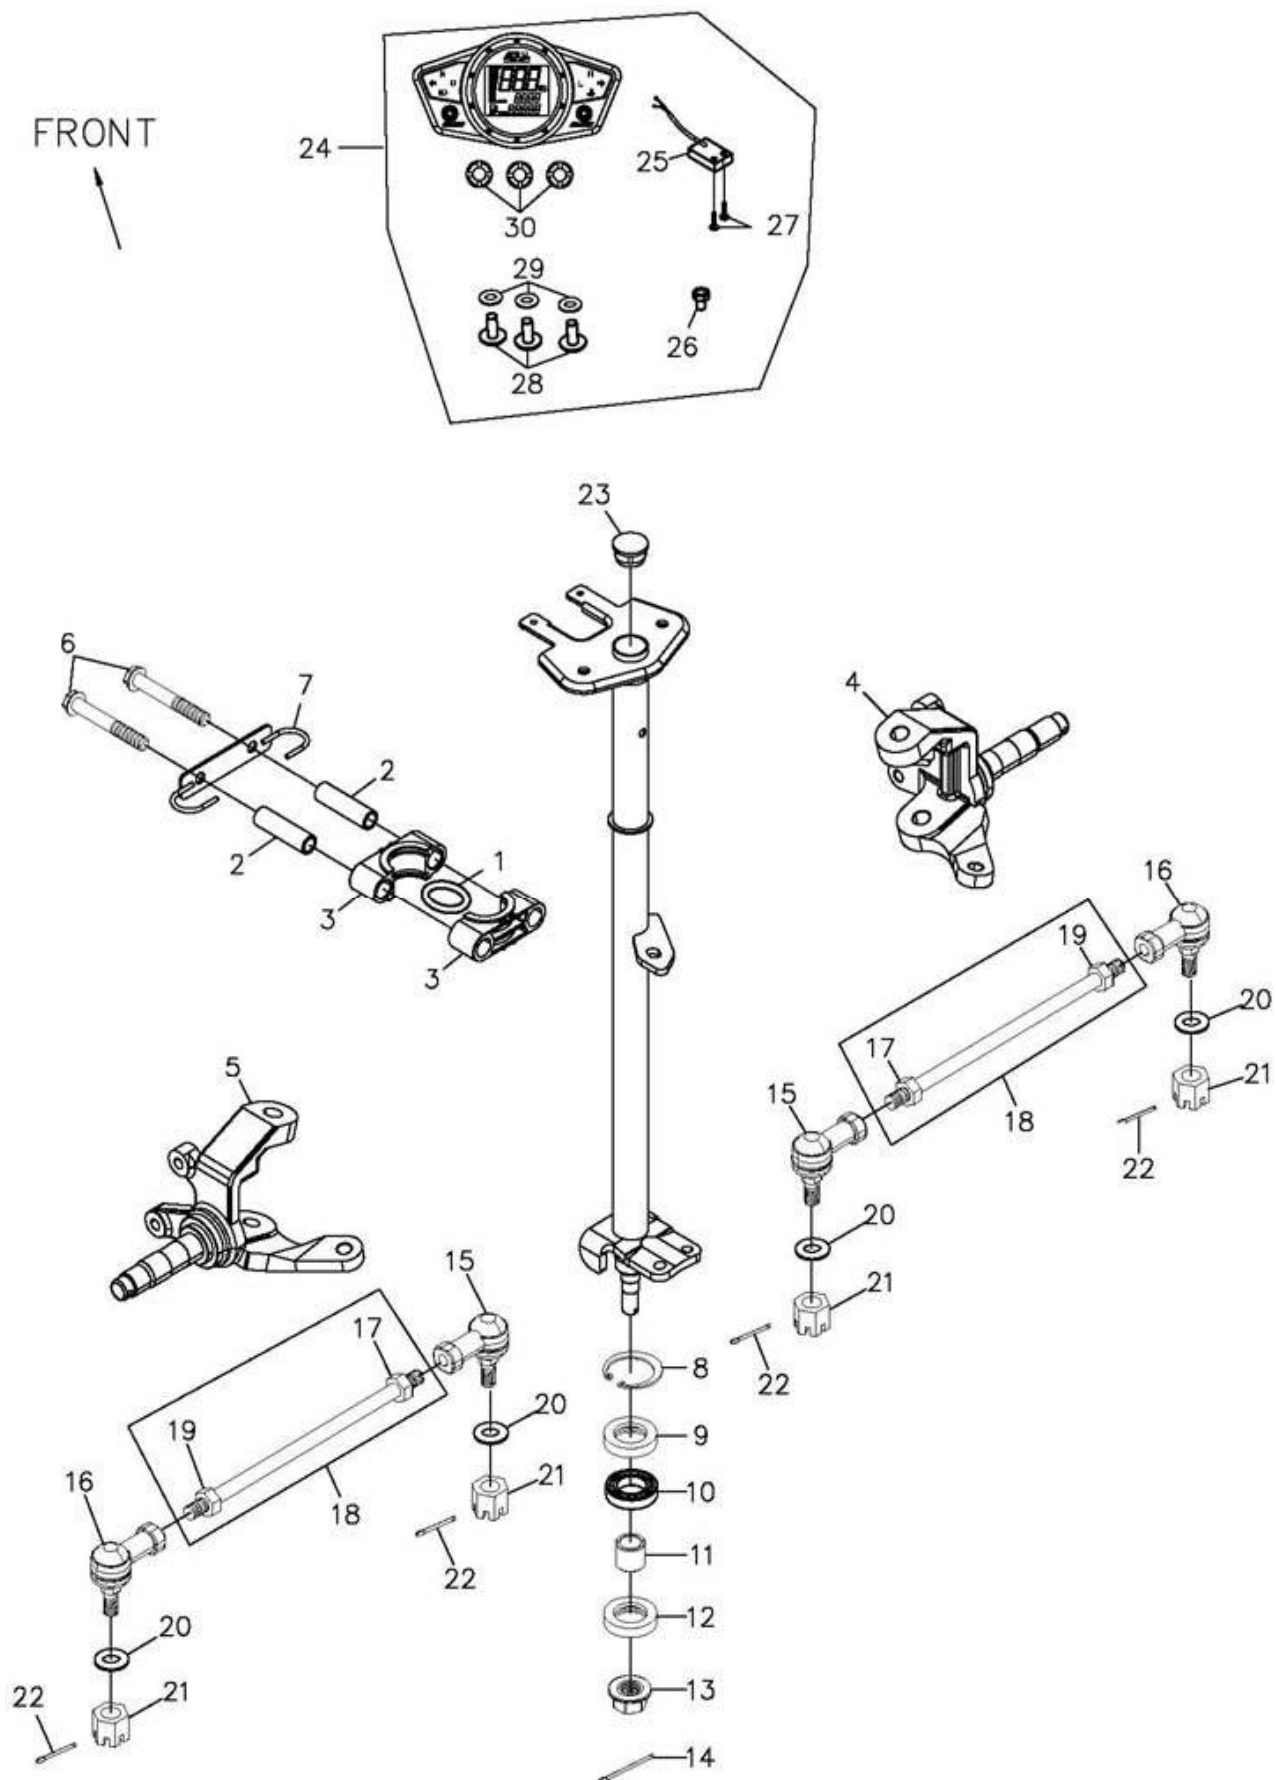

-----					-----				
Item	Parts No.	Qt'y	Parts Name						
項次	部 品 番 號	用 量	零 件	名 稱					
=====						=====			
1	91331-179-000	2	O-RING			O型環			
2	51114-169-000	2	HOLDER SPACER COLLER			固定座間隔管			
3	51113-169-000	2	STEERING SHAFT HOLDER			轉向桿固定座			
4	44520-169-000	1	RIGHT KNUCKLE ASS'Y			右轉向臂總成(版2)			
5	44510-169-000	1	LEFT KNUCKLE ASS'Y			左轉向臂總成(版2)			
6	96000-10065-14G	2	HEX FLANGE BOLT			六角緣面螺栓X(墨綠)			
7	45451-501-000	1	BRACKET			導線固定勾			
8	94512-4000R	1	INTERNAL CIR CLIP			內環夾			
9	96500-274008	1	OIL SEAL			油封			
10	96100-6203ZZ	1	RADIAL BALL BEARING			滾珠軸承			
11	51120-169-000	1	STEERING SHAFT BUSHING			轉向桿襯套			
12	96500-22357	1	OIL SEAL			油封			
13	90350-14000G	1	NYLON NUT			止鬆螺帽(墨綠)			
14	94201-35400B	1	COTTER PIN			開口梢			
15	44511-256-000	2	BALL JOINT,LEFT THREAD			萬向頭(左牙)			
16	44521-256-000	2	BALL JOINT,RIGHT THREAD			萬向頭(右牙)			
17	94001-12000LC	2	HEX NUT			X*六角螺帽(左牙,五彩)			
18	91001-12356B	2	ROD			雙頭螺栓(左右牙,白色)			
19	94001-12000B	2	HEX NUT			X六角螺帽(白色)			
20	94101-1020020G	4	COPPER PLAIN WASHER			平面墊圈(墨綠)			
21	90350-10000G	4	NYLON NUT			止鬆螺帽(墨綠)			
22	94201-20190B	4	COTTER PIN			開口梢			
23	96421-197-000	1	RUBBER CAP			橡膠套			
24	37200-501-000	1	SPEEDOMETER ASS'Y			速度錶組合			
25	37218-225-000	1	SENSOR			感應器			
26	37217-256-000	1	MAGNET			感應磁鐵			
27	91000-05016	2	HEX SOCKET BOLT			六角承窩螺栓			
28	93903-04012K	3	TAPPING SCREW TRUSS HEAD PHILLIPS			自攻螺絲(黑)			
29	94101-0514010K	3	PLAIN WASHER			平面墊圈(黑)			
30	37202-225-000	3	DAMPER			防震塞			
=====						=====			

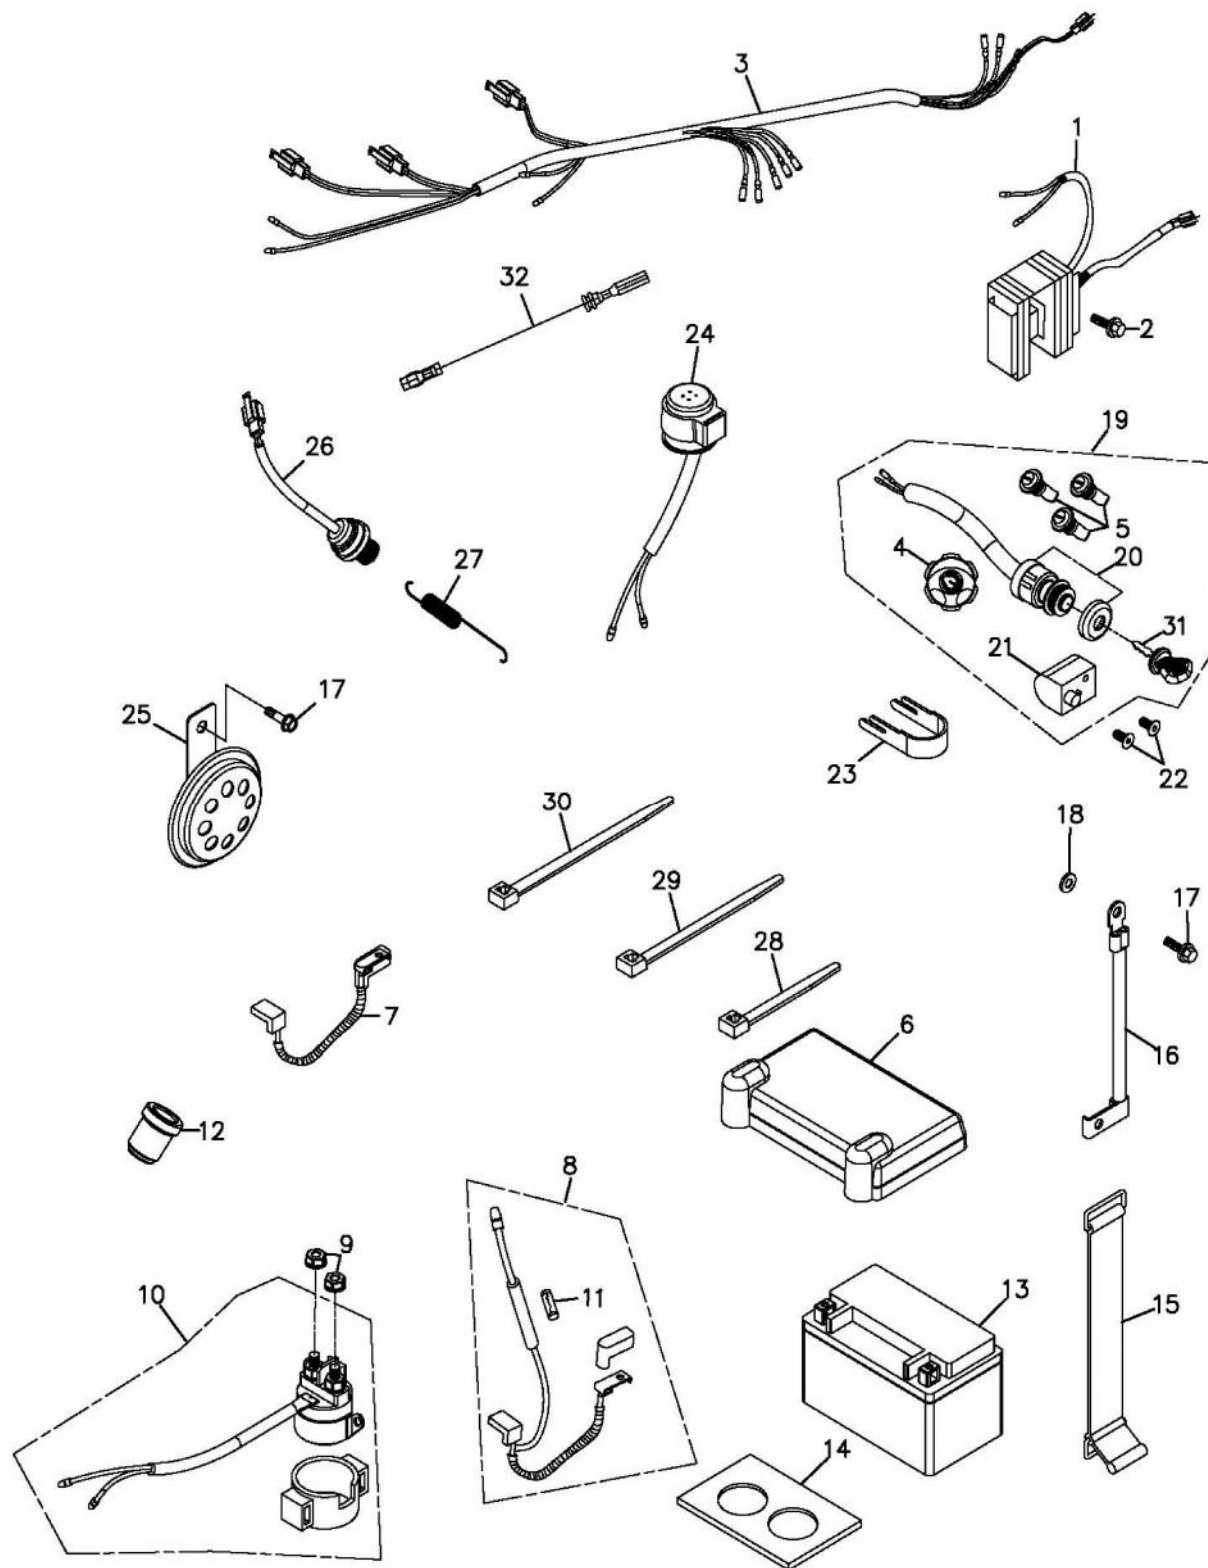


組件 編號：501-F14A

電瓶& 主配線(EU 2)BATTERY & MAIN W ARNESS AS

[TOP](#)

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	31600-501-000	1	REGULATOR RECTIFIER	穩壓整流器
2	96000-06016-10G	2	HEX FLANGE BOLT	六角緣面螺栓(墨綠)
3	32100-501-00A	1	WIRE HARNESS	主配線(EU 2)
4	17620-169-00C	1	FUEL CAP (W/LOCK)	汽油箱蓋(有鎖-92/61)
5	81142-261-000	3	INNER BOX LOCK	行李箱鎖
6	31504-169-000	1	BATTERY COVER	電瓶蓋
7	32105-501-000	1	SUB. HARNESS	起動馬達線
8	32108-169-0A0	1	POSITIVE CABLE	起動(+)極線
9	94055-06000C	2	HEX FLANGE NUT WITH SERRATION(TOOTH)	六角緣面齒紋螺帽(五彩)
10	38501-501-000	1	STARTER SOLENOID	起動電譚
11	98200-169-000	1	FUSE	保險絲
12	16148-501-000	1	CARBURETOR REDUCER	*化油器控速環
13	31500-225-000	1	Battery	電瓶
14	30003-169-000	1	RUBBER PAD	緩衝橡膠
15	31520-169-000	1	BATTERY STRAP	電瓶束帶
16	32103-169-0A1	1	GROUND WIRE	接地線
17	96000-06010-10G	2	HEX FLANGE BOLT	六角緣面螺栓(墨綠)
18	94115-0611006	1	EXT. TOOTHED LOCK WASHER	強力形外齒墊圈
19	35010-225-00A	1	KEY SET	開關鎖總成(含主開關,把手,行李)
20	35100-223-00A	1	MAIN SWITCH	電源主開關(EU 2)
21	53600-223-000	1	STEERING HANDLE LOCK	把手鎖
22	93902-06012BL	2	FLAT HEAD PHILLIPS BOLT	十字平頭螺栓
23	35102-145-000	1	MAIN SWITCH BRACKET	主開關制止片
24	38301-107-0AC	1	FLASHER RELAY	方向燈斷續器(單顆閃頻不同)
25	38110-256-000	1	LEFT SOUND HORN	喇叭(E4-28R-000014)
26	35350-108-000	1	STOP SWITCH ASS'Y	剎車燈開關總成
27	35357-501-000	1	STOP SWITCH SPRING	剎車燈開關彈簧(-108-)
28	90669-101-000	6	CABLE TIE	塑膠束帶(4.8*200)
29	90669-101-00A	2	CABLE TIE	塑膠束帶(L=4.8*250mm)
30	90669-218-000	2	CABLE TIE	塑膠束帶
31	35101-223-000	1	KEY(L)	鑰匙(左)
32	32116-501-000	1	EXTENSION WIRE	轉速轉接線

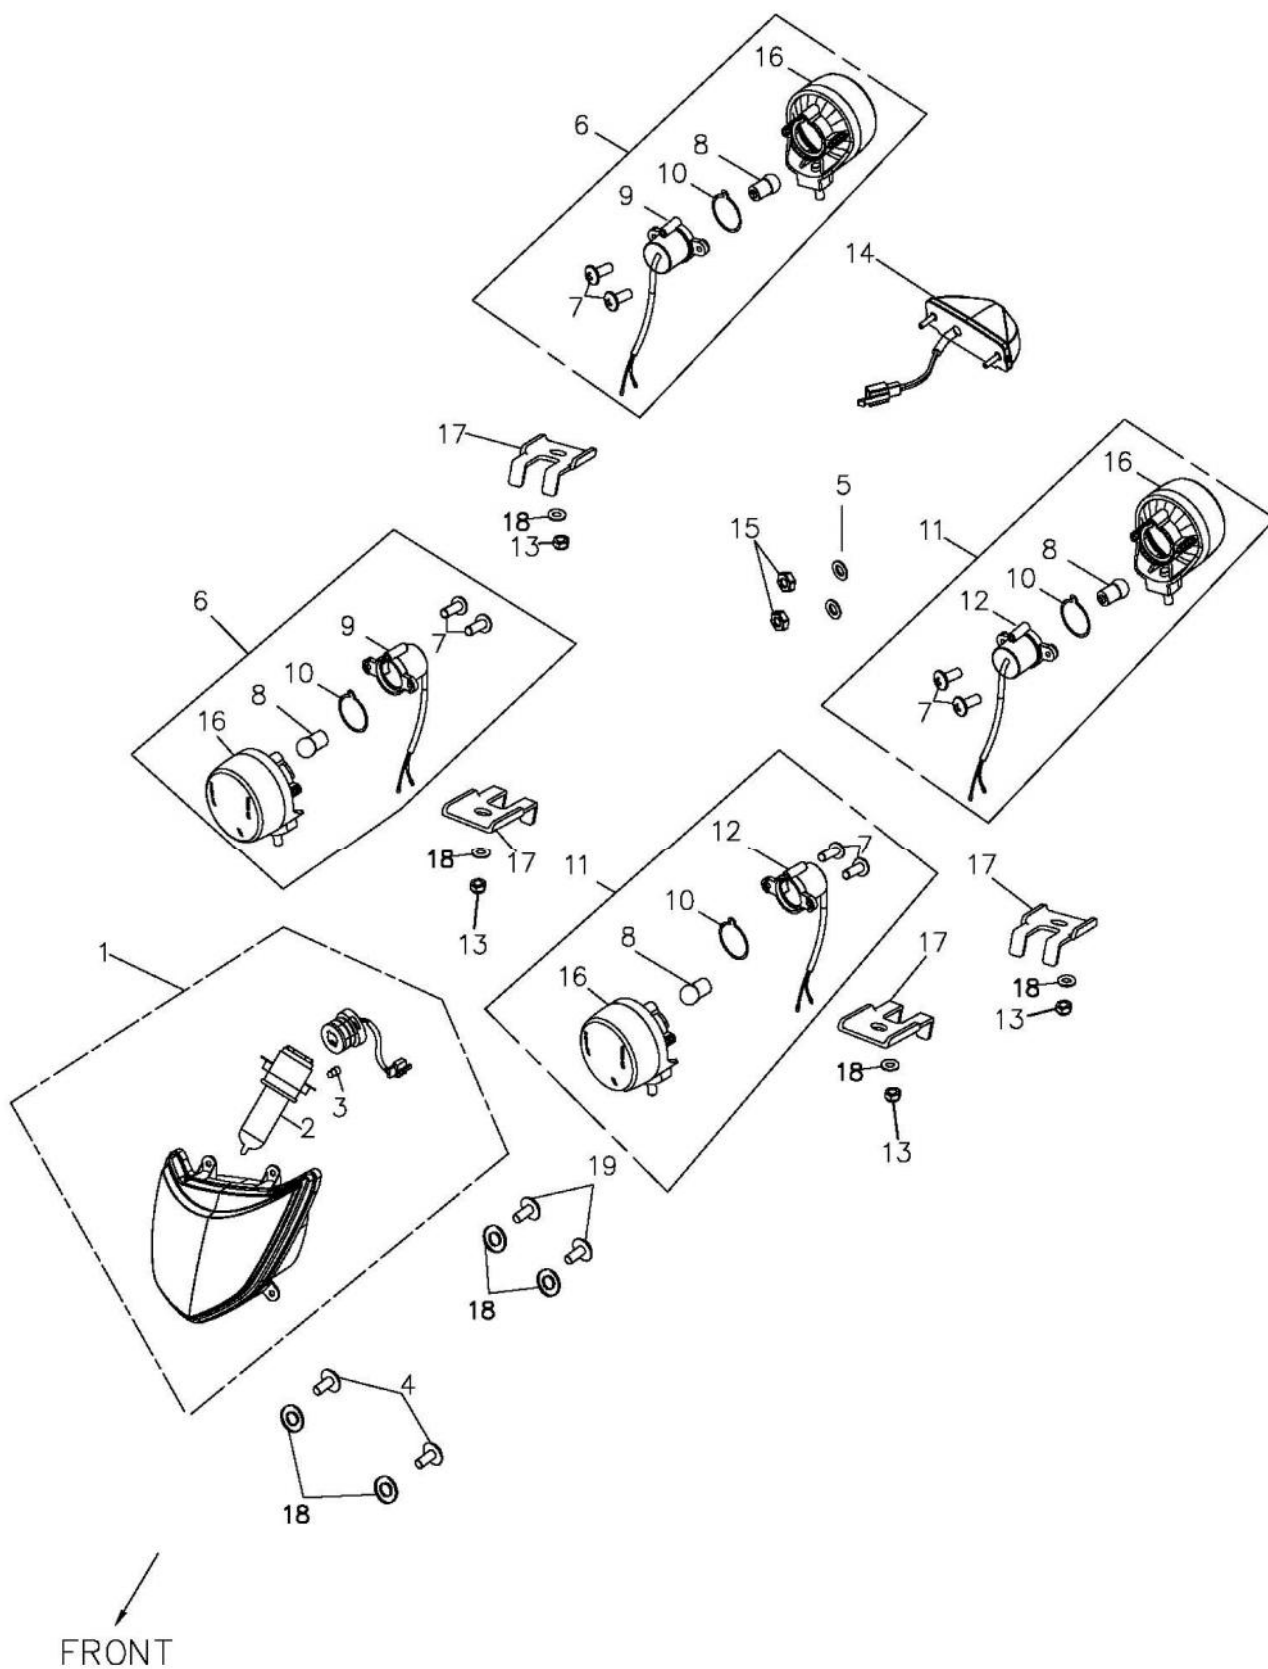

組件編號：501-F15A

方向燈,後燈(EU 2) SIGNAL LIGHT,TALE LIGHT

[TOP](#)

-----				-----	
Item	Parts No.	Qt'y	Parts Name		
項次	部 品 番 號	用 量	零 件 名 稱		
=====				=====	
1	33100-225-000	1	HEAD LIGHT ASS'Y	前燈組合(E-MARK)	
2	34901-190-00B	1	HEAD LIGHT BULB	前燈泡(HS1)	
3	34909-169-000	1	POSITION LAMP	位置燈	
4	93903-05016K	4	TAPPING SCREW TRUSS HEAD PHILLIPS	自攻螺絲(黑)	
5	94101-0618020B	2	PLAIN WASHER	平面墊圈(白)	
6	33400-501-000	2	R.SIGNAL ASS'Y (E-MARK)	右方向燈組合(E-MARK)	
7	93500-03010C	8	PAN PHILLIPS BOLT	十字圓頭螺栓	
8	34905-118-00A	4	BULB(E-MARK)	方向燈泡 (橘色)	
9	33425-501-000	2	SIGNAL BULB SOCKET	右方向燈泡座	
10	33413-501-000	4	SIGNAL RUBBER WASHER	方向燈橡膠墊圈	
11	33450-501-000	2	L.SIGNAL ASS'Y(E-MARK)	左方向燈組合(E-MARK)	
12	33435-501-000	2	L.SIGBAL BULB SOCKET	左方向燈泡座	
13	94050-05000C	4	HEX FLANGE NUT WITH SERRATION	六角緣面螺帽(五彩)	
14	33700-225-000	1	TAIL LIGHT ASS'Y	後燈組合(LED)	
15	90350-06000G	2	NYLON NUT	止鬆螺帽(墨綠)	
16	33401-501-000	4	SIGNAL SOCKET	方向燈座	
17	33403-225-000	4	FIX BRACKET	方向燈固定座	
18	94101-0514010K	8	PLAIN WASHER	平面墊圈(黑)	
19	93903-04016K	2	TAPPING SCREW TRUSS HEAD PHILLIPS	自攻螺絲(黑)	
=====				=====	

**WARNING**

Improper tire pressure or over-loading can cause loss of control, resulting in SEVERE INJURY or DEATH.
ALWAYS maintain proper tire pressure as shown.

NEVER set tire pressure below minimum. It could cause the tire to dislodge from the rim.

NEVER exceed the vehicle load capacity of 165kg (375lb) including weight of operator, cargo, accessories and trailer tongue weight.

ATV LOADING and TRAILER TOWING
Cargo loading or trailer towing can affect stability and handling.

- reduce speed.
- allow more distance to stop.
- avoid hills/rough terrain.

COLD TIRE PRESSURE

FRONT/REAR
Pressure: 10 psi (0.7 kg/cm²)
Max.: 15 psi (1.05 kg/cm²)
Min.: 3.5 psi (0.245 kg/cm²)

87758-108-00A

HER CHEE INDUSTRIAL CO., LTD.

e

dB(A)-min

**WARNING**



Operating this ATV if you are under the age of 16 increases your chance of SEVERE INJURY or DEATH.
NEVER operate this ATV if you are under age 16.

87758-108-00D

**WARNING**

Improper ATV use can result in SEVERE INJURY or DEATH.





ALWAYS USE AN APPROVED PROTECTIVE GEAR.

NEVER USE WITH DRUGS OR ALCOHOL.

NEVER operate:

- without proper training or instructions.
- at speeds too fast for your skills or the conditions.
- Do not make turns with high speed to avoid tunnel tumble-over.

ALWAYS:

- use proper riding techniques to avoid vehicle overturns on hills and rough terrain and in turns.
- avoid slicked surfaces/pavement may seriously affect handling and control.
- ALWAYS WEAR HELMET and other protection equipment.
- Shut off engine when refilling gas.
- Read owner's manual before riding and always keep the owner's manual with vehicle.

LOCATE AND READ OPERATOR'S GUIDE.
FOLLOW ALL INSTRUCTIONS & WARNINGS.

87758-108-00E

DRIVE CHAIN

DRIVE CHAIN MUST BE WELL ADJUSTED AND LUBRICATED. FREE PLAY IS 25-30 mm (0.8-1.2 in.) WITH DRIVER NOT ON VEHICLE.
SEE OWNER'S MANUAL FOR COMPLETE INSTRUCTIONS.

25-30 mm (0.8-1.2 in.)




87758-108-00F




Item	Parts No.	Qt'y	Parts Name	
項次	部品番號	用量	零件名	
1	87700-888-00Z	1	ADLY POLY STICKER	ADLY (波麗)
2	87756-169-00A	1	WARNING LABEL(TIRE INFLATION)	警告貼紙(輪胎)EU 2
3	87758-169-00A	1	WARNING LABLE(INJURE)	警告貼紙(注意事項)EU 2
4	87759-169-000	1	WARNING LABLE(16 YEARS OLD AND UNDER)	Y -16 警告貼紙
5	87739-179-000	1	CHAIN INSTRUCTION DECAL	鍊條調整貼紙
6	50110-101-001	1	I.D PLATE	銘版
7	87700-501-000	1	STICKER ASS'Y	全台份貼紙

TOP
FRONT

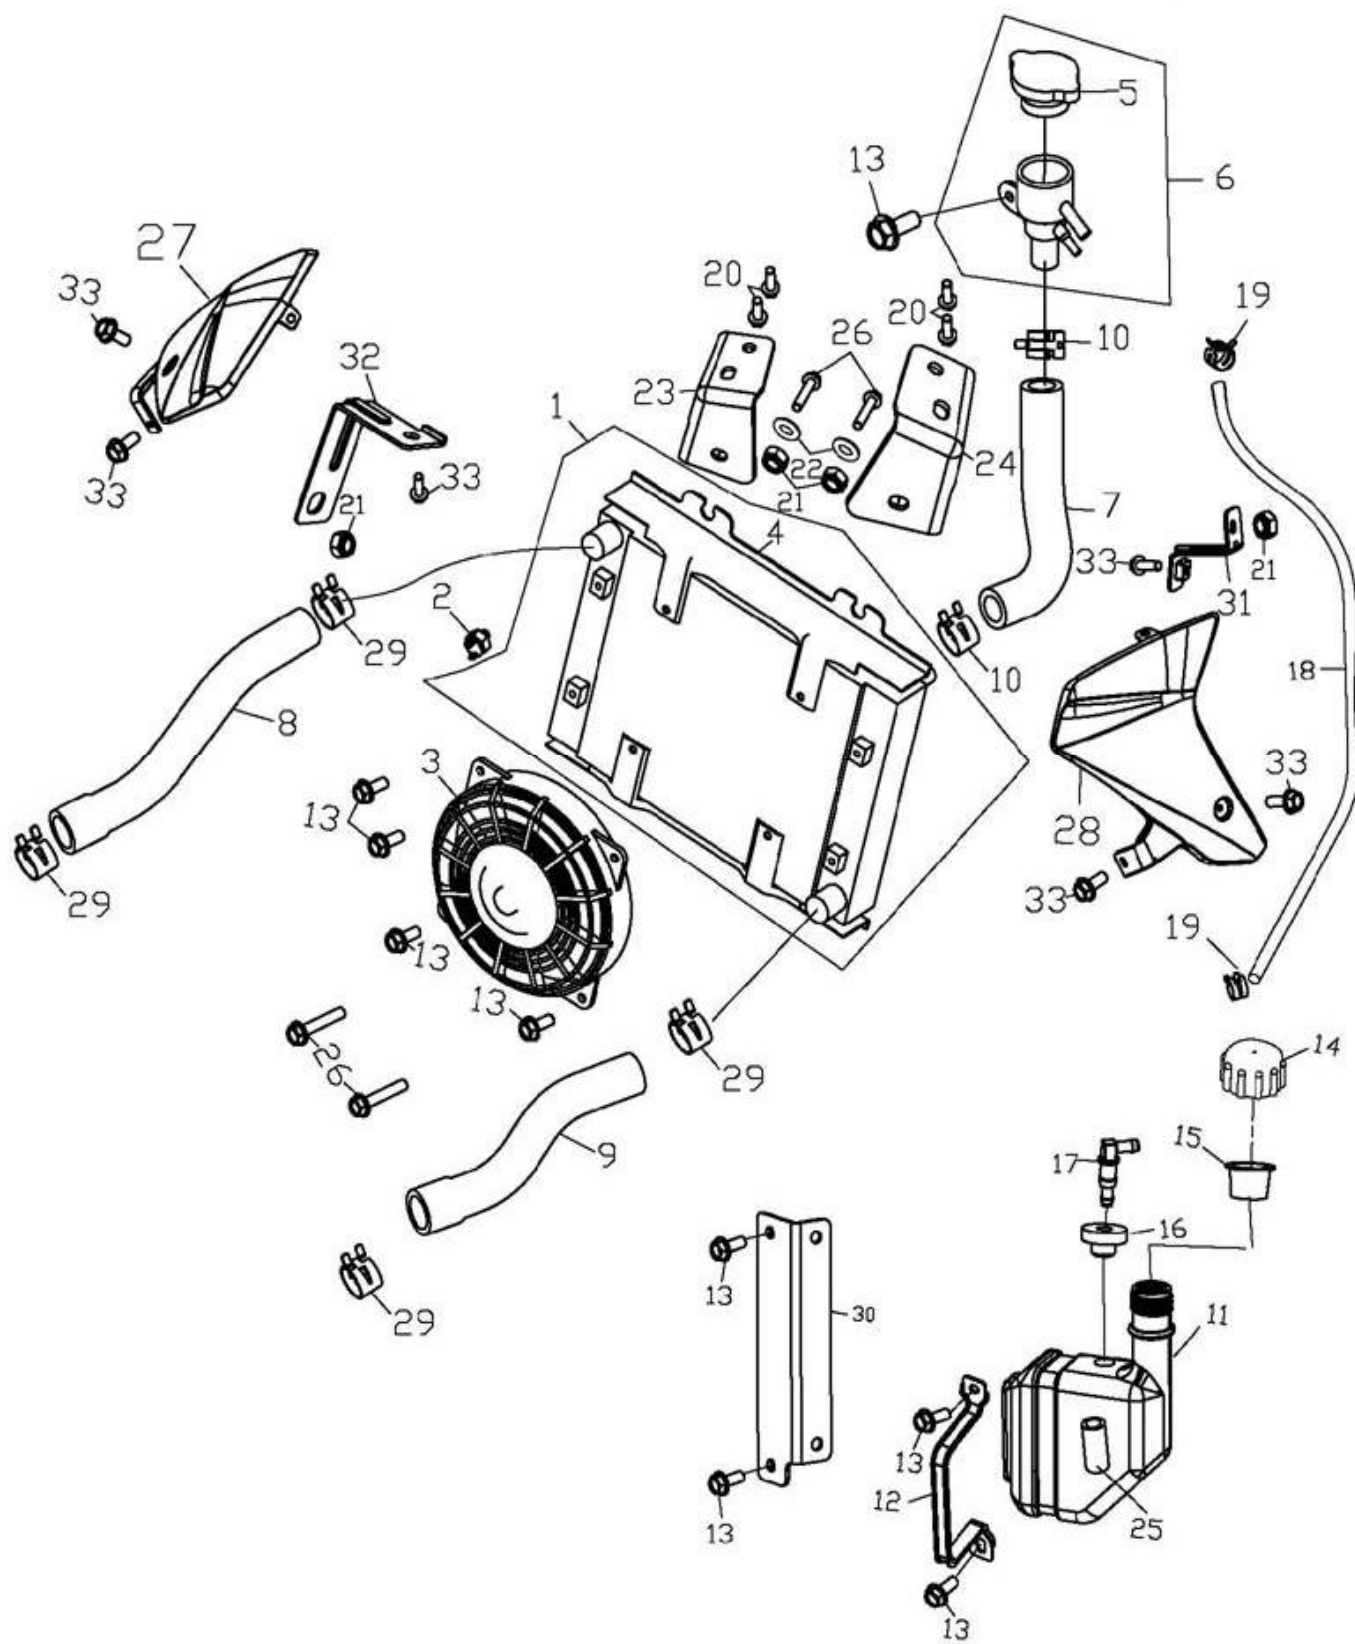


Item	Parts No.	Qt'y	Parts Name
項次	部 品 番 號	用 量	零 件 名 稱

1	19000-501-000	1	RADIATOR ASS'Y	水箱總成
2	35510-501-000	1	FAN SWITCH	風扇開關
3	19120-501-000	1	RADIATOR FAN ASSY	馬達風扇總成
4	19100-501-000	1	RADIATOR BODY	水箱本體
5	19110-225-000	1	RADIATOR CAP	水箱蓋
6	19113-501-000	1	FILL NECK	加水口頸
7	19109-501-000	1	HOSE LONNECTER	水箱連接管
8	19107-501-000	1	HOSE RAD. IN	水箱進水管
9	19102-501-000	1	HOSE RAD. OUT	水箱出水管
10	94516-27000	6	CLAMP	管夾27M M
11	19200-179-000	1	COOLANT TANK	副水箱(709200099)
12	19201-179-000	1	TANK ANCHOR	副水箱固定板
13	92006-06014-10G	9	HEX WASHER FACE BOLT	六角螺栓附墊圈(墨綠)
14	19210-179-000	1	COOLANT TANK CAP	副水箱蓋
15	19211-179-000	1	CAP PRROTECTOR	副水箱蓋內襯
16	19106-179-000	1	GROMMET	橡膠環
17	19220-179-000	1	MALE CONNECTOR	副水箱連接器
18	94400-0609300	1	HOSE	軟管
19	94513-08000	2	SPRING CLAMP	彈扣B00001-07
20	96000-06012-10G	4	HEX WASHER FACE BOLT	六角緣面螺栓(墨綠)
21	90350-06000G	4	NYLON NUT	止鬆螺帽(墨綠)
22	94101-0618020K	2	PLAIN WASHER	平面墊圈(黑)
23	50114-501-000	1	RIGHT LEFE	水箱上右固定座
24	50135-501-000	1	RADIATOR BRACKET	水箱上左固定座
25	94400-0609070	1	HOSE	軟管
26	92000-06025-10K	4	HEX BOLT	六角螺栓(黑)
27	19117-501-000	1	RADIATOR COWLING L.	水箱左護蓋
28	19118-501-000	1	RADIATOR COWLING R.	水箱右護蓋
29	94514-38000	4	CLAMP	夾環38M M
30	19202-501-000	1	COOLANT TANK BRACKER	副水箱連接座
31	19121-501-000	1	COWLING BRACKET R.	水箱護蓋右固定座
32	19122-501-000	1	COWLING BRACKET L.	水箱護蓋左固定座
33	92006-06012-10K	6	HEX WASHER FACE BOLT	六角螺栓附墊圈(黑)

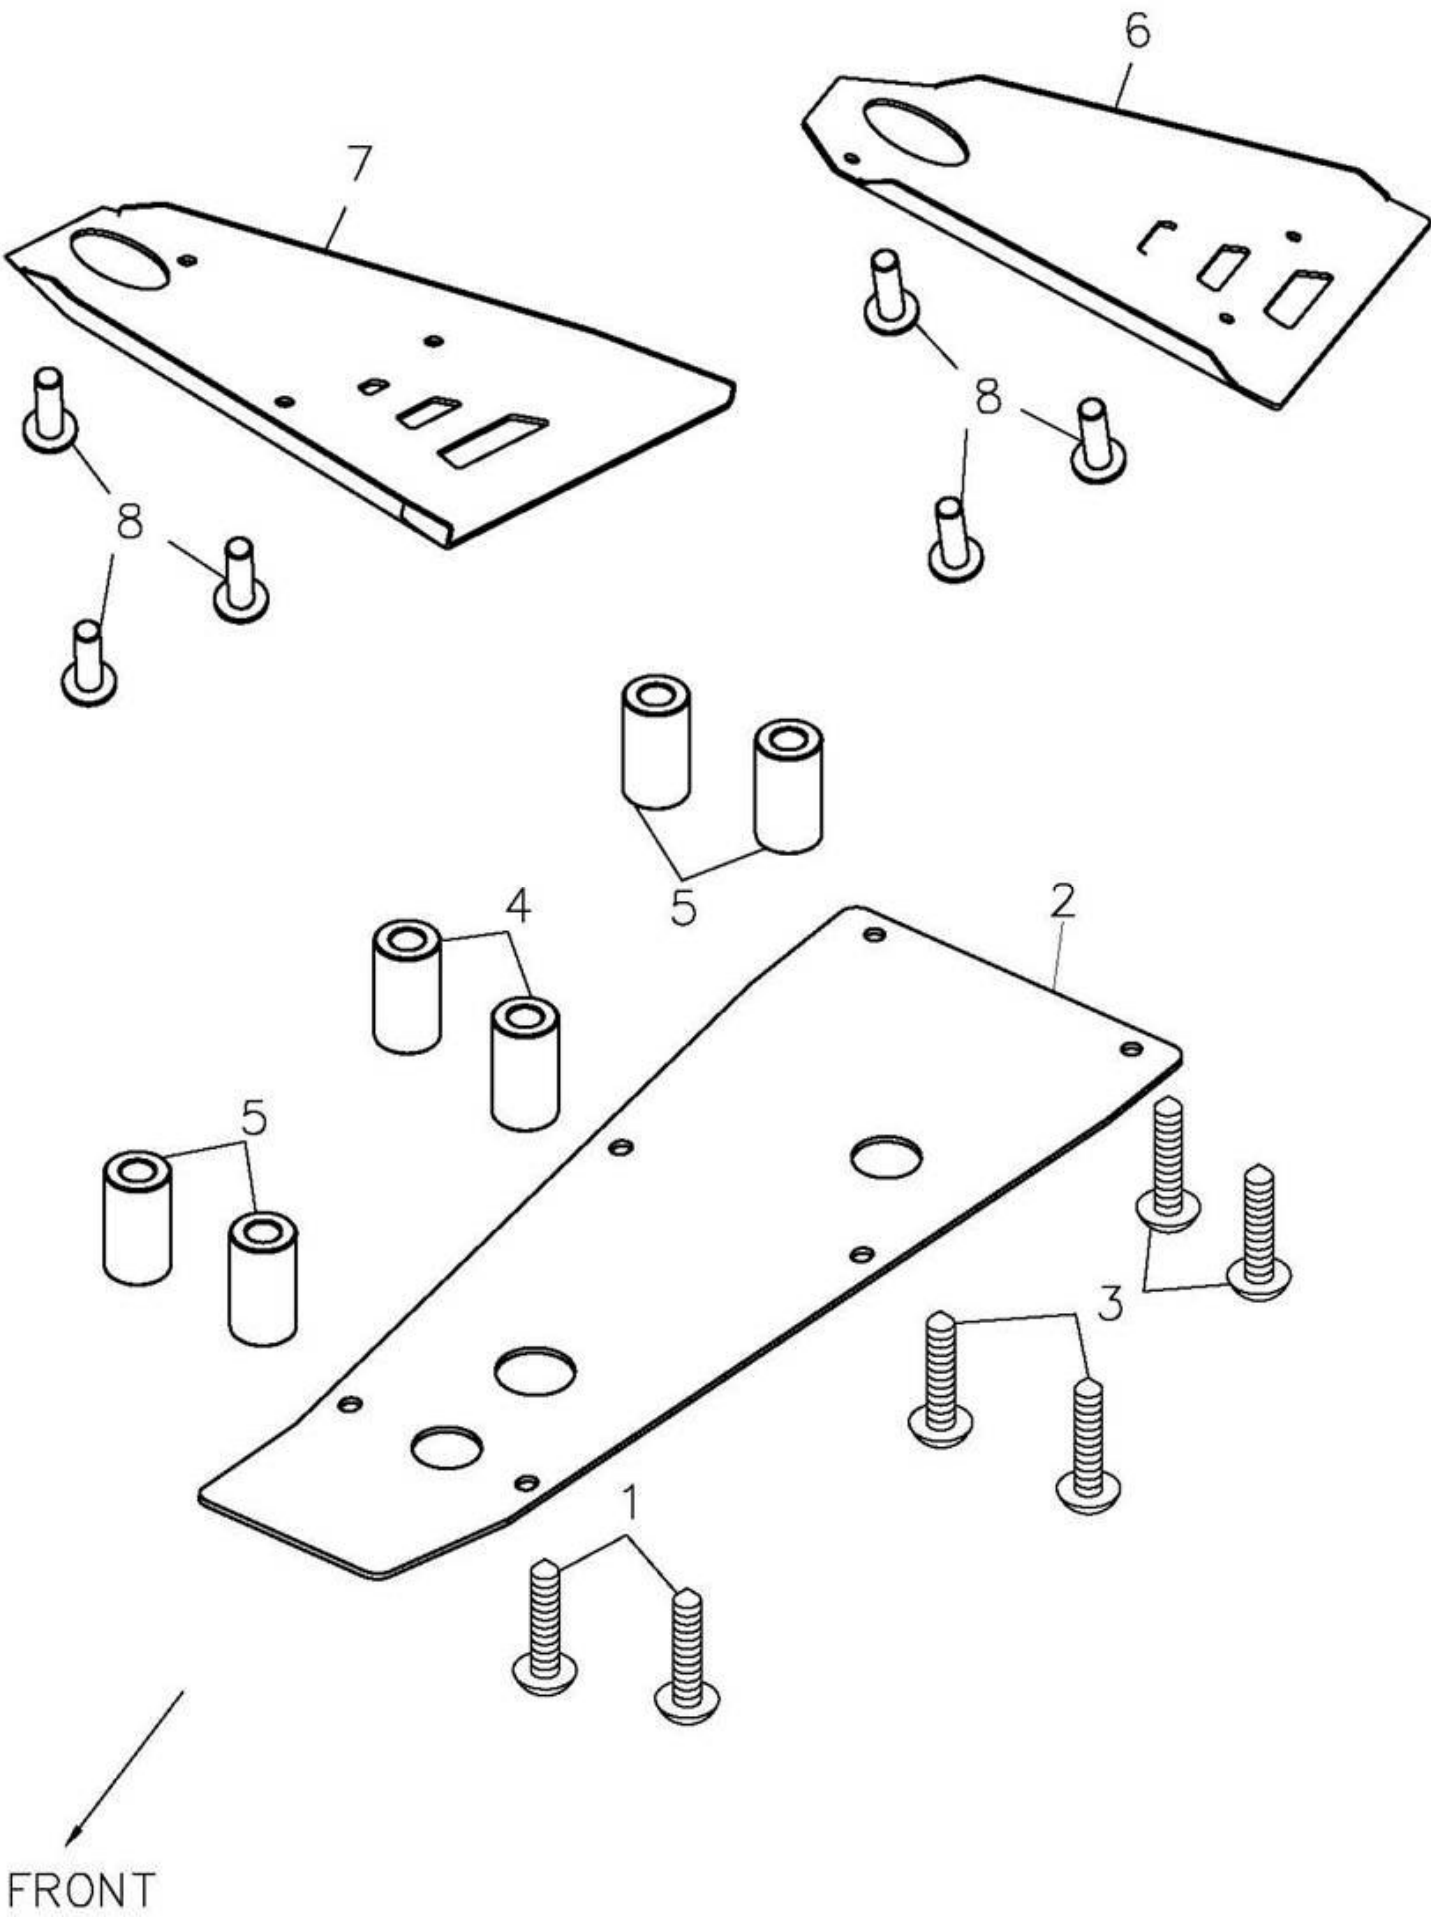

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	91500-08020K	2	HEX SOCKET CONE BOLT	六角承窩圓錐螺栓(黑)
2	50152-501-000	1	SKID PLATE	車架護板-鋁(選配)
3	91500-08030K	4	HEX SOCKET CONE BOLT	六角承窩圓錐螺栓(黑)
4	96403-0913008	2	SPACE TUBE	間隔管
5	96403-0913019	4	SPACE TUBE	間隔管
6	51206-501-000	1	R.ARM PLATE(AL)	下A 臂護板(鋁)-選配
7	51306-501-000	1	L.ARM PLATE(AL)	下A 臂左護板(鋁)-選配
8	96000-06020-10K	6	HEX WASHER FACE BOLT	六角緣面螺栓(黑)

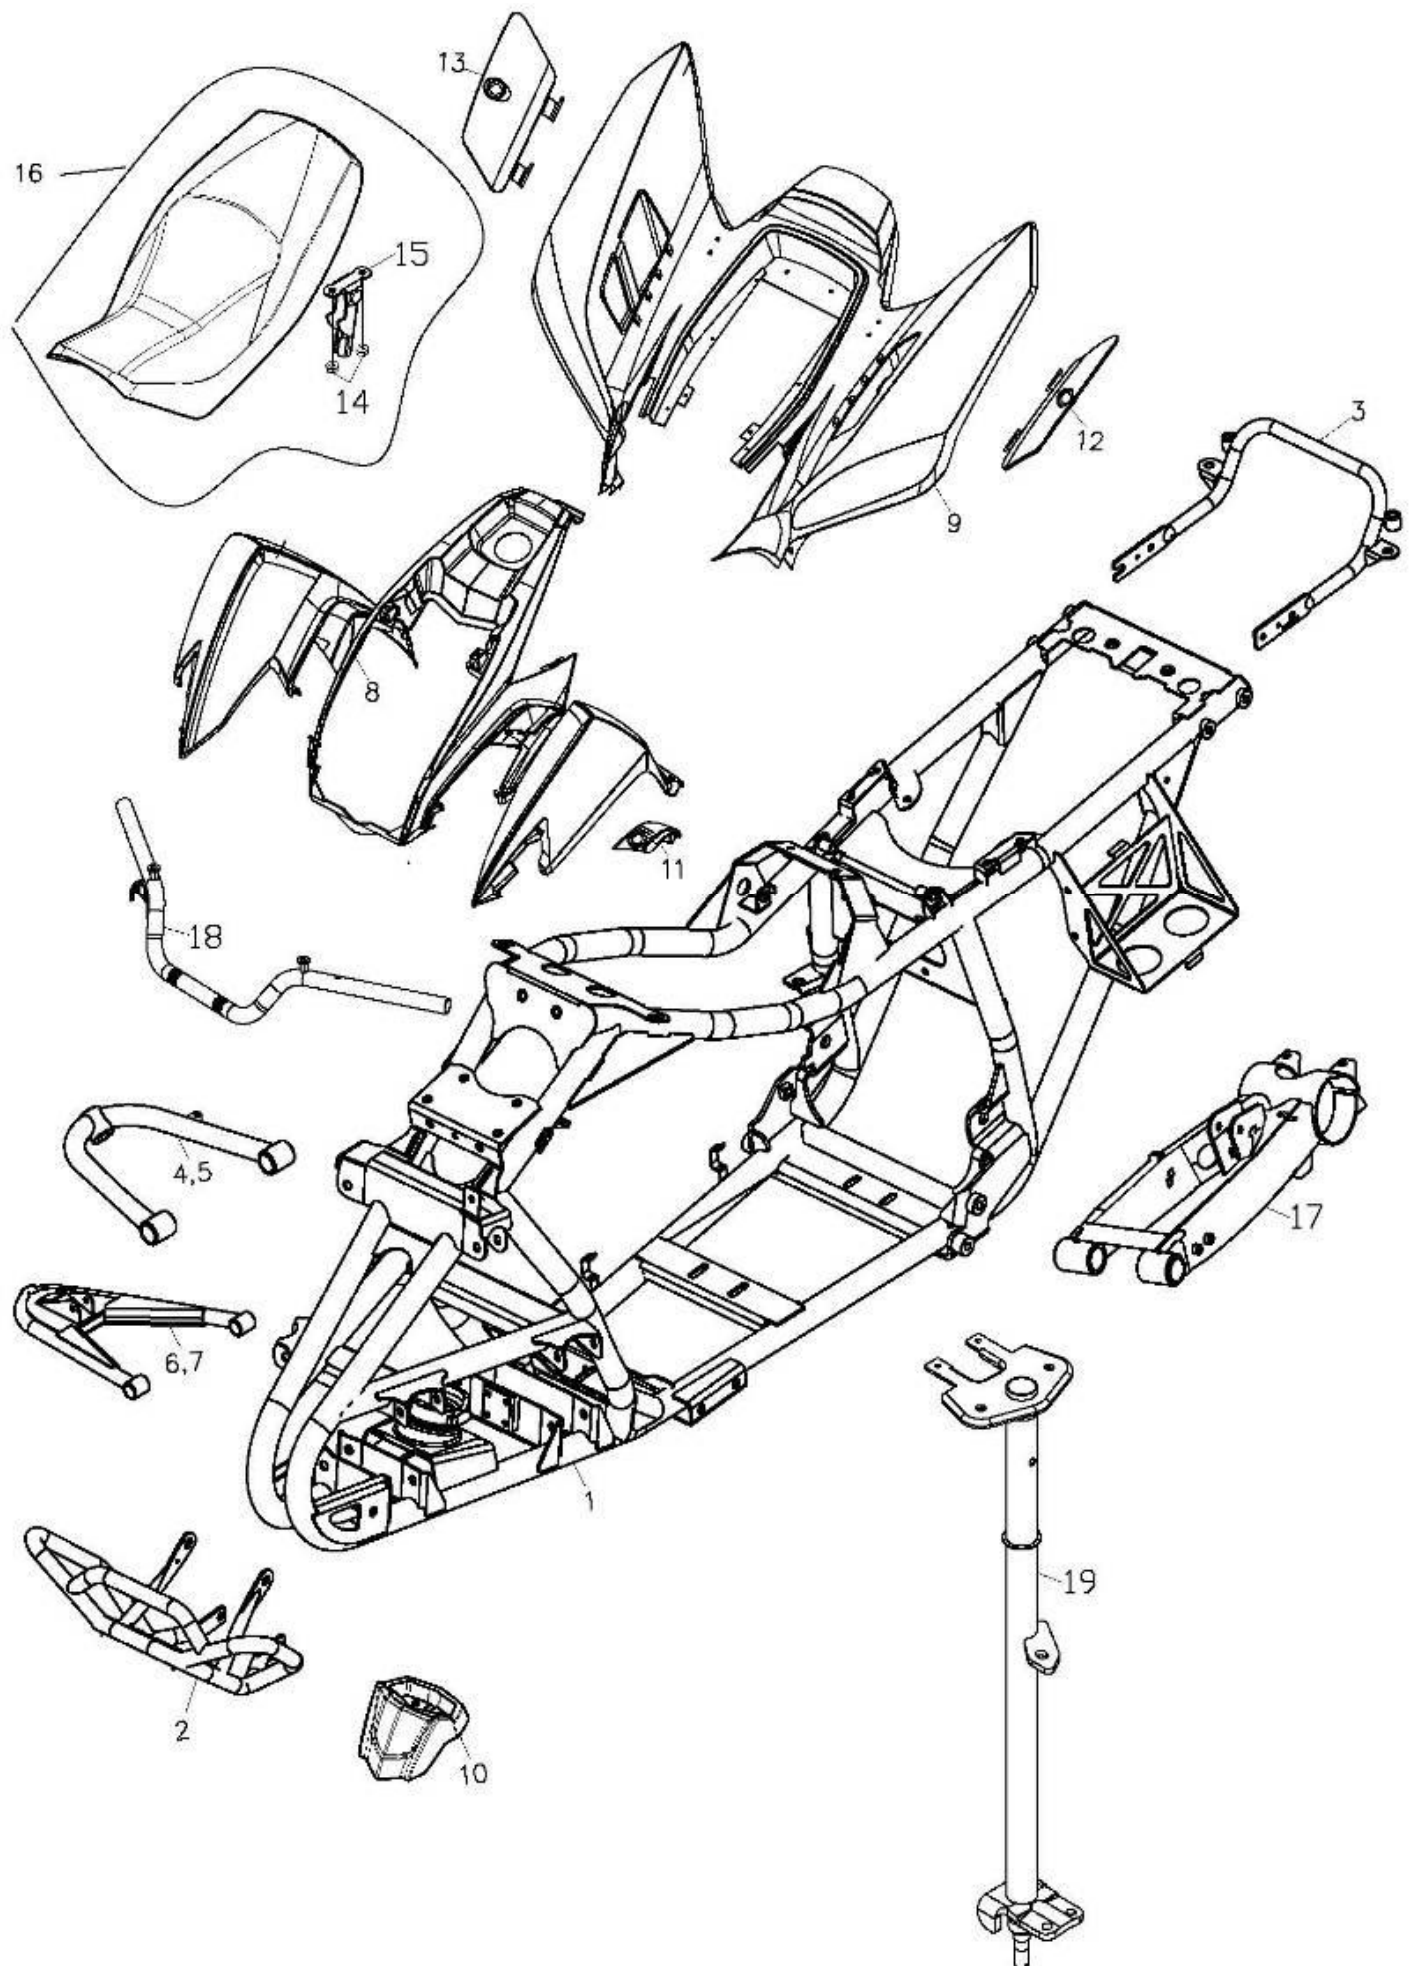

Item	Parts No.	Qt'y	Parts Name	
項次	部 品 番 號	用 量	零 件 名 稱	
1	50100-501-000BK	1	FRAME (Black)	車架整體-(黑)
	50100-501-000SL	1	FRAME(Silver)	車架整體-(銀)
2	50104-225-00AB	1	FRONT BUMPER (Black)	前防護桿-(黑)
	50104-225-00ASL	1	FRONT BUMPER (Silver)	前防護桿-(銀)
3	50105-225-001BK	1	REAR BUMPER (Black)	後防護桿-(黑)
	50105-225-001SL	1	REAR BUMPER (Silver)	後防護桿-(銀)
4	51200-501-000BK	1	R. UPPER SUSPENSION ARM (Black)	右上三腳架-(黑)
	51200-501-000SL	1	R. UPPER SUSPENSION ARM (Silver)	右上三腳架-(銀)
5	51300-501-000BK	1	L. UPPER FRONT ARM (Black)	左上三腳架(黑)
	51300-501-000SL	1	L. UPPER FRONT ARM (Silver)	左上三腳架(銀)
6	51600-501-000BK	1	R. LOWER FRONT ARM (Black)	右下三腳架(黑)
	51600-501-000SL	1	R. LOWER FRONT ARM (Silver)	右下三腳架(銀)
7	51500-501-000BK	1	L. LOWER FRONT ARM (Black)	左下三腳架(黑)
	51500-501-000SL	1	L. LOWER FRONT ARM (Silver)	左下三腳架(銀)
8	64301-903-000BK	1	FRONT COVER (Black)	前蓋(225加工)-黑
	64301-903-000OR	1	FRONT COVER (ORANGE)	前蓋(225加工)-橘
9	83400-501-001BK	1	REAR COVER (Black)	後蓋(黑)(-225-)
	83400-501-001OR	1	REAR COVER (ORANGE)	後蓋(橘)(-225-)
10	64211-501-000BK	1	SPEEDOMETER COVER (Black)	碼錶飾蓋(黑)
	64211-501-000OR	1	SPEEDOMETER COVER(ORANGE)	碼錶飾蓋(橘)
11	64339-225-000BK	1	FRONT LUGGAGE BOX COVER (Black)	前置物箱蓋(黑)
	64339-225-000OR	1	FRONT LUGGAGE BOX COVER (ORANGE)	前置物箱蓋(橘)
12	83417-225-000BK	1	L. REAR LUGGAGE BOX COVER (Black)	左後置物箱蓋(黑)
	83417-225-000OR	1	L. REAR LUGGAGE BOX COVER (ORANGE)	左後置物箱蓋(橘)
13	83418-225-000BK	1	R. REAR LUGGAGE BOX COVER (Black)	右後置物箱蓋(黑)
	83418-225-000OR	1	R. REAR LUGGAGE BOX COVER (ORANGE)	右後置物箱蓋(橘)
14	90350-06000G	2	NYLON NUT	止鬆螺帽(墨綠)
15	77201-169-000	1	SEATLATCH	座墊固定勾
16	77200-225-001	1	SEAT ASS'Y(Black/Silver)	座墊總成(黑/銀)-黑車用
	77200-225-00B	1	SEAT ASS'Y(Black)	座墊總成(雙材質)-橘車用
17	52100-501-002BK	1	SWING ARM SUB ASS'Y (Black)	後叉總成-(黑)
	52100-501-002SL	1	SWING ARM SUB ASS'Y (Silver)	後叉總成-(銀)
18	53100-501-000BK	1	HANDLE BAR (EU2) (Black)	手把整體-(黑) EU 2
	53100-501-000SL	1	HANDLE BAR (EU2) (Silver)	手把整體-(銀) EU 2
19	51109-901-001BK	1	STEERING SHAFT ASS'Y (Black)	轉向桿總成-(黑)
	51109-901-001SL	1	STEERING SHAFT ASS'Y (Silver)	轉向桿總成-(銀)